 


Kurio[®] TAB Ultra SETUP GUIDE



FOLDABLE BUILT IN STAND

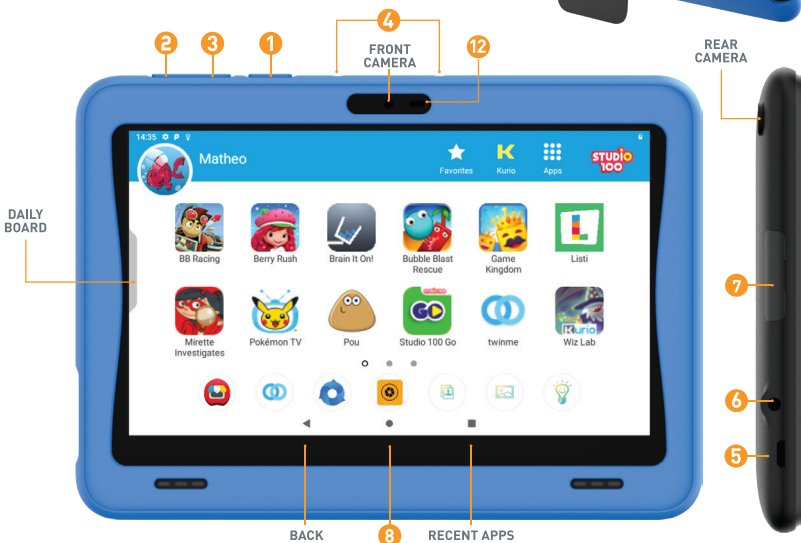

1 POWER ON/OFF/
STAND BY
2 VOLUME -

3 VOLUME +
4 MICROPHONES

5 MicroUSB/CHARGER
6 Headphones 3.5mm JACK

7 MicroSD Card slot
8 HOME Screen (Short Press)/
GOOGLE Assistant (Long Press)

IMPORTANT INFORMATION - PLEASE READ BEFORE SETTING UP YOUR KURIO

- The tablet must be set up by an adult to ensure an appropriate level of protection for all users of the device.
- To turn off your Kurio tablet correctly, press the power button until the pop up message appears on screen, and then select "Power off". Avoid switching off the device by pressing and holding the power button until the unit stops.
- Password reset: Tech support may not be able to retrieve your parental area password, so please don't forget to note it in a safe place. In case of a lost password, the tablet may have to be factory reset and all personal data will be lost.
- Please connect your Kurio tablet to wifi frequently to receive and enjoy the latest upgrades. Updates are pushed to your tablet wirelessly.
- If you encounter any issue with your device, please do not return it to the store. Please review our FAQs & troubleshooting info or contact our tech support team for help at www.kurioworld.com
Please note that part of the memory is used for internal system and for pre-installed applications.

Find more tips and information on WWW.KURIOWORLD.COM

Customer service hotline : 0080 008 250 826

Installation & Update

Before using your Kurio Tablet for the first time:

1. remove the screen's protective film
2. Charge the tablet for 3 hours, using the supplied adaptor
3. Press the power button for 5 seconds to turn the tablet on

KURIO setup

 
Setup all the following elements to make your child experience safer with the browser.

- **Parent setup:** Enter an email address and check the Terms and Conditions.
- **Password:** To protect your parental account, you must set up a password.



Setup your child profile

- Choose a name or a nickname for your child.
 - Setup the birthdate and gender.
- Then you can confirm, and the setup is complete! Once setup is complete, touch the Child Mode Activation icon to lock your tablet in Child Mode and access Kurio Genius parental settings.

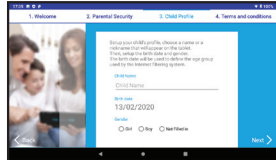

KURIO child mode interface

- **Favourites:** to add apps into the Favourites section, touch the Apps icon, then keep your finger pressed on the selected app, and drag and drop it to the "Add to favourites" icon that appears on the top of the screen.
- **Kurio Selection:** Access our pre-selected apps.
- **Apps:** Access all authorised apps.
- **Avatar Menu:** Touch to choose your avatar.
- **Wallpaper Menu:** Touch to choose your wallpaper.
- **Daily board:** when the unit is in charge, a grey bar appears on the left hand side of your screen. Touch it to skip to the daily board. Alternatively, if you leave the unit idle for a few seconds while in charge, it will automatically enter the daily board mode. In that mode, you can use the Google Assistant at any time by saying "Hey Google" or "OK google". You can also program your own photo slide show by touching the wheel icon on the top right hand corner of the screen. And you can exit the daily board back to the main screen by touching the cross icon on the top right hand corner of the screen, or by sweeping your finger from the bottom of the screen upwards, to reveal the tool bar underneath the screen, and by touching the arrow icon.
- **Google Assistant:** at any time touch briefly the small dot on the bottom of the screen to revert back to the Home Screen.
Or keep your finger on the dot for a couple of seconds to launch GOOGLE Assistant. With Google Assistant, get hands-free help that you can hear and see. Just start with "Hey Google" or "OK Google" to have your Assistant show you the answers to your questions, tell you jokes and riddles, play music, give you fun and educational facts, or translate words for you...
- **Browser icon:** touch this icon to open the browser and do an internet search.
- **Twinme icon:** touch this icon to open the Twinme free secure instant messaging and High-Definition voice/video call application.
- **Kidoz icon:** touch this icon to access the kid curated Kidoz app store.
- **Kurio Genius:** Touch to access the main menu of our Kurio Genius parental center.

 


KURIO GENIUS Overview

The KURIO GENIUS parental app is pre-installed on the main screen of the parental profile. It will give you quick access to the main settings and features of the Kurio system:

Main menu


From this screen, you can see and edit the current settings for your child's profile. Touching the titles of each section on the screen displays the submenus and lets you choose amongst the various options.

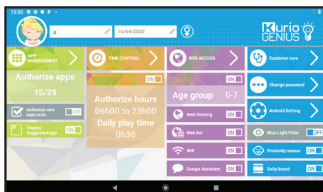


- **Child profile's information:** You can modify your child profile's name, birthday and gender at the top of the screen.
- **Application Management:** To allow or block each application installed on the tablet.
- **Time Control:** To configure hours of use per day and play time.
- **Web Access:** To allow, block or manage Internet access, use web filtering or web list.*
- **Google Assistant** is ON by default. You can turn it off at any time.
- **Blue Light filter:** is OFF by default. Switch it on to filter the amount of blue light displayed on the screen and reduce the digital eyestrain, so eyes won't feel so tired by the end of the day.
- **Proximity sensor / posture coach:** sensors are on by default. You can switch them OFF at any time.

When ON, the sensors of the tablet will detect if:

 a/ you are too close to the tablet's screen. The following picture will then appear and block any further use of the tablet. To keep using your tablet, move it away from your face / eyes.

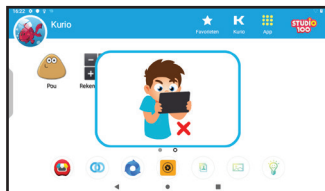


 b/ you are looking at the tablet in a bad position, while laying down on your back. The following picture will then appear and block any further use of the tablet. To keep using your tablet, sit down.

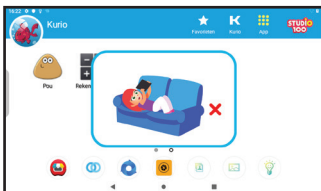

Application Management

 Authorise new apps auto: this option is turned off by default. It then means that every new app your child downloads into the tablet first needs to be approved by you in the App Management section, before your child is able to play with it. Turn this option on if you want each app your child downloads to be automatically accessible without your prior review / authorisation.

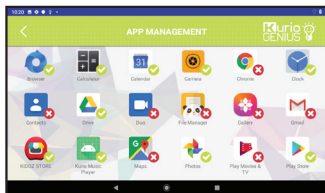

Time Control

Thanks to the Time Control menu, you can setup different time parameters to control your child's use of his apps. You may limit the access to his apps at specific times of the day and for a specific duration.

Time Control

- Hours of use: Time slot of possible use per day. Choose the time slot by dragging the cursors to define the hours within which the child will be able to access the apps.
- Play time: Maximum duration of use per day.



You can do this for the whole week but also set different settings for specific days using the tabs at the top of the screen.

 
Web Access

Our advanced filtering system allows children to access thousands of websites safely, by blocking websites that may contain inappropriate content.

Turn off web access from the KURIO GENIUS main menu to block all access to the web.

Turn on the web filtering to use predefined filters of websites according to the age of your child. (Press the web access title to access more options.)


Turn on the web list to use your personalised list of websites. (Press the web access title to access more options.)

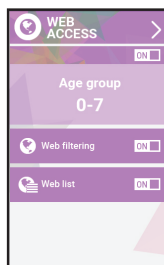

Web Access menu:

Web filtering: Use the automatic web filtering list adjusted to your child's age by default or turn on custom parameters to disable or activate the filter on specific categories of your choice. You can press "Set to current age" at any time to reset the list to default.

 Web list: Create and manage a list of websites by adding URL to allow or to block. The green tick shows the web site is authorised while the red cross means the web site is blocked.

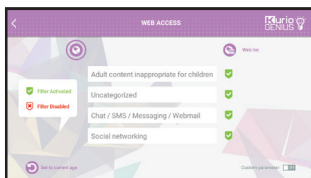

Using the micro SD card

Micro SD card can be used in 2 ways:

- **Portable storage:** micro SD card is used for files transfer such as videos, music and photos from one device to another. You may remove the card from the tablet if needed.
- **Internal storage:** if you choose this option, your micro SD card will become an internal storage for the tablet. So you can install apps to it and save app data to it.

Caution: If you use micro SD card as internal storage, the Android system will format it in a way it won't be recognized by other devices. The micro SD card shall not be removed from the device.

In case you removed the SD card, the device may not work properly. To fix it, please insert the existing micro SD card. When choosing the option "use as internal storage", the system will ask you if you want to move data to new storage. Please choose "move later".

For more details about using the micro SD card as internal storage, please check our FAQ on the website.

Tips and Recommendations

- Some applications require more processing capacity to run and the device may become warm. If this occurs, take a short break from using the device to let it cool down.
- Keep the unit clean by wiping it with a slightly damp cloth.
- The KURIO typeflip case protects your tablet in most cases, but is only intended to make the product more resistant to damage due to falls, bumps or other impact damages. Like any other electronic device, KURIO is fragile and despite the presence of the protective case, can break or be damaged from forces like dropping, banging, or being hit by other objects. Please handle with care. Broken screens and touch panels are not covered by the warranty, and no case can prevent all damage.
- Do not damage or deform the power supply USB cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.
- The power adapter & cord should be plugged in near the unit, so it is easily accessible and does not strain the cord.

Warning

- All packing materials such as internal bags, plastic collars, plastic films, screen protector film, and carton inserts are not part of this product and should be removed before handing the device over to a child. Please keep the box and this guide for further reference.
- Do not try to disassemble the unit.
- To charge KURIO, only use the power adapter supplied with your tablet.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.
- If a small part is coming out of the KURIO, don't try to remove it. Keep it away from small children.
- Never force a connector into a port of KURIO. If a connector and a port do not join with reasonable force, make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port.
- To clean up the screen, simply use a soft damp cloth. Do not use alcohol, solvent, aerosol spray or abrasive cleaners to clean your KURIO.
- The silicone bumper is designed to protect from light use and drops, but is not guaranteed to protect this delicate piece of electronics from severe drops, abuse, misuse, etc.
- The product and micro USB cable should be periodically examined to check that they are in good condition. In case of defect, the micro USB cable should not be repaired but replaced.
- MicroSD card: You can also share data using a microSD card sold separately. To insert a microSD card, pull the cover of the microSD card from the bottom side of your tablet. Make sure to move the files to and from the appropriate folders so that they can appear properly on your tablet. We recommend that you transfer your photos and videos regularly.
- In case of data transfer from your Tablet to PC or MAC, to avoid data corruption or lost data, follow the instructions in this manual. The user is responsible for any damage or loss of data, the misuse, malfunction or modification.
- If for any reason, the screen [display] is cracked or broken, immediately stop using the product.
- Do not drop the product or subject it to severe impact.
- Do not use and do not expose the device in extreme temperatures (hot or cold), dusty conditions or damp conditions. Do not expose to direct sunlight. Do not expose the device to water, liquids, rain, dust or moisture. If your tablet is exposed to liquid, power off the device immediately and clean/dry it.
- Avoid using the device near strong magnetic fields. If your tablet has been exposed to magnetic fields, please restart the device, following the instructions in this manual, if necessary.
- Please keep the box and this manual for further reference. This manual may not reflect your actual device's operation. All information is subject to change without prior modification. Please follow your actual device's operational procedures.

Tech Support & Warranty Information

- If you have any questions setting up or using your tablet, please visit www.kurioworld.com to find out more about Kurio tablet, read our FAQs, and for any technical support. All of our products have a 2 years Limited Warranty. In the unlikely event you experience any problems with your Kurio, please visit www.kurioworld.com to contact Kurio Customer Care. You may also contact Customer Care through the Customer Care/Kurio Support applications on the device. If the service representative is unable to solve the issue, he or she will provide instructions regarding how to have your Kurio serviced if it is under warranty.
- Please note that this tablet is warranted only to the original purchaser for a period of twenty-four months from the original purchase date, under normal use and service, against defective workmanship and materials. If the product is damaged due to accident, improper or unreasonable use or maintenance, such as broken screen, fall, water damage, etc., this damage is not covered by the warranty. Please still contact KURIO Customer Service for repair and replacement options, especially for a broken screen or other spare parts.
- Please visit www.kurioworld.com for the full details of KURIO's 2 years limited warranty.

Restricted Use of Electronic Devices

The use of electronic/electric devices may interfere with safe operation of some aircraft and can be restricted with some airline companies. Please check with your airline company before traveling. KURIO has an Airplane Mode. Please go into the Settings of the Android Interface to switch the tablet into Airplane Mode. All wireless connections will be turned off.

EU Declaration of conformity

Hereby, "CATALANA de INVESTIGACION y DESARROLLO de ELECTRONICA INTERACTIVE S.L.U" declares that the radio equipment type 8076 is in compliance with directives 2014/53/EU RE DIRECTIVE, 2014/30/EU EMC DIRECTIVE, 2014/35/EU LV DIRECTIVE, 2009/125/EC ERPII DIRECTIVE and 2019/1782 ERP-Ecodesign DIRECTIVE. The full text of the EU declaration of conformity is available at the following internet address: http://kurioworld.com/download/8076_CE.pdf

Charger information

Model: UC11EU

Input Voltage: 100-240 V

Input AC Frequency: 50/60 Hz

Average active efficiency: 74.23% (230V input) - 74.63% (115V input)

No-load power consumption: 0.058 W (230V input) - 0.036 W (115V input)

Output Voltage: 5.0 V DC

Output Current: 1.0 A

Output Power: 5.0 W

Recycling



Waste electrical products and batteries should not be disposed of with household waste.


Please recycle where facilities exist. Check with your local authority for recycling advice.

CAUTION – ELECTRICALLY OPERATED PRODUCT –

As with all electric products, precautions should be observed during handling and use to prevent electric shock. Rechargeable Lithium battery inside. Adult supervision is recommended. Please retain this manual for further reference.

Privacy Policy

We need you to provide us with your email address when activating your KURIO tablet and keep your email address up to date via the Parental Area to be informed of important updates and information. Your email address will never be shared with any third parties and you can unsubscribe at any time by clicking on the link provided at the bottom of every KURIO email. To read our Privacy Policy at any time, please go to www.kurioworld.com.

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN		 <p>The lightning flash with arrow head within a triangle is intended to tell the user that parts inside the product constitute a risk of electric shock to people.</p>
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.			
 <p>The exclamation point within a triangle is intended to tell the user that important operating and servicing instructions are in the papers with the appliance.</p>			
CAUTION: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE. DO NOT PLACE ANY OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ON THIS APPARATUS.			

Copyrights

Copyright © 2013-2017 KD Productions™. All rights reserved, KD GROUP™, KD™, KD INTERACTIVE™, KURIO™, KD PRODUCTIONS™, the KD™ logo, the names, the graphics, the musics and brands mentioned on this product are registered trademarks of KD GROUP™, TM & © 2015 Shortcake IP Holdings LLC or TM & © 2015 STRB, © 2014 Vector Unit Inc, © 2016 Pokémon, © 1995 - 2016 Nintendo/Creatures Inc./GAME FREAK inc, TM, ®, and character names are trademarks of Nintendo., © Studio 100, KIDZ LTD., - Empowering kids' digital life © 2012, All rights reserved., © 2016 Monkium, © PMQ software 2013-2018, © 2016 TapTapTales, © Bilingual Children's Enterprises, Inc., © Magma Mobile, All right reserved, © 2016 Alccancode Inc., © 1st Day, © Magma Mobile, All right reserved, © 2014 Caped Koala Studios, Blowing Minds SL, © Orbital Nine, 2016, © PMQ software 2013-2018, © 2018 Nordcurrent, © KD Productions Toons and Games, © Magma Mobile, All right reserved; © Paul Salame, Copyright © 2016 Toon Goggles, Inc., © Frima Studio Inc, Copyright ©2018, Twinlife, All Rights Reserved., *The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by CIDE Interactive is under license. Other trademarks and trade names are those of their respective owners. CronLab® is a CronLab Limited registered trademark; Android, Google Play, YouTube and associated logos are trademarks of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License., MicroSDHC Logo is a trademark of SD-3C, LLC.

The content and colours of this package may vary slightly from the photographs.



Warning! Permanent hearing loss may occur if earphones or headphones are used at high volume for prolonged periods of time.

For more information about KURIO, please go to www.kurioworld.com or contact:

ELDOHM

Imported by:

Eldohm B.V.

Ruimtevaart 24

3824 MX Amersfoort

The Netherlands



Made in China

Printed in China

CJB1PJ1ALAAA

©2019 CIDE Interactive SLU

C20174NL_KDNL_AW_UM_EN_01_005_200526