





Leofoto[®]
www.leofoto.com

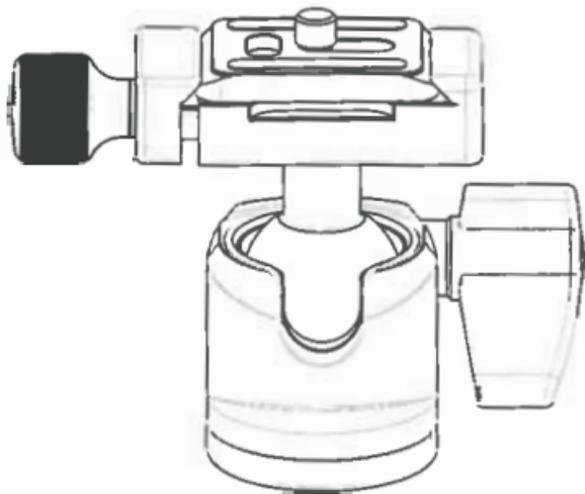

USER MANUAL

LH-25 ball head


Thank you for purchasing Leofoto LH-25 mini ball head, please read this manual so that you can use it in a correct way and protect it well!

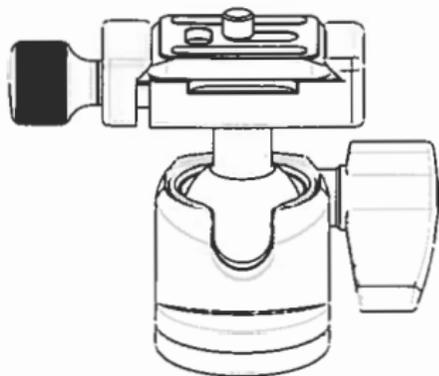

Features:

- Ball diameter : 25mm
- Height : 67mm
- Base diameter : 36mm
- Q-R standard : Arca-swiss
- Max load : 6kg
- Weight : 172g
- Mounting hole : UNC3/8"-16

Components

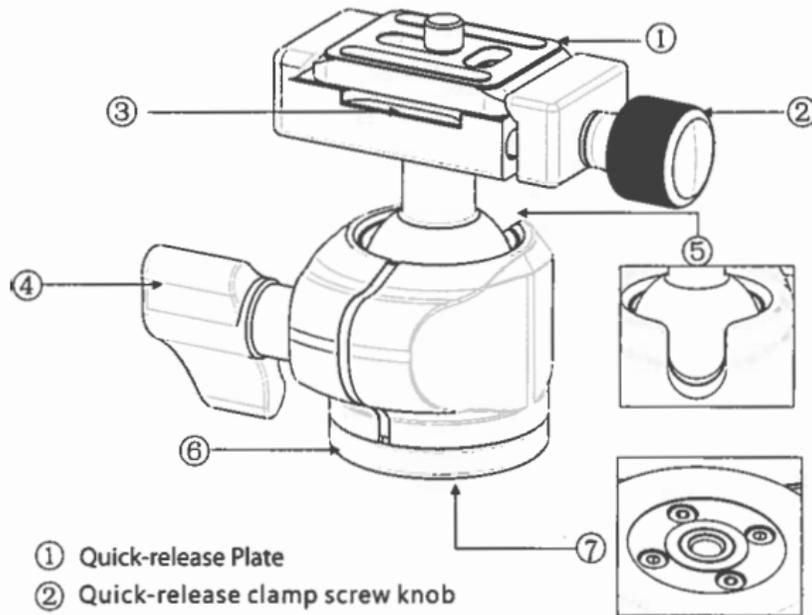

- ① Quick-release Plate
- ② Quick-release clamp screw knob
- ③ Saefty stop groove
- ④ Main lock knob (control both the ball and the panning base)
- ⑤ Single notch
- ⑥ Panning base
- ⑦ UNC3/8"-16 mounting hole

Operation

1. Mount it on a tripod or other gears with UNC 3/8"-20 stud ;
2. Loosen the clamp lock screw and mount your camera onto the clamp, then lock ;
3. Appropriately loosen the knob ;
4. Adjust the camera position ;
5. Lock the main lock knob and begin the shooting ;

Maintance

1. No extra lubrication ;
2. Prevent the ball head from getting fouled in mud, dirt or sand ;
3. Blow off the sand or dust, or wipe off with the cotton cloth ;
4. Rinse off the mud or salt water with a wet cloth and then thoroughly dry ;

Remarks

1. Working temperature : -30°C to 60°C ;
2. It is advisable to loosen the knobs when you do not use it for long periods ;
3. Every time you move the tripod or the ball head, removing or holding the camera equipments to make sure the camera security ;
4. leofoto Provides for the base a 7-day money -back guarantee and 1-year standard warranty ;

Design and specifications are subject to change without notice