



User Guide

AC2600 Dual-Band Wireless Access Point

LAPAC2600

Contents

Chapter 1 – Quick Start Guide	4
Package Contents.....	4
Physical Details.....	4
Mounting Guide	5
Chapter 2 –Quick Start.....	7
Overview.....	7
Setup Using a Web Browser	7
Setup Wizard.....	9
Chapter 3 – Configuration	13
Administration.....	13
LAN	24
Wireless.....	30
Captive Portal.....	64
ACL	76
Cluster	83
Chapter 4 - System Status	92
Status	92
Chapter 5 – Maintenance.....	103
Maintenance.....	103
Diagnostics.....	110
Appendix A - Troubleshooting	113
Overview.....	113
General Problems	113
Appendix B - About Wireless LANs.....	115
Overview.....	115
Wireless LAN Terminology	115

Appendix C - PC and Server Configuration	119
Overview.....	119
Using WEP.....	119
Using WPA2-PSK	120
Using WPA2-Enterprise.....	120
802.1x Server Setup (Windows 2000 Server).....	122
802.1x Client Setup on Windows XP	132
Using 802.1x Mode (without WPA).....	139

Chapter 1 – Quick Start Guide

Package Contents

- Linksys Wireless Access Point
- Quick Start Guide
- Ethernet Cable
- AC Power Adapter
- CD with Documentation
- Mounting Bracket
- Mounting Kit
- Ceiling Mount Back Plate
- Drilling Layout Template

Physical Details

LED behavior

LED Color	Activity	Status
Green	Blinking	System is booting.
	Solid	System is normal; no wireless devices connected.
Blue	Blinking	Software upgrade in process.
	Solid	System is normal; at least one wireless device connected.
Red	Solid	Bootup process or update failed; hard reset or service required.

Ports and Button

Power Port—Connect the AC power adapter to this port.

Note—Use only the adapter that came with your access point.

Ethernet Port 1—Use an RJ45 (CAT5e or better) cable to connect the LAPAC2600 to network devices such as routers, switches and computers. This port supports PoE+ (IEEE 802.3at). You may use the port to power LAPAC2600 by using PoE+ switch or injector.

Note—System power consumption is over 15W. Make sure your PoE switch or injector is 803.2at-capable (PoE+) and provides sufficient power. If your PoE switch or injector is not 802.3at-capable, use the provided power adapter. If the PoE and AC power adapters are connected to the LAPAC2600 at the same time, the device will get power from PoE.

Ethernet Port 2—This is a non-PoE Ethernet port. It can be used instead of Ethernet port 1 but requires an AC power adapter.

Note—LAG (Link Aggregation) is enabled by default on Ethernet Port 1 and 2. Refer to your switch configuration guide, and enable one LAG with LACP (802.3ad Link Aggregation Control Protocol) on the switch if you intend to plug two Ethernet cables into switch. In this configuration, it is highly recommended that AC power and PoE be used in tandem in case of support power failure and/or link failure. If your switch does not support LAG, you can only use one Ethernet port at a time on your LAPAC2600.

Reset Button—Press and hold this button for less than 15 seconds to power cycle device. Press and hold for longer than 15 seconds to reset the device to factory default settings.

Mounting Guide


To avoid overheating, do not install your access point if ambient temperatures exceed 104°F (40°C). Install on a flat, stable surface, near the center of your wireless coverage area making sure not to block vents on the sides of the device enclosure.

Wall Installation

1. Position drilling layout template at the desired location.
2. Drill four screw holes on the mounting surface. If your Ethernet cable is routed behind the wall, mark Ethernet cable hole as well.
3. Secure the mounting bracket on the wall with anchors and screws.
4. If your Ethernet cable is routed behind the wall, cut or drill the Ethernet cable hole you marked in Step 2. Feed the Ethernet cable through the hole.
5. Connect the Ethernet cable and/or AC power adapter to your device.
6. Slide the device into the bracket. Turn clockwise until it locks into place.

Ceiling Installation

1. Select ceiling tile for mounting and remove tile.
2. Position drilling layout template at the desired location.
3. Drill four screw holes and Ethernet cable hole on the surface of ceiling tile.
4. Place back plate on the opposite side of ceiling tile. Secure mounting bracket to the ceiling tile with flathead screw and nut. Route the Ethernet cable through the Ethernet cable hole hole.

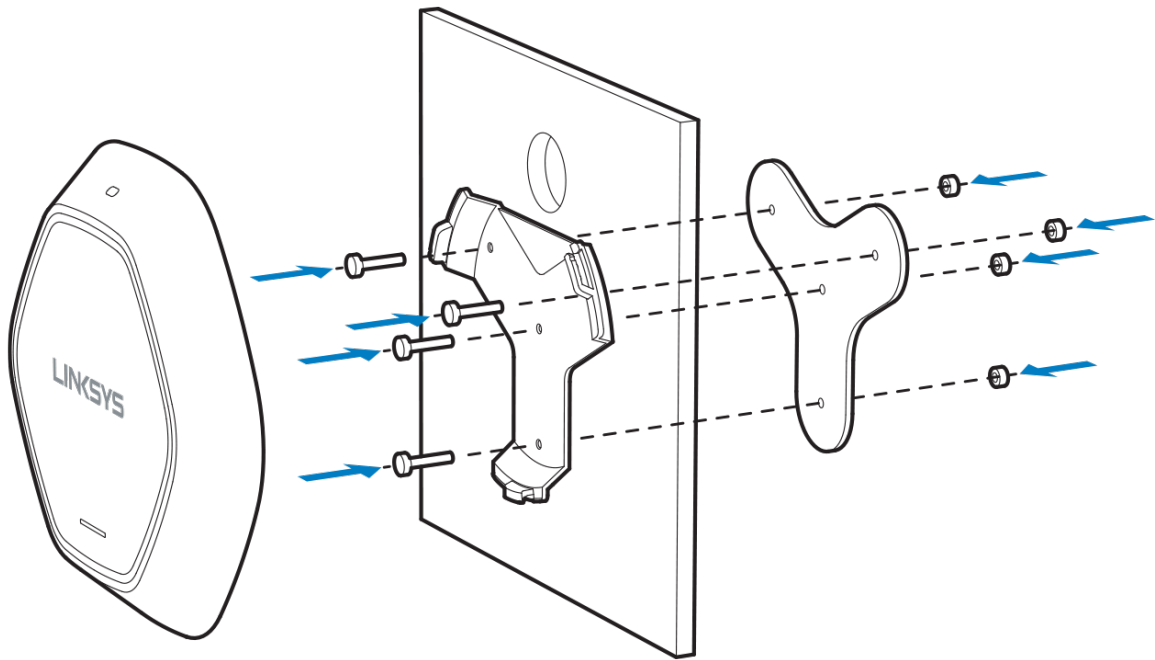

5. Replace tile in ceiling.
6. Connect the Ethernet cable and/or AC power adapter to your device
7. Slide the device into the bracket. Turn access point clockwise until it locks.

IMPORTANT—Improper or insecure mounting could result in damage to the device or personal injury. Linksys is not responsible for damages caused by improper mounting.

Chapter 2 –Quick Start

Overview

This chapter describes the setup procedure to connect the wireless access point to your LAN, and configure it as an access point for your wireless stations.

Wireless stations may also require configuration. For details, see Appendix C - Wireless Station Configuration ([p. 119](#)).

The wireless access point can be configured using a web browser.

Note—Licenses and notices for third party software used in this product may be viewed on <http://support.linksys.com/en-us/license>. Please contact <http://support.linksys.com/en-us/gplcodecenter> for questions about GPL source code requests.

Setup Using a Web Browser

Your browser must support JavaScript. The configuration program has been tested on the following browsers:

- Firefox 3.5 or later, Chrome 8 or later, Safari 5 or later
- Internet Explorer 8 or later

Setup Procedure

Make sure device is powered on before you continue setup. If LED light is off, check that AC power adapter, or PoE cable, is properly connected on both ends.


Access device's browser-based setup:

1. Use the included cable to connect the access point to your network via a network switch or router.
2. Open a web browser on a computer connected to your network. Enter the IP address of your access point. By factory default, the IP address will be assigned by a DHCP server (usually the network router). If there is no DHCP server on your network, the default IP address is 192.168.1.252/255.255.255.0.

Note—Use a computer hardwired to the same network as your access point for browser-based setup access. Access to browser-based setup via Wi-Fi is disabled by default.

3. Type in default username: "admin", and password: "admin".

4. Click **Log in** to launch the browser-based setup and follow the on-screen instructions.

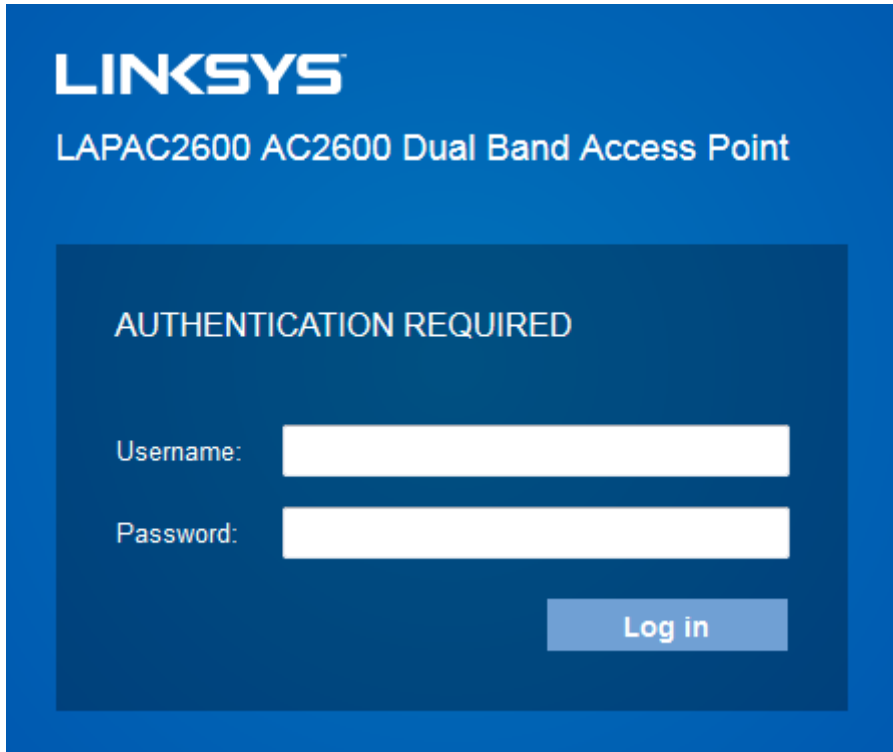

The image shows a web-based authentication interface for a Linksys LAPAC2600 AC2600 Dual Band Access Point. The background is a solid blue color. At the top, the 'LINKSYS' logo is displayed in white, followed by the device name 'LAPAC2600 AC2600 Dual Band Access Point' in a smaller white font. Below this, there is a dark blue rectangular box containing the text 'AUTHENTICATION REQUIRED' in white. Underneath, there are two white input fields: the first is labeled 'Username:' and the second is labeled 'Password:'. To the right of the password field is a light blue button with the text 'Log in' in white.

If you can't connect:


It is likely that your PC's IP address is incompatible with the wireless access point's IP address. This can happen if your LAN does not have a DHCP Server. If there is no DHCP server in your network, the access point will fall back to its default IP address: 192.168.1.252, with a network mask of 255.255.255.0.

Or, if your PC's IP address is not compatible with this, you must change your PC's IP address to an unused value in the range 192.168.1.1 ~ 192.168.1.254, with a network mask of 255.255.255.0. See Appendix A - Windows TCP/IP ([p. 113](#)) for details for this procedure.

Setup Wizard


If you are setting up the access point as a standalone device, run the Setup Wizard. If the access point will be part of a cluster – master or slave - go to *Configuration > Cluster > Settings & Status* page instead.

1. Click the *Quick Start* tab on the main menu.

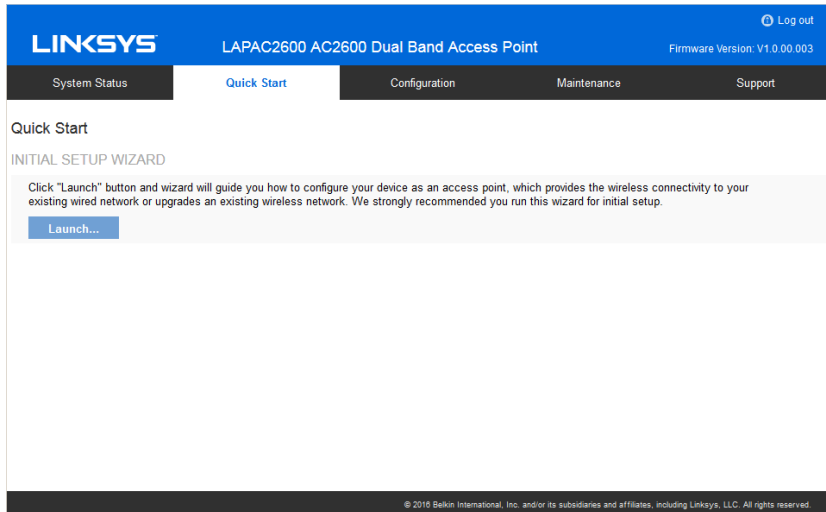

The screenshot shows the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start' (selected), 'Configuration', 'Maintenance', and 'Support'. The 'Quick Start' section is titled 'INITIAL SETUP WIZARD' and contains a 'Launch...' button. A footer note states: '© 2015 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

2. On the first screen, click **Launch...**
3. Set the password on the *Device Password* screen, if desired.

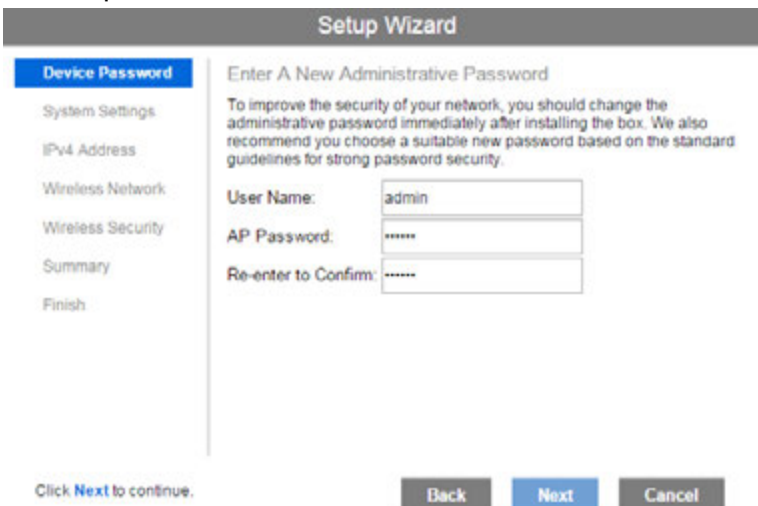

The screenshot shows the 'Setup Wizard' screen with the 'Device Password' tab selected. The main heading is 'Enter A New Administrative Password'. A message states: 'To improve the security of your network, you should change the administrative password immediately after installing the box. We also recommend you choose a suitable new password based on the standard guidelines for strong password security.' There are three input fields: 'User Name' (containing 'admin'), 'AP Password' (masked with '*****'), and 'Re-enter to Confirm' (masked with '*****'). At the bottom, there are 'Back', 'Next', and 'Cancel' buttons. A note at the bottom left says 'Click **Next** to continue.'

4. Configure the time zone, date and time for the device on *System Settings* screen.

Setup Wizard

- ✓ Device Password
- System Settings**
- IPv4 Address
- Wireless Network
- Wireless Security
- Summary
- Finish

Enter Device Name And System Time

Set a meaningful name for this box, and configure time.

Host Name:

Current Clock: 2015/11/20 Fri 13:19:39 (-08:00)

☐ Configure Manually

Date: Jan 1 2013

Time: 0 : 00 : 00

☒ Sync with NTP server Automatically

Time Zone: (GMT-08:00) Pacific Time (US & Cana...

☐ Automatically adjust clock for daylight saving changes

Start Time: First Sun Jan 00 00

End Time: First Sun Jan 00 00

Offset: 15 Minutes

NTP Server:

Click [Next](#) to continue.

Back
Next
Cancel

- On the **IPv4 Address** screen configure the IP address of the device (*Static* or *Automatic*) then click **Next**.

Setup Wizard

- ✓ Device Password
- ✓ System Settings
- IPv4 Address**
- Wireless Network
- Wireless Security
- Summary
- Finish

Enter Device IPv4 Address

Select IP address type either dynamic or static IP Address.

IP Settings: Automatic Configuration

Local IP Address: 192.168.1.126

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.1.1

Primary DNS: 192.168.1.1

Secondary DNS: 0.0.0.0

Click [Next](#) to continue.

Back
Next
Cancel

6. Set the SSID information on the *Wireless Network* screen. Click **Next**. If you want to configure more than four SSIDs, go to *Configuration > Wireless > Basic Settings*. The access point supports up to eight SSIDs per radio.

Setup Wizard

✓ Device Password

✓ System Settings

✓ IPv4 Address

Wireless Network

Wireless Security

Summary

Finish

Enter Information For Your Wireless Network

The name of wireless network, also known as an SSID, is used to identify your wireless network that your wireless devices can communicate with each other.

Select Your Radio: Radio 1

SSID	SSID Name	Enable	Broadcast	VLAN
1	LinksysSMB24G	☒	☒	1
2		☐	☐	1
3		☐	☐	1
4		☐	☐	1

Click **Next** to continue.

Back

Next

Cancel

7. On the *Wireless Security* Screen, configure the wireless security settings for the device. Click **Next**. If you are looking for security options that are not available in the wizard, go to *Configuration > Wireless Security* page. The access point supports more sophisticated security options there.

Setup Wizard

✓ Device Password

✓ System Settings

✓ IPv4 Address

✓ Wireless Network

Wireless Security

Summary

Finish

Enter Security For Your Wireless Network

Select a right security type for your wireless network. We recommend you select WPA2 Personal with AES to secure your wireless network.

Select Your Radio: Radio 1

Select Your SSID: SSID 1

Security Mode: Disabled

Click **Next** to continue.

Back

Next

Cancel

8. On the *Summary* screen, check the data to make sure they are correct and then click **Submit** to save the changes.

Setup Wizard

✓ Device Password

✓ System Settings

✓ IPv4 Address

✓ Wireless Network

✓ Wireless Security

Summary

Finish

Summary

Review your wireless security settings. If data is correct, you may like to write it down or copy and paste to a file as you need this data when you add wireless clients into your wireless network.

Select Your Radio: Radio 1

SSID	Wireless Network	Security Type	Security Key
1	LinksysSMB24G	Disabled	
2		Disabled	
3		Disabled	
4		Disabled	

Click [Submit](#) to save changes.

Back

Submit

Cancel

9. Click **Finish** to leave the wizard.

Setup Wizard

✓ Device Password

✓ System Settings

✓ IPv4 Address

✓ Wireless Network

✓ Wireless Security

Summary

Finish

Completing Your Setup Wizard

You have successfully set up your device as an access point.



Click [Finish](#) to close this wizard.

Back

Finish

Cancel

Chapter 3 – Configuration

Administration

User Accounts

Go to *Configuration > Administration* and select *User Accounts* to manage user accounts. The access point supports up to five users: one administrator and four normal users.

The screenshot shows the Linksys configuration interface for the LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar shows 'Administration' expanded, with 'User Accounts' selected. The main content area is titled 'User Accounts' and contains a 'User Account Table' with the following structure:

	User Name	User Level	New Password	Confirm New Password
☐	admin	Read/Write Access		

Below the table are 'Add' and 'Delete' buttons. At the bottom right of the table area are 'Save' and 'Cancel' buttons. The footer of the page reads: '© 2018 Ruckus International, Inc. and/or its subsidiaries and affiliates, including Linksys. All rights reserved.'

User Account Table	
User Name	Enter the User Name to connect to the access point's admin interface. User Name is effective once you save settings. User Name can include up to 63 characters. Special characters are allowed.
User Level	Only administrator account has Read/Write permission to the access point's admin interface. All other accounts have Read Only permission.
New Password	Enter the Password to connect to the access point's admin interface. Password must be between 4 and 63 characters. Special characters are allowed.
Confirm New Password	Re-enter password.

Time

Go to *Configuration > Administration* and select *Time* to configure system time of the device.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration (selected), User Accounts, Time, Log Settings, Management Access, SSL Certificate, LED, LAN, Wireless, Captive Portal, ACL, and Cluster. The main content area is titled 'Time' and displays the following settings:

- Current Clock:** 2015/04/02 Fri 08:40:43 (-08:00)
- Manually:** Unselected. Date: Jan 1, 2015. Time: 08:40:43.
- Sync with NTP server Automatically:** Selected. Time Zone: (GMT-08:00) Pacific Time (US & Canada): Tijuana.
- Automatically adjust clock for daylight saving changes:** Unselected.
- Start Time:** First Sun Jan 00 00:00.
- End Time:** First Sun Jan 00 00:00.
- Offset:** 60 Minutes.
- NTP Server 1:** time.nist.gov (Max 128 characters).
- NTP Server 2:** www.nist.gov (Max 128 characters).

At the bottom right of the configuration area are 'Save' and 'Cancel' buttons. The footer of the page reads: '© 2015 Linksys International, Inc. and/or its subsidiaries and affiliates. Linksys, iLSE, All rights reserved.'

Time	
Current Time	Display current date and time of the system.
Manually	Set date and time manually.
Automatically	When enabled (default setting) the access point will get the current time from a public time server.
Time Zone	Choose the time zone for your location from the drop-down list. If your location observes daylight saving time, enable <i>Automatically adjust clock for daylight saving changes</i> .
Start Time	Specify the start time of daylight saving.
End Time	Specify the end time of daylight saving.
Offset	Select the adjusted time of daylight saving.
NTP	
NTP Server 1	Enter the primary NTP server. It can be an IPv4 address or a domain name. Valid characters include alphanumeric characters, "_", "-", and ".".Maximum length is 64 characters.
NTP Server 2	Enter the secondary NTP server. It can be an IPv4 address or a domain name. Valid characters include alphanumeric characters, "_", "-", and ".".Maximum length is 64 characters.

Log Settings

Go to *Configuration > Administration* and select *Log Settings* to configure logs. Logs record various types of activity on the access point. This data is useful for troubleshooting, but enabling all logs will generate a large amount of data and adversely affect performance.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration (selected), User Accounts, Time, Log Settings (highlighted), Management Access, SSL Certificate, LED, LAN, Wireless, Captive Portal, ACL, and Cluster. The main content area is titled 'Log Settings' and contains the following sections:

- Log Types:** Four checkboxes are present: 'Unauthorized Login Attempt', 'Authorized Login', 'System Error Messages', and 'Configuration Changes'. All are currently unchecked.
- Email Alert:** A section for configuring email notifications. It includes:
 - 'E-Mail Alert' checkbox (unchecked) and 'Enable' checkbox (unchecked).
 - 'SMTP Server' text field (empty) with a '(Max 64 characters)' hint.
 - 'Data Encryption(TLSv1)' checkbox (unchecked) and 'Enable' checkbox (unchecked).
 - 'Port' text field (value: 25) with a '(Range: 1-65535, Default: 25)' hint.
 - 'Username' text field (empty) with a '(Max 32 characters)' hint.
 - 'Password' text field (empty) with a '(Max 32 characters)' hint.
 - 'E-Mail Address for Logs' text field (empty) with a '(Max 64 characters)' hint.
 - 'Log Queue Length' text field (value: 20) with a 'entries (Range: 1-1000, Default: 20)' hint.
 - 'Log Time Threshold' text field (value: 600) with a 'seconds (Range: 1-600, Default: 600)' hint.
- Syslog Notification:** A section for configuring syslog notifications. It includes:
 - 'Syslog Notification' checkbox (unchecked) and 'Enable' checkbox (unchecked).
 - 'IP Address Type' dropdown menu (set to 'IPv4').
 - 'Server IP Address' text field (empty) with a hint to 'Enter IP address'.

At the bottom right of the configuration area are 'Save' and 'Cancel' buttons. A footer at the very bottom of the page reads: '© 2014 Belkin International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.'

Log Types	
Log Types	Select events to log. Checking all options increase the size of the log, so enable only events you believe are required.
Email Alert	
Email Alert	Enable email alert function.
SMTP Server	Enter the e-mail server that is used to send logs. It can be an IPv4 address or a domain name. Valid characters include alphanumeric characters, "_", "-", "." and ".". Maximum length is 64 characters.
Data Encryption	Enable if you want to use data encryption.
Port	Enter the port for the SMTP server. The port is a value from 1 to 65535 and default is 25.
Username	Enter the Username to login to your SMTP server. The Username can include up to 32 characters. Special characters are allowed.
Password	Enter the Password to login to your SMTP server. The Password can include up to 32 characters. Special characters are allowed.
Email Address for Logs	Enter the email address the log messages are to be sent to. Valid characters include alphanumeric characters, "_", "-", ".", "." and "@". Maximum length is 64 characters.
Log Queue Length	Enter the length of the queue: up to 500 log messages. The default is 20 messages. When messages reach the set length the queue will be sent to the specified email address.
Log Time Threshold	Enter the time threshold (in seconds) used to check if the queue is full. It's a value from 1 to 600 and default is 600 seconds.
Syslog	
Syslog Notification	Enable Syslog notification.
IP Type	Select the IP type of the syslog server: IPv4 or IPv6.
Server IP Address	Enter the IPv4 or IPv6 address of syslog server here.

Management Access

Go to *Configuration > Administration* and select *Management Access* page to configure the management methods of the access point.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration (selected), User Accounts, Time, Log Settings, Management Access (highlighted), SSL Certificate, LED, LAN, Wireless, Captive Portal, ACL, and Cluster. The main content area is titled 'Management Access' and contains two sections: 'WEB ACCESS' and 'SNMP SETTINGS'.

WEB ACCESS

Web Access

HTTP: ☒ Enable
HTTP Port: 80 (Range: 80, 1024-65535 Default: 80)
HTTP to HTTPS Redirect: ☐ Enable
HTTPS: ☒ Enable
HTTPS Port: 443 (Range: 443, 1024-65535 Default: 443)
From Wireless: ☐ Enable

Access Control

Access Control: ☐ Enable

IPv4 Address 1: [][][][]
IPv4 Address 2: [][][][]
IPv4 Address 3: [][][][]
IPv4 Address 4: [][][][]
IPv6 Address 1: [][][][][][][][]
IPv6 Address 2: [][][][][][][][]
IPv6 Address 3: [][][][][][][][]
IPv6 Address 4: [][][][][][][][]

SNMP SETTINGS

Basic Settings

SNMP: ☐ Enable
Contact: [] (Range: 1-32 characters)
Location: [] (Range: 1-32 characters)

Web Access	
HTTP	HTTP (HyperText Transfer Protocol) is the standard for transferring files (text, graphic images and other multimedia files) on the World Wide Web. Enable to allow Web access by HTTP protocol.
HTTP Port	Specify the port for HTTP. It can be 80 (default) or from 1024 to 65535.
HTTP to HTTPS Redirect	Enable to redirect Web access of HTTP to HTTPS automatically. This field is available only when HTTP access is disabled.
HTTPS	HTTPS (Hypertext Transfer Protocol Secure) can provide more secure communication with the SSL/TLS protocol, which support data encryption to HTTP clients and servers. Enable to allow Web access by HTTPS protocol.
HTTPS Port	Specify the port for HTTPS. It can be 443 (default) or from 1024 to 65535.
From Wireless	Enable wireless devices to connect to access point's admin page. Disabled by default.
Access Control	By default, no IP addresses are prohibited from accessing the device's admin page. You can enable access control and enter specified IP addresses for access. Four IPv4 and four IPv6 addresses can be specified.
SNMP Settings	
SNMP	Simple Network Management Protocol (SNMP) is a network monitoring and management protocol. Enable or disable SNMP function here. Disabled by default.
Contact	Enter contact information for the access point. The contact includes 1 to 32 characters. Special characters are allowed.

Location	Enter the area or location where the access point resides. The location includes 1 to 32 characters. Special characters are allowed.
SNMP v1/v2 Settings	
Get Community	Enter the name of Get Community. Get Community is used to read data from the access point and not for writing data into the access point. Get Community includes 1 to 32 characters. Special characters are allowed.
Set Community	Enter the name of Set Community. Set Community is used to write data into the access point. The Set Community includes 1 to 32 characters. Special characters are allowed.
SNMP v3 Settings	
SNMP v3 Settings	Configure the SNMPv3 settings if you want to use SNMPv3. Username: Enter the username. It includes 0 to 32 characters. Special characters are allowed. Authentication Protocol: None or HMAC-MD5. Authentication Key: 8 to 32 characters. Special characters are allowed. Privacy Protocol: None or CBC-DES. Privacy Key: 8 to 32 characters. Special characters are allowed.
Access Control	
Access Control	When SNMP is enabled, any IP address can connect to the access point MIB database through SNMP. You can enable access control to allow specified IP addresses. Two IPv4 and two IPv6 addresses can be specified.
SNMP Trap	
Trap Community	Enter the Trap Community server. It includes 1 to 32 characters. Special characters are allowed.
Trap Destination	Two Trap Community servers are supported: can be IPv4 or IPv6.

SSL Certificate

Go to *Configuration > Administration* and select *SSL Certificate* to manage the SSL certificate used by HTTPS.

The screenshot shows the Linksys configuration interface for a LARAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration (selected), User Accounts, Time, Log Settings, Management Access, SSL Certificate, LED, LAN, Wireless, Captive Portal, ACL, and Cluster. The main content area is titled 'SSL Certificate' and contains two sections: 'EXPORT/INSTALL TO/FROM LOCAL PC' and 'EXPORT/INSTALL TO/FROM TFTP SERVER'. The first section has buttons for 'Export Certificate' and 'Install Certificate', with a file selection area below. The second section has buttons for 'Export' and 'Install', with input fields for 'Destination File', 'TFTP Server', 'Source File', and 'TFTP Server'.

LINKSYS LARAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.000

System Status Quick Start Configuration Maintenance Support

Administration User Accounts Time Log Settings Management Access SSL Certificate LED LAN Wireless Captive Portal ACL Cluster

SSL Certificate

EXPORT/INSTALL TO/FROM LOCAL PC

Export SSL Certificate

Export Certificate

Install Certificate

Please select the certificate file

Choose File No file chosen

Install Certificate

EXPORT/INSTALL TO/FROM TFTP SERVER

Export SSL Certificate to TFTP Server

Destination File:

TFTP Server:

Export

Install SSL Certificate from TFTP Server

Source File:

TFTP Server:


Install

© 2018 Ruckus International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

Export/Restore to/from Local PC	
Export SSL Certificate	Click to export the SSL certificate.
Install Certificate	Browse to choose the certificate file. Click Install Certificate .
Export to TFTP Server	
Destination File	Enter the name of the destination file.
TFTP Server	Enter the IP address for the TFTP server. Only support IPv4 address here.
Export	Click to export the SSL certificate to the TFTP server.
Restore from TFTP Server	
Source File	Enter the name of the source file.
TFTP Server	Enter the IP address for the TFTP server. Only support IPv4 address here.
Install	Click to install the file to the device.

LED

Go to *Configuration > Administration* and select LED to enable or disable the LED on the top cover of LACAP2600.

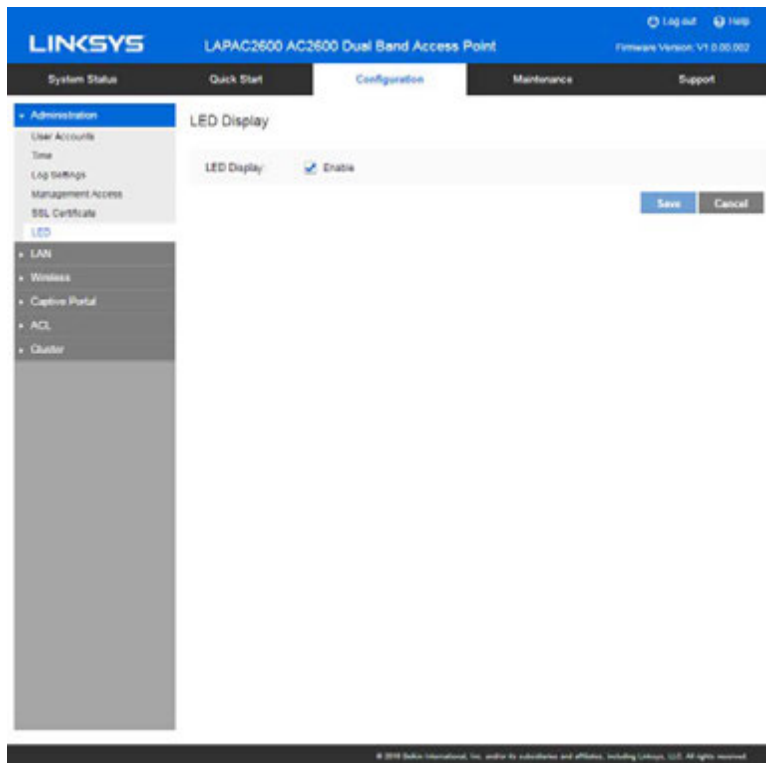

LED

LED Display

If disabled, the LED will be off even when the access point is working. By default, LED is enabled (on).

LAN

Network Setup

Go to *Configuration > LAN > Network Setup* to configure basic device settings, VLAN settings and settings for the LAN interface, including static or dynamic IPv4/IPv6 address assignment.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar shows a tree view with 'Administration' expanded, containing 'LAN' (selected), 'Network Setup', 'Advanced', 'Wireless', 'Captive Portal', 'ACL', and 'Queue'. The main content area is titled 'Network Setup' and contains two sections: 'SYSTEM AND VLAN SETUP' and 'IP INTERFACE SETUP'. In the 'SYSTEM AND VLAN SETUP' section, the 'Host Name' is '1025555' (range 1-15 characters). The 'VLAN' section has 'VLAN' set to 'Enable' (unchecked), 'Untagged VLAN' set to 'Enable' (checked), 'Untagged VLAN ID' set to '1' (range 1-4094, default 1), and 'Management VLAN' set to '1' (range 1-4094, default 1). The 'IP INTERFACE SETUP' section has 'IPv4' settings with 'IP Settings' set to 'Automatic Configuration' (dropdown), 'Local IP Address' '10.180.91.110', 'Subnet Mask' '255.255.255.0', 'Default Gateway' '10.180.91.249', 'Primary DNS' '10.180.91.249', and 'Secondary DNS' '0.0.0.0'. The 'IPv6' section has 'IPv6' set to 'Enable' (unchecked), 'IP Settings' set to 'Static IP Address' (dropdown), and fields for 'Local IPv6 Address', 'IPv6 Address Prefix Length' (range 0-128), 'Default IPv6 Gateway', 'Primary IPv6 DNS', and 'Secondary IPv6 DNS'.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.00.002

System Status Quick Start **Configuration** Maintenance Support

Administration
LAN
Network Setup
Advanced
Wireless
Captive Portal
ACL
Queue

Network Setup

SYSTEM AND VLAN SETUP

Host Name
Host Name: 1025555 (Range: 1-15 characters)

VLAN
VLAN: ☐ Enable
Untagged VLAN: ☒ Enable
Untagged VLAN ID: 1 (Range: 1-4094, Default: 1)
Management VLAN: 1 (Range: 1-4094, Default: 1)

IP INTERFACE SETUP

IPv4

IP Settings: Automatic Configuration
Local IP Address: 10.180.91.110
Subnet Mask: 255.255.255.0
Default Gateway: 10.180.91.249
Primary DNS: 10.180.91.249
Secondary DNS: 0.0.0.0

IPv6

IPv6: ☐ Enable
IP Settings: Static IP Address
Local IPv6 Address:
IPv6 Address Prefix Length: (Range: 0-128)
Default IPv6 Gateway:
Primary IPv6 DNS:
Secondary IPv6 DNS:

© 2016 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

TCP/IP	
Host Name	Assign a host name to this access point. Host name consists of 1 to 15 characters. Valid characters include A-Z, a-z, 0-9 and -. Character cannot be first and last character of hostname and hostname cannot be composed of all digits.
VLAN	Enables or disables VLAN function.
Untagged VLAN	Enables or disables VLAN tagging. If enabled (default), traffic from the LAN port is untagged when the following conditions are met: 1) VLAN ID is equal to Untagged VLAN ID and 2) untagged traffic can be accepted by LAN port. If disabled, traffic from the LAN port is always tagged and only tagged traffic can be accepted from LAN port. By default, all traffic on the access point uses VLAN 1, the default untagged VLAN. All traffic will be untagged until you disable the untagged VLAN, change the untagged traffic VLAN ID, or change the VLAN ID for a SSID.
Untagged VLAN ID	Specifies a number between 1 and 4094 for the untagged VLAN ID. The default is 1. Traffic on the VLAN that you specify in this field is not be tagged with a VLAN ID when forwarded to the network. Untagged VLAN ID field is active only when untagged VLAN is enabled. VLAN 1 is the default for both untagged VLAN and management VLAN.
Management VLAN	The VLAN associated with the IP address you use to connect to the access point. Provide a number between 1 and 4094 for the Management VLAN ID. The default is 1.
IPv4/v6	
IP Settings	Select Automatic Configuration or Static IP Address.
IP Address	Enter an unused IP address from the address range used on your LAN.
Subnet Mask	Enter the subnet mask for the IP address above.
Default Gateway	Enter the gateway for the IP address above.
Primary DNS	Enter the DNS address.
Secondary DNS	Optional. If entered, this DNS will be used if the Primary DNS does not respond.

Advanced

Go to *Configuration > LAN > Advanced* to configure advanced network settings of the access point.

The screenshot displays the Linksys Advanced configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes links for System Status, Quick Start, Configuration, Maintenance, and Support. The left sidebar shows the navigation menu with options like Administration, LAN, Network Setup, Advanced, Wireless, Captive Portal, ACL, and Cluster. The main content area is titled 'Advanced' and contains several sections:

- PORT SETTINGS**
 - Auto Negotiation: ☒ Enable (Operational Auto Negotiation: Enabled)
 - Port Speed: 100M (Operational Port Speed: 1000 Mbps)
 - Duplex Mode: Full (Operational Duplex Mode: Full)
 - Flow Control: ☐ Enable
- 802.1X SUPPLICANT**
 - 802.1X Supplicant: ☐ Enable
 - Authentication Type: ☒ Authentication via MAC Address (or ☐ Authentication via Name and Password)
 - Name: (Range: 1-63 characters)
 - Password: (Range: 4-63 characters)
- DISCOVERY SETTINGS**
 - Bonjour: ☒ Enable
 - LLDP: ☒ Enable
 - LLDP-MED: ☒ Enable
- IGMP/MLD SNOOPING**
 - IGMP Snooping: ☒ Enable
 - MLD Snooping: ☒ Enable

At the bottom right of the configuration area are 'Save' and 'Cancel' buttons. The footer of the page contains the copyright notice: '© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates. All rights reserved.'

Port Settings	
Auto Negotiation	If enabled, Port Speed and Duplex Mode will become grey and cannot be configured. If disabled, Port Speed and Duplex Mode can be configured. Note—LAG (Link Aggregation) is enabled by default on Ethernet port 1 and 2. It is highly recommended you keep auto negotiation enabled on both sides of an aggregate link. Enable LACP (Link Aggregation Control Protocol) on this specific LAG interface when you create LAG interface on switch. If you have to disable auto negotiation, ensure link speed and duplex (Full) are identical on both sides.
Operational Auto Negotiation	Current Auto Negotiation mode of the Ethernet port.
Port Speed	Select the speed of the Ethernet port. Available only when Auto Negotiation is disabled. The option can be 10M, 100M or 1000M (default).
Operational Port Speed	Displays the current port speed of the Ethernet port.
Duplex Mode	Select the duplex mode of the Ethernet port. Available only when Auto Negotiation is disabled. The option can be Half or Full (default).
Operational Duplex Mode	Displays the current duplex mode of the Ethernet port.
Flow Control	Enable or disable flow control of the Ethernet port.

802.1x Supplicant	
802.1x Supplicant	Enable if your network requires this access point to use 802.1X authentication in order to operate.
Authentication	This feature supports following two kinds of authentication: • Authentication via MAC Address Select this if you want to use MAC Address for authentication. The access point uses lowercase MAC address for Name and Password, like xxxxxxxxxxxx. • Authentication via Name and Password Select this if you want to use name and password for authentication. Name - Enter the login name. The name includes 1 to 63 characters. Special characters are allowed. Password - Enter the desired login password. The password includes 4 to 63 characters. Special characters are allowed.
Discovery Settings	
Bonjour	Enable if administrator wants the access point to be discovered by Bonjour enabled devices automatically. If VLAN is enabled, the discovery packets will be sent out via management VLAN only. The access point supports http and https services.
LLDP	Enable if administrator wants the access point to be discovered by switch by LLDP protocol. Information such as product name, device name, firmware version, IP address, MAC address and so on will be advertised.
LLDP-MED	Enable if administrator wants the access point to be discovered by switch by LLDP-MED protocol. Information such as product name, device name, firmware version, IP address, MAC address and so on will be advertised.

IGMP/MLD Snooping	
IGMP Snooping	IGMP (Internet Group Management Protocol) is a communications protocol used by hosts and adjacent routers on IP networks to establish multicast group memberships. IGMP is an integral part of IP multicast. IGMP snooping streamlines multicast traffic handling by examining (snooping) IGMP membership report messages from interested hosts, multicast traffic is limited to the subset of ports on which the hosts reside. IGMP snooping is enabled by default in the access point The access point supports IGMPv1, IGMPv2 and IGMPv3 in IGMP Snooping.
MLD Snooping	MLD (Multicast Listener Discovery) is a component of the Internet Protocol Version 6 (IPv6) suite. MLD is used by IPv6 routers for discovering multicast listeners on a directly attached link, much like IGMP is used in IPv4. Multicast Listener Discovery (MLD) Snooping provides multicast containment by forwarding traffic only to those clients that have MLD receivers for a specific multicast group (destination address). The access point maintains the MLD group membership information by processing MLD reports and generating messages so traffic can be forwarded to ports receiving MLD reports. MLD snooping is enabled by default in the access point The access point supports MLDv1 and MLDv2 in MLD Snooping.

Wireless

Basic Settings

Go to *Configuration > Wireless > Basic Settings* to configure your wireless radio and SSIDs. Advanced wireless settings such as Band Steering, Channel Bandwidth, are on the *Advanced Settings* screen.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless (selected), Basic Settings, Security, Rogue AP Detection, Scheduler, Bandwidth Allocation, Connection Control, Rate Limit, QoS, WDS, Meshgroup Bridge, Advanced Settings, Captive Portal, ACL, and QoS. The main content area is titled 'Basic Wireless Settings' and contains the following sections:

- Select Your Radio:** A dropdown menu showing 'Radio 1'.
- Radio Settings:**
 - Enable Radio:** A checkbox labeled 'Enable' which is checked.
 - Network Mode:** A dropdown menu showing '802.11n'.
 - Wireless Channel:** A dropdown menu showing 'Auto'.
- SSID Settings:** A table with 8 rows for SSID 1 through SSID 8. Each row has columns for SSID Name, Enable, Broadcast, Isolation, 802.11n, VLAN, and Max Clients.

SSID	SSID Name	Enable	Broadcast	Isolation	802.11n	VLAN	Max Clients
SSID 1	Linksys2600	☒	☒	☐	☐	1	0
SSID 2		☐	☐	☐	☐	1	0
SSID 3		☐	☐	☐	☐	1	0
SSID 4		☐	☐	☐	☐	1	0
SSID 5		☐	☐	☐	☐	1	0
SSID 6		☐	☐	☐	☐	1	0
SSID 7		☐	☐	☐	☐	1	0
SSID 8		☐	☐	☐	☐	1	0

At the bottom right of the table are 'Save' and 'Cancel' buttons. The footer of the page reads: '© 2014 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

Basic Wireless Settings	
Wireless Radio	Select the wireless radio from the list. Radio 1 is for 2.4 GHz, and Radio 2 is for 5 GHz.
Enable Radio	Enable or disable the wireless radio.
Wireless Mode	Select the desired option for radio 1: G only - allow connection by 802.11G wireless stations only. N only - allow connection by 802.11N wireless stations only. B/G-Mixed - allow connection by 802.11B and G wireless stations only. B/G/N-Mixed (Default) - allow connections by 802.11N, 802.11B and 802.11G wireless stations. Select the desired option for radio 2: N/A-Mixed - allow connection by 802.11A and N wireless stations only. N only - allow connection by 802.11N wireless stations only. AC only - allow connection by 802.11AC wireless stations only. A/N/AC-Mixed - allow connection by 802.11A, 802.11N and 802.11AC wireless stations.
Wireless Channel	Select wireless channel of the radio. If Auto is selected, the access point will select the best available channel when device boots up. If you experience lost connections and/or slow data transfers, manually change the channel until you find which channel is best.

SSID Settings	
SSID Name	Enter the desired SSID Name. Each SSID must have a unique name. The name includes 1 to 32 characters.
Broadcast	Enable or disable the broadcast of the SSID. When the access point does not broadcast its SSID, the network name is not shown in the list of available networks on a client station. Instead, you must enter the exact network name manually into the wireless connection utility on the client so that it can connect.
Isolation	Enable or disable isolation among clients of the SSID. If enabled, wireless clients cannot communicate with others in the same SSID. It is disabled by default.
802.11k	Enable or disable 802.11k of the SSID. The 802.11k protocol provides mechanisms for APs and clients to measure the available radio resources dynamically. In an 802.11k enabled network, APs and clients can send neighbor reports, beacon reports, and link measurement reports to each other. This allows the APs and clients to take appropriate connection actions for next hop if client has weak connection to current AP.
VLAN ID	Enter the VLAN ID of the SSID. Used to tag packets which are received from the wireless clients of the SSID and sent from Ethernet or WDS interfaces. Applicable only when VLAN function is enabled. VLAN function can be configured in Configuration -> LAN -> Network Setup screen.
Max Clients	Enter the number of clients that can connect to the SSID. The range is from 0 to 32 and 0 means no limit.

Security

Go to *Configuration > Wireless > Security* to configure security settings of SSIDs to provide data protection over the wireless network.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless, Basic Settings, Security, Rogue AP Detection, Scheduler, Scheduler Association, Connection Control, Rate Limit, QoS, WDS, Wireless Bridge, Advanced Settings, Captive Portal, ACL, and Cluster. The 'Wireless' category is selected, and the 'Security' sub-option is active. The main content area is titled 'Wireless Security' and contains a 'Select Your SSID' section with a dropdown menu showing 'Radio 1 SSID 1 (LinksysSMB24G)'. Below this is a 'Security Settings' section with a 'Security Mode' dropdown menu showing 'Disabled'. 'Save' and 'Cancel' buttons are at the bottom right of the form.

Security	
Select SSID	Select the desired SSID from the drop-down list.
Security Mode	Select the desired security method from the list.

Security Mode

- Disabled - No security. Anyone using the correct SSID can connect to your network.
- WEP - The 802.11b standard. Data is encrypted before transmission, but the encryption system is not very strong.
- WPA2-Personal - This is a further development of WPA-PSK, and offers even greater security, using the AES (Advanced Encryption Standard) method.
- WPA/WPA2-Personal - This method, sometimes called Mixed Mode, allows clients to use either WPA-Personal (with TKIP) or WPA2-Personal (with AES).

- WPA2-Enterprise - Requires a RADIUS Server on your LAN to provide the client authentication according to the 802.1x standard. Data transmissions are encrypted using the WPA2 standard.

If this option is selected:

- This access point must have a client login on the RADIUS Server.
- Each user must authenticate on the RADIUS Server. This is usually done using digital certificates.
- Each user's wireless client must support 802.1x and provide the RADIUS authentication data when required.
- All data transmission is encrypted using the WPA2 AES standard. Keys are automatically generated, so no key input is required.
- WPA/WPA2-Enterprise - This method, sometimes called Mixed Mode, allows clients to use either WPA-Enterprise (with TKIP) or WPA2-Enterprise (with AES).
- RADIUS - RADIUS mode utilizes RADIUS server for authentication and dynamic WEP key generation for data encryption.

WEP

This is the 802.11b standard. Data is encrypted before transmission, but the encryption system is not very strong.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The 'Configuration' tab is selected, and the 'Wireless Security' section is active. The 'Security Mode' is set to 'WEP'. The 'Authentication Type' is 'Open System'. The 'Default Transmit Key' is set to '1'. The 'WEP Encryption' is set to '64-bit (10 hex digits)'. The 'Passphrase' field is empty, with a 'Generate' button next to it. Below the passphrase field, there are four 'Key' fields (Key 1, Key 2, Key 3, Key 4), each with a '(10 HEX characters)' label. The 'Save' and 'Cancel' buttons are at the bottom right.

WEP	
Authentication	Select Open System or Shared Key. All wireless stations must use the same method.
Default Transmit Key	Select a transmit key.
WEP Encryption	Select an encryption option, and ensure your wireless stations have the same setting: 64-Bit Encryption - Keys are 10 Hex characters. 128-Bit Encryption - Keys are 26 Hex characters.
Passphrase	Generate a key or keys, instead of entering them directly. Enter a word or group of printable characters in the Passphrase box and click the Generate button to automatically configure the WEP key. It consists of 1 to 30 characters.
Key Value	Enter a key in hexadecimal format. Note—Due to hardware limitations, one set of WEP key is supported per radio.

WPA2-Personal

This is a further development of WPA-Personal, and offers even greater security.

The screenshot displays the Linksys configuration interface for a LARAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. A left sidebar lists various configuration categories: Administration, LAN, Wireless (selected), Basic Settings, Security, Rogue AP Detection, Scheduler, Scheduler Association, Connection Control, Rate Limit, QoS, WDS, Virtual Group Bridge, Advanced Settings, Captive Portal, ACL, and Queue. The main content area is titled 'Wireless Security' and contains the following settings:

- Select Your SSID:** A dropdown menu showing 'Radio 1 SSID 1 (LinksysSMB240)'.
- Security Settings:**
 - Security Mode:** A dropdown menu set to 'WPA2-Personal'.
 - Fast Roaming(802.11r):** An unchecked checkbox.
 - WPA Algorithm:** Set to 'AES'.
 - Pre-shared Key:** A text input field with a placeholder '(Range: 8-63 ASCII or 64 HEX characters)'.
 - Key Renewal:** A text input field set to '3600' seconds, with a placeholder '(Range: 600-36000, Default: 3600)'.

At the bottom right of the settings area are 'Save' and 'Cancel' buttons. The footer of the page reads: '© 2018 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys. All rights reserved.'

WPA2-Personal	
Fast Roaming(802.11r)	Enable or disable Fast Roaming (802.11r) . Fast Roaming (802.11r) minimizes the delay when a voice client transitions from one BSS to another within the same ESS. Fast BSS Transition establishes security and QoS states at the target AP before or during a re-association. This minimizes the time required to resume data connectivity when a BSS transition happens. Important Points to Remember: • Fast Roaming (802.11r) is operational only if the wireless client has support for 802.11r standard. If the client does not have support for 802.11r standard, it falls back to normal WPA2 authentication method. • If Fast Roaming (802.11r) is enabled, some clients without 802.11r supported may fail to connect to the network. • Only one SSID of the AP can be enabled with Fast Roaming (802.11r).
WPA Algorithm	The encryption method is AES. Wireless stations must also use AES.
Pre-shared Key	Enter the key value. It is 8 to 63 ASCII characters or 64 HEX characters. Other wireless stations must use the same key.
Key Renewal	Specify the value of Group Key Renewal. It's a value from 600 to 36000 and default is 3600. WPA automatically changes secret keys after a certain period of time. The group key interval is the period of time in between automatic changes of the group key, which all devices on the network share. Constantly keying the group key protects your network against intrusion, as the would-be intruder must cope with an ever-changing secret key.

WPA/WPA2-Personal

This method, sometimes called Mixed Mode, allows clients to use either WPA-Personal or WPA2-Personal.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The 'Configuration' tab is selected, and the 'Wireless Security' section is active. The 'Select Your SSID' dropdown is set to 'Radio 1:55D 1 (LinksysM0245)'. Under 'Security Settings', the 'Security Mode' is set to 'WPA/WPA2-Personal', the 'WPA Algorithm' is set to 'TKIP or AES', and the 'Pre-shared Key' field is empty. The 'Key Renewal' is set to '3600' seconds. The interface includes a sidebar with navigation options like Administration, LAN, Wireless, Basic Settings, Security, and Advanced Settings. The bottom of the page has a copyright notice for 2015 Belkin International, Inc.

WPA/WPA2-Personal	
WPA Algorithm	The encryption method is TKIP or AES.
Pre-shared Key	Enter the key value. It is 8 to 63 ASCII characters or 64 HEX characters. Other wireless stations must use the same key.
Key Renewal	Specify the value of Group Key Renewal. It's a value from 600 to 36000, and default is 3600. WPA automatically changes secret keys after a certain period of time. The group key interval is the period of time in between automatic changes of the group key, which all devices on the network share. Constantly keying the group key protects your network against intrusion, as the would-be intruder must cope with an ever-changing secret key.

WPA2-Enterprise

This version of WPA2-Enterprise requires a RADIUS Server on your LAN to provide the client authentication. Data transmissions are encrypted using the WPA2 AES standard.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The 'Configuration' tab is selected, and the 'Wireless Security' section is active. The 'Security Mode' is set to 'WPA2-Enterprise'. The 'Primary Server' is set to '192.168.1.1' and the 'Primary Server Port' is '1812'. The 'Primary Shared Secret' is masked with dots. The 'Backup Server' is set to '192.168.1.2' and the 'Backup Server Port' is '1812'. The 'Backup Shared Secret' is also masked. The 'Fast Roaming (802.11r)' checkbox is unchecked. The 'WPA Algorithm' is set to 'AES'. The 'Key Renewal Timeout' is set to '3600' seconds. The 'Save' and 'Cancel' buttons are at the bottom right.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.000

System Status Quick Start Configuration Maintenance Support

Administration LAN Wireless

Basic Settings

Security

Rogue AP Detection Scheduler Scheduler Association Connection Control Rate Limit QoS WDS Wireless Bridge Advanced Settings

Captive Portal ACL Cluster

Wireless Security

Select Your SSID

SSID: Radio 1 SSID 1 (LinksysSMB240)

Security Settings

Security Mode: WPA2-Enterprise

Primary Server: 192.168.1.1

Primary Server Port: 1812 (Range: 1-65534, Default: 1812)

Primary Shared Secret: (Range: 1-64 characters)

Backup Server: 192.168.1.2

Backup Server Port: 1812 (Range: 1-65534, Default: 1812)

Backup Shared Secret: (Range: 1-64 characters)

Fast Roaming (802.11r):

WPA Algorithm: AES

Key Renewal Timeout: 3600 seconds (Range: 600-36000, Default: 3600)

Save Cancel

© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

WPA2-Enterprise	
Fast Roaming (802.11r)	Enable or disable Fast Roaming (802.11r). Fast Roaming (802.11r) minimizes the delay when a voice client transitions from one BSS to another within the same ESS. Fast BSS Transition establishes security and QoS states at the target AP before or during a re-association. This minimizes the time required to resume data connectivity when a BSS transition happens. Important Points to Remember: • Fast Roaming (802.11r) is operational only if the wireless client has support for 802.11r standard. If the client does not have support for 802.11r standard, it falls back to normal WPA2 authentication method. • If Fast Roaming (802.11r) is enabled, some clients without 802.11r supported may fail to connect to the network. • Only one SSID of the AP can be enabled with Fast Roaming (802.11r) .
Primary Server	Enter the IP address of the RADIUS Server on your network.
Primary Server Port	Enter the port number used for connections to the RADIUS Server. It is a value from 1 to 65534, and default is 1812.
Primary Shared Secret	Enter the key value to match the RADIUS Server. It consists of 1 to 64 characters.
Backup Server	The Backup Authentication Server will be used when the Primary Authentication Server is not available.
Backup Server Port	Enter the port number used for connections to the Backup RADIUS Server. It's a value from 1 to 65534, and default is 1812.
Backup Shared Secret	Enter the key value to match the Backup RADIUS Server. It consists of 1 to 64 characters.
WPA Algorithm	The encryption method is AES.

Key Renewal Timeout	Specify the value of Group Key Renewal. It is a value from 600 to 36000, and default is 3600. WPA automatically changes secret keys after a certain period of time. The group key interval is the period of time in between automatic changes of the group key, which all devices on the network share. Constantly keying the group key protects your network against intrusion, as the would-be intruder must cope with an ever-changing secret key.
----------------------------	--

WPA/WPA2-Enterprise

WPA/WPA2-Enterprise requires a RADIUS Server on your LAN to provide the client authentication. Data transmissions are encrypted using WPA/WPA2 standard.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The 'Configuration' tab is selected, and the 'Wireless Security' section is active. The 'Security Mode' is set to 'WPA/WPA2-Enterprise'. The 'Key Renewal Timeout' is set to 3600 seconds. The 'WPA Algorithm' is set to 'TKIP or AES'. The 'Primary Server' and 'Backup Server' fields are empty, and the 'Primary Shared Secret' and 'Backup Shared Secret' fields are masked with asterisks. The 'SSID' field is set to 'Rapid 1 SSID 1 (LinksysM240)'. The 'Wireless Security' section includes a 'Select Your SSID' dropdown, a 'Security Settings' section, and a 'Key Renewal Timeout' field. The 'Wireless Security' section also includes a 'WPA Algorithm' dropdown and a 'Key Renewal Timeout' field. The 'Wireless Security' section includes a 'WPA Algorithm' dropdown and a 'Key Renewal Timeout' field.

WPA/WPA2-Enterprise	
Primary Server	Enter the IP address of the RADIUS Server on your network.
Primary Server Port	Enter the port number used for connections to the RADIUS Server. It is a value from 1 to 65534, and default is 1812.
Primary Shared Secret	Enter the key value to match the RADIUS Server. It consists of 1 to 64 characters.
Backup Server	The Backup Authentication Server will be used when the Primary Authentication Server is not available.
Backup Server Port	Enter the port number used for connections to the Backup RADIUS Server. It is a value from 1 to 65534, and default is 1812.
Backup Shared Secret	Enter the key value to match the Backup RADIUS Server. It consists of 1 to 64 characters.
WPA Algorithm	The encryption method is TKIP or AES.
Key Renewal Timeout	Specify the value of Group Key Renewal. It is a value from 600 to 36000, and default is 3600 second. WPA automatically changes secret keys after a certain period of time. The group key interval is the period of time between automatic changes of the group key, which all devices on the network share. Constantly keying the group key protects your network against intrusion, as the would-be intruder must cope with an ever-changing secret key.

RADIUS

Use RADIUS server for authentication and dynamic WEP key generation for data encryption.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The 'Configuration' tab is selected, and the 'Wireless Security' section is active. The 'Security Mode' is set to 'RADIUS'. The 'Primary Server' is set to '0.0.0.0', the 'Primary Server Port' is '1812', and the 'Primary Shared Secret' is '*****'. The 'Backup Server' is set to '0.0.0.0', the 'Backup Server Port' is '1812', and the 'Backup Shared Secret' is '*****'. The 'Save' and 'Cancel' buttons are at the bottom right.

Authentication Server

Primary Server	Enter the IP address of the RADIUS Server on your network.
Primary Server Port	Enter the port number used for connections to the RADIUS Server. It is a value from 1 to 65534, and default is 1812.
Primary Shared Secret	Enter the key value to match the RADIUS Server. It consists of 1 to 64 characters.
Backup Server	The Backup Authentication Server will be used when the Primary Authentication Server is not available.
Backup Server Port	Enter the port number used for connections to the Backup RADIUS Server. It is a value from 1 to 65534, and default is 1812.
Backup Shared Secret	Enter the key value to match the Backup RADIUS Server. It consists of 1 to 64 characters.

Rogue AP Detection

Go to *Configuration > Wireless > Rogue AP Detection* to detect the unexpected or unauthorized access point installed in a secure network environment.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless, Basic Settings, Security, Rogue AP Detection (highlighted), Scheduler, Scheduler Association, Connection Control, Rate Limit, QoS, WDS, Workgroup Bridge, and Advanced Settings. The main content area is titled 'Rogue AP Detection' and contains the following settings:

- Select Your Radio:** A dropdown menu for selecting the wireless radio.
- Wireless Radio:** A text input field.
- Rogue AP Detection:** A checkbox labeled 'Enable'.
- Detected Rogue AP List:** A table with columns: Action, MAC Address, SSID, Channel, Security, and Signal (dBm).

At the bottom of the page, a copyright notice reads: '© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

Radio	
Wireless Radio	Select the desired radio from the list. Radio 1 is for 2.4GHz, and Radio 2 is for 5GHz.
Rogue AP	Enable or disable Rogue AP Detection on the selected radio. <i>Note—Scanning happens when rouge AP is enabled or you can click Refresh to trigger scanning again.</i>
Detected Rogue AP List	
Action	Click Trust to move the AP to the Trusted AP List.
MAC Address	The MAC address of the Rogue AP.
SSID	The SSID of the Rogue AP.
Channel	The channel of the Rogue AP.
Security	The security method of the Rogue AP.
Signal	The signal level of the Rogue AP.
Trusted AP List	
Action	Click Untrust to move the AP to the Rogue AP List.
MAC Address	The MAC address of the Trusted AP.
SSID	The SSID of the Trusted AP.
Channel	The channel of the Trusted AP.
Security	The security method of the Trusted AP.
Signal	The signal level of the Trusted AP.
New MAC Address	Add one trusted AP by MAC address.

Scheduler

Go to *Configuration > Wireless > Scheduler* to configure a rule with a specific time interval for SSIDs to be operational. Automate enabling or disabling SSIDs based on the profile definition. Support up to 16 profiles and each profile can include four time rules.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.002

System Status Quick Start **Configuration** Maintenance Support

Administration LAN **Wireless** Basic Settings Security Rogue AP Detection **Scheduler** Scheduler Association Connection Control Rate Limit QoS WDS Workgroup Bridge Advanced Settings

Captive Portal ACL QoS

Scheduler

Wireless Scheduler ☐ Enable

Scheduler Operational Status

Status: Inactive

Reason: Disabled by administrator

Scheduler Profile Configuration

New Profile Name: Add

Profile Name: default Delete

Profile Name	Day of the Week	Start Time	End Time
default	None	08:00	17:00
default	None	08:00	17:00
default	None	08:00	17:00
default	None	08:00	17:00

Save Cancel

© 2018 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

Scheduler	
Wireless Scheduler	Enable or disable wireless scheduler on the radio. It is disabled by default. If disabled, even if some SSIDs are associated with profiles, they will be always active.
Scheduler Operational Status	
Status	The operational status of the scheduler.
Reason	The detailed reason for the scheduler operational status. It includes the following situations. - System time is outdated. Scheduler is inactive because system time is outdated. - Administrative Mode is disabled. Scheduler is disabled by administrator. - Active Scheduler is active.
Scheduler Profile configuration	
New Profile Name	Enter the name for new profile.
Profile Name	Select the desired profile from the list to configure.
Day of the Week	Select the desired day from the list. Option <i>None</i> means this time rule is disabled.
Start Time	Choose the start time.
Finish Time	Choose the finish time.

Scheduler Association

Go to *Configuration > Wireless > Scheduler Association* to associate defined scheduler profiles with SSIDs.

The screenshot shows the Linksys configuration page for a LAPAC2600 AC2600 Dual Band Access Point. The 'Scheduler Association' tab is selected. The 'Wireless Radio' is set to 'Radio 1'. The table below shows the association of scheduler profiles to SSIDs.

SSID	SSID Name	Profile Name	Interface Status
SSID 1	LinksysS24G	None	Enabled
SSID 2		None	Disabled
SSID 3		None	Disabled
SSID 4		None	Disabled
SSID 5		None	Disabled
SSID 6		None	Disabled
SSID 7		None	Disabled
SSID 8		None	Disabled

Buttons: Save, Cancel

Radio	
Wireless Radio	Select the desired radio from the list. Radio 1 is for 2.4 GHz, and Radio 2 is for 5 GHz.
Scheduler Association	
SSID	The index of SSID.
SSID Name	The name of the SSID.
Profile Name	Choose the profile that is associated with the SSID. If the profile associated with the SSID is deleted, then the association will be removed. Option <i>None</i> means no scheduler profile is associated.
Interface Status	The status of the SSID. It can be Enabled or Disabled. Scheduler only works when the SSID is enabled.

Connection Control

Go to *Configuration > Wireless > Connection Control* to define whether listed client stations may authenticate with the access point.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless, Basic Settings, Security, Rogue AP Detection, Scheduler, Scheduler Association, Connection Control (highlighted), Rate Limit, QoS, WDS, Meshgroup Bridge, Advanced Settings, Captive Portal, ACL, and QoS. The main content area is titled 'Wireless Connection Control'. It features a 'Select Your SSID' dropdown menu with 'Radio 1 SSID 1 (Linksys348240)' selected. Below this is a 'Control Type' section with three radio buttons: 'Local', 'RADIUS', and 'Disabled' (which is selected). At the bottom right of the form are 'Save' and 'Cancel' buttons. The footer contains the copyright notice: '© 2015 Linksys International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.'

SSID	Select the desired SSID from the list.
Control Type	Select the option from the drop-down list as desired. - Local: Choose either <i>Allow only following MAC addresses to connect to wireless network</i> or <i>Prevent following MAC addresses from connection to wireless network</i>. You can enter up to 20 MAC addresses of wireless stations or choose the MAC address from Wireless Client List. - RADIUS Primary/Backup RADIUS Server - Enter the IP address of the RADIUS Server. Primary/Backup RADIUS Server Port- Enter the Port number of the RADIUS Server. Primary/Backup Shared Secret - This is shared between the wireless access point and the RADIUS Server while authenticating the device attempting to connect. - Disabled

Rate Limit

Go to *Configuration > Wireless > Rate Limit* to limit downstream and upstream rate of SSIDs.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Log Out Help
 System Status Quick Start **Configuration** Maintenance Support

Administration
 LAN
Wireless
 Basic Settings
 Security
 Rogue AP Detection
 Scheduler
 Scheduler Association
 Connection Control
 Rate Limit
 QoS
 WDS
 Workgroup Bridge
 Advanced Settings
 Captive Portal
 ACL
 Channel

Rate Limit

Select Your Radio
 Wireless Radio: Radio 1

Rate Limit

SSID	SSID Name	Upstream Rate (Mbps)	Downstream Rate (Mbps)
SSID 1	LinksysM2600	0 (0-400)	0 (0-400)
SSID 2		0 (0-400)	0 (0-400)
SSID 3		0 (0-400)	0 (0-400)
SSID 4		0 (0-400)	0 (0-400)
SSID 5		0 (0-400)	0 (0-400)
SSID 6		0 (0-400)	0 (0-400)
SSID 7		0 (0-400)	0 (0-400)
SSID 8		0 (0-400)	0 (0-400)
WDS Root	LinksysM2600-WDSRoot	0 (0-400)	0 (0-400)

Save Cancel

© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

Radio	
Wireless Radio	Select the desired radio from the list. Radio 1 is for 2.4GHz, and Radio 2 is for 5GHz.
Rate Limit	
SSID	The index of SSID.
SSID Name	The name of the SSID.
Upstream Rate	Enter a maximum upstream rate for the SSID. The range is from 0 to 400 Mbps for Radio 1 and from 0 to 1000 Mbps for Radio 2; 0 means no limitation.
Downstream Rate	Enter a maximum downstream rate for the SSID. The range is from 0 to 400 Mbps for Radio 1 and from 0 to 1000 Mbps for Radio 2; 0 means no limitation.

QoS

Go to *Configuration > Wireless > QoS (Quality of Service)* to specify priorities for different traffic coming from your wireless client. Lower priority traffic will be slowed down to allow greater throughput or less delay for high priority traffic.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.002

System Status Quick Start Configuration Maintenance Support

Administration LAN Wireless Basic Settings Security Rogue AP Detection Scheduler Scheduler Association Connection Control Rule Limit QoS WDS Workgroup Bridge Advanced Settings Captive Portal ACL Cluster

QoS

Select Your Radio

Wireless Radio: Radio 1

QoS Settings

SSID	SSID Name	VLAN ID	Priority	WMM
SSID 1	LinksysU2a3	1	0	☒
SSID 2		1	0	☒
SSID 3		1	0	☒
SSID 4		1	0	☒
SSID 5		1	0	☒
SSID 6		1	0	☒
SSID 7		1	0	☒
SSID 8		1	0	☒

Save Cancel

© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.

QoS Setting	
Wireless Radio	Select the desired radio from the list. Radio 1 is for 2.4GHz, and Radio 2 is for 5GHz.
QoS Settings	
SSID	The index of SSID.
SSID Name	The name of the SSID.
VLAN ID	The VLAN ID of the SSID.
Priority	Select the priority level from the list. VLAN must be enabled in order to set priority. The 802.1p will be included in the VLAN header of the packets which are received from the SSID and sent from Ethernet or WDS interface.
WMM	Enable or disable WMM. WMM (Wi-Fi Multimedia) is a component of the IEEE 802.11e wireless LAN standard for QoS. WMM provides prioritization of wireless data packets from different applications based on four access categories: voice, video, best effort, and background. For an application to receive the benefits of WMM QoS, both it and the client running that application have to have WMM enabled. Legacy applications that do not support WMM and applications that do not require QoS, are assigned to the best effort category, which receives a lower priority than voice and video. WMM is enabled by default.

WDS

Go to *Configuration > Wireless > WDS (Wireless Distribution System)* to expand a wireless network through multiple access points instead of linking them with a wired backbone.

WDS only works and interacts with LAPN300, LAPN600, LAPAC1200, LAPAC1750 or LAPAC2600 devices.

The access point can act as WDS Root or WDS Station:

- WDS Root - Receives WDS connections from remote WDS Stations.
- WDS Station - Connects to remote WDS Root. Supports up to 4 WDS Stations on each wireless radio.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories, with 'Wireless' selected. The main content area is titled 'WDS' and contains three sections: 'SPANNING TREE', 'WDS ROOT', and 'WDS STATION'. The 'SPANNING TREE' section has a 'Spanning Tree Mode' toggle set to 'Disable'. The 'WDS ROOT' section is for 'WDS Root AP Interface' and includes fields for 'Interface Status' (disabled), 'Local SSID' (LinksysWDS10-10GRoot), 'Local MAC Address' (F2:C0:02:12:35:89), 'Local Channel' (1), 'Allowed VLAN List' (7), and 'Security Mode' (Disabled). The 'WDS STATION' section is for 'WDS Interface 1' and includes fields for 'Interface Status' (disabled), 'Local MAC Address' (82:C0:02:12:35:89), 'Remote SSID' (with a 'Site Survey' button), 'Remote MAC Address' (00:00:00:00:00:00), 'VLAN List' (7), 'Security Mode' (Disabled), and 'Status' (Not Connected). A second section for 'WDS Interface 2' is partially visible at the bottom.

Spanning Tree (recommended if you configure WDS connections)	
Spanning Tree	When enabled, STP helps prevent switching loops.
WDS Settings	
Radio	Select the desired radio from the list. Radio 1 is for 2.4 GHz, and Radio 2 is for 5 GHz.
WDS Root	
Interface Status	Enable or Disable the WDS Root. Be sure the following settings on WDS Root device are determined and configured. The WDS Station must use the same settings as Root afterwards. • Radio • IEEE 802.11 Mode • Channel Bandwidth • Channel Note—It is highly recommended that static channel is configured on both APs. Do not use Auto channel option when you enable WDS, as both APs in a WDS link must be on the same radio channel. If Auto option is configured, there is chance two access points run on different channels and WDS link cannot establish. Workgroup Bridge and WDS will not work at the same time on one wireless radio. When Workgroup Bridge is enabled, WDS will be disabled automatically on the same radio.
Local SSID	Enter name of the WDS Root SSID (used when connected by WDS Stations).
Local MAC Address	MAC address of the WDS Root SSID.
Local Channel	The channel used by WDS Root SSID. WDS stations must use same channel as the WDS Root. Channel can be changed in <i>Basic Settings</i> page.

Allowed VLAN List	Enter the list of VLANs accepted by the WDS Root. When VLAN is enabled, WDS Root receives from WDS Stations only packets in the VLAN list. Packets not in the list will be dropped. The VLAN list is only applicable when VLAN is enabled. The VLAN list includes 1 to 16 VLAN IDs separated by "," such as "100,200,300,400,500,600,700,800".
Security Settings	Setting can be Disabled, WPA-Personal, WPA2-Personal, WPA2-Enterprise or WPA/WPA2-Enterprise.
WDS Station	
Interface Status	Enable or disable the WDS Station. Before configuring a WDS Station, be sure the following settings of the device are identical to the WDS Root that will be connected. • Radio • IEEE 802.11 Mode • Channel Bandwidth • Channel Note—<i>It is highly recommended that static channel is configured on both APs. Do not use Auto channel option when you enable WDS, as both APs in a WDS link must be on the same radio channel. If Auto option is configured, there is chance two access points run on different channels and WDS link cannot establish.</i> Workgroup Bridge and WDS will not work at the same time on one wireless radio. When Workgroup Bridge is enabled, WDS will be disabled automatically on the same radio.
Remote SSID	Enter the name of the Root's SSID. Click Site Survey and choose from the list. You must do this for WDS Station to connect to a remote WDS Root.

Remote MAC Address	MAC address of the access point on the other end of the WDS link. Optional WDS Station connects to remote WDS Root by matching SSIDs. When there is more than one remote WDS Root with the same SSID, the WDS Station can differentiate them by MAC address. The format is xx:xx:xx:xx:xx:xx.
VLAN List	Enter the list of VLANs that are accepted by the WDS Station. When VLAN is enabled, the WDS Station forwards to the remote WDS Root only packets in the VLAN list. Packets not in the VLAN list cannot be forwarded to the remote WDS Root. The VLAN List is only applicable when VLAN is enabled. The VLAN list includes 1 to 8 VLAN IDs separated by "," such as "100,200,300,400,500,600,700,800".
Security Mode	The type of encryption to use on the WDS link. It must be unique to the access point on the other end of the WDS link. The options are Disabled, WPA Personal, WPA2 Personal, WPA Enterprise or WPA2 Enterprise.
Status	Status of the WDS interface. It can be <i>Disabled</i>, <i>Connected</i> or <i>Not Connected</i>.

Workgroup Bridge

Go to *Configuration > Wireless > Workgroup Bridge* to extend the accessibility of a remote network. In Workgroup Bridge mode, the access point acts as a wireless station (STA) on the wireless LAN. It can bridge traffic between a remote wired network and a wireless LAN.

When Workgroup Bridge is enabled, SSID configuration still works to provide wireless services to clients.

All access points participating in Workgroup Bridge must have the identical settings for Radio interface, IEEE 802.11 mode, Channel Bandwidth, Channel (Auto is not recommended).

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless (selected), Basic Settings, Security, Rogue AP Detection, Scheduler, Scheduler Association, Connection Control, Rate Limit, QoS, WDS, Workgroup Bridge (selected), and Advanced Settings. Below the sidebar, the 'Workgroup Bridge' settings are displayed. The 'Select Your Radio' section shows 'Radio 1' selected. The 'Status' section has an 'ENABLE' checkbox. The 'Remote AP Settings' section includes an 'SSID' field with a 'Site Survey' button, a 'Remote MAC Address' field with a placeholder '(xxxxxxxxxx) (Optional)', a 'Security Mode' dropdown set to 'Disabled', and a 'Connection Status' field showing 'Not Connected'. 'Save' and 'Cancel' buttons are at the bottom right. A footer at the very bottom reads: '© 2016 Linksys International, Inc. and/or its subsidiaries and affiliates. All rights reserved. Linksys, LLC. All rights reserved.'

Workgroup Bridge	
Radio	Select the desired radio from the list. Radio 1 is for 2.4 GHz, and Radio 2 is for 5 GHz.
Workgroup Bridge Status	
Status	Enable or disable Workgroup Bridge function. Before configuring Workgroup Bridge, make sure all devices in Workgroup Bridge have the following identical settings. • Radio • IEEE 802.11 Mode • Channel Bandwidth • Channel Note—<i>It is highly recommended that static channel is configured on both APs. Do not use the Auto channel option when you enable Workgroup Bridge, as both APs in a Workgroup Bridge link must be on the same radio channel. If Auto option is configured, there is a chance two access points will run on different channels which prevents Workgroup Bridge link from being established.</i>
Remote AP Settings	
SSID	Enter the name of the SSID to which Workgroup Bridge will connect. Click Site Survey to choose from the list. You must do this for Workgroup Bridge to connect to a remote access point.
Remote MAC Address	Normally, Workgroup Bridge connects to a remote access point by matching SSID. When more than one remote access point has the same SSID, Workgroup Bridge can connect to different remote access points. Optional: You can specify the MAC address of the remote access point to limit Workgroup Bridge's connection to a specific remote access point. The format is xx:xx:xx:xx:xx:xx.

Security Mode	Select the desired mode from the list. • Disabled • WPA-Personal • WPA2-Personal • WPA-Enterprise • WPA2-Enterprise
----------------------	--

Advanced Settings

Go to *Configuration > Wireless > Workgroup Bridge* to configure advanced parameters of wireless radios.

LINKSYS LARAC2600 AC2600 Dual Band Access Point Log out Help Firmware Version: V1.0.0.052

System Status Quick Start **Configuration** Maintenance Support

Administration
LAN
Wireless
Basic Settings
Security
Rogue AP Detection
Scheduler
Scheduler Association
Connection Control
Rate Limit
QoS
WDS
Workgroup Bridge
Advanced Settings

Advanced Wireless Settings

BAND STEERING

Band Steering ☐ Enable

ISOLATION

Isolation between SSIDs ☒ Enable

ADVANCED PARAMETERS

Select Your Radio
Wireless Radio: Radio 1

Parameters

Worldwide Mode (802.11n) ☒ Enable

Channel Bandwidth: 20MHz (Default: 20MHz)

Guard Interval: Auto (Default: Auto)

CTS Protection Mode: Disabled (Default: Disabled)

Beacon Interval: 100 ms (Range: 40 ~ 1000, Default: 100)

DTIM Interval: 1 (Range: 1 ~ 255, Default: 1)

RTS Threshold: 2347 (Range: 1 ~ 2347, Default: 2347)

Fragmentation Threshold: 2345 (Range: 256 ~ 2345, Default: 2345)

Output Power: 100%

Save Cancel

© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.

Band Steering	
Band Steering	Enable or disable Band Steering function. Band Steering is a technology that detects whether the wireless client is dual-band capable. If it is, band steering pushes the client to connect to the less-congested 5GHz network. It does this by actively blocking the client's attempts to connect with the 2.4GHz network.
Isolation	
Isolation between SSIDs	Define whether to isolate traffic between SSIDs. If enabled, wireless clients in different SSIDs cannot communicate with each other. Enabled by default.
Advanced Parameters	
Wireless Radio	Select the desired radio from the list. Radio 1 is for 2.4GHz, and Radio 2 is for 5GHz.
Worldwide Mode (802.11d)	Worldwide Mode (802.11d) enables the access point to direct connected wireless devices to radio settings specific to where in the world the devices are in use.
Channel Bandwidth	Select the designed channel bandwidth for the wireless radio. 20MHz - Select if you are not using any 802.11n wireless devices. 20/40MHz - Select if you are using both 802.11n and non-802.11n wireless devices. 20/40/80MHz - Select if you are using 802.11ac, 802.11n and non-802.11n wireless devices.
Guard Interval	Select the guard interval manually for Wireless-N connections. The two options are Short (400nanoseconds) and Long (800nanoseconds). The default is Auto.

CTS Protection Mode	CTS (Clear-To-Send) Protection Mode boosts the access point's ability to catch all Wireless-G transmissions, but it severely decreases performance. By default, CTS Protection Mode is disabled, but the access point will automatically enable this feature when Wireless-G devices are not able to transmit to the access point in an environment with heavy 802.11b traffic.
Beacon Interval	The access point transmits beacon frames at regular intervals to announce the existence of the wireless network. Enter the interval between the transmissions of beacon frames. The value range is between 40 and 1000 milliseconds and default is 100 milliseconds.
DTIM Interval	Enter the Delivery Traffic Information Map (DTIM) period, an integer from 1 to 255 beacons. The default is 1 beacon. The DTIM message is an element included in some beacon frames. It indicates which client stations, currently sleeping in low-power mode, have data buffered on the access point awaiting pickup. The DTIM period that you specify indicates how often the clients served by this WAP device should check for buffered data still on the access point awaiting pickup. For example, if you enter 1, clients check for buffered data on the access point at every beacon. If you enter 10, clients check on every 10th beacon.

RTS Threshold	Enter the Request to Send (RTS) Threshold value, an integer from 1 to 2347. The default is 2347 octets. The RTS threshold indicates the number of octets in a Medium Access Control Protocol Data Unit (MPDU) below which an RTS/CTS handshake is not performed. Changing the RTS threshold can help control traffic flow through the access point, especially one with a lot of clients. If you specify a low threshold value, RTS packets are sent more frequently, which consumes more bandwidth and reduces the throughput of the packet. However, sending more RTS packets can help the network recover from interference or collisions that might occur on a busy network, or on a network experiencing electromagnetic interference.
Fragmentation Threshold	Enter the fragmentation threshold, an integer from 256 to 2346. The default is 2346. The fragmentation threshold is a way of limiting the size of packets (frames) transmitted over the network. If a packet exceeds the fragmentation threshold you set, the fragmentation function is activated and the packet is sent as multiple 802.11 frames. If the packet being transmitted is equal to or less than the threshold, fragmentation is not used. Setting the threshold to the largest value (2,346 bytes, which is the default) effectively disables fragmentation. Fragmentation involves more overhead because of the extra work of dividing up and reassembling of frames it requires, and because it increases message traffic on the network. However, fragmentation can help improve network performance and reliability if properly configured.
Output Power	Select the output power of the access point. If many access points exist, lower power can reduce the signal interference among them.

Captive Portal

Captive Portal is a method of securing access to the Internet from within a wireless network. Users must enter authentication credentials before their wireless client devices can access the Internet.

Global Configuration

Go to *Configuration > Captive Portal > Global Configuration* to change settings and modify captive portal authentication access port number if needed.

The screenshot displays the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar shows a tree view with 'Administration' expanded, containing 'LAN', 'Wireless', and 'Captive Portal'. Under 'Captive Portal', 'Global Configuration' is selected. The main content area, titled 'Global Configuration', contains the following settings:

- Captive Portal:** ☐ Enable
- Authentication Timeout:** 300 seconds (Range: 60-600, Default: 300)
- Additional HTTP Port:** ☐ Enable
- HTTP Port:** 80 (Range: 80, 1024-65535, Default: 80)
- Additional HTTPS Port:** ☐ Enable
- HTTPS Port:** 443 (Range: 443, 1024-65535, Default: 443)

At the bottom right of the configuration area are 'Save' and 'Cancel' buttons. The footer of the interface states: '© 2018 Belkin International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.'

Captive Portal	Enable or Disable Captive Portal function globally. Captive Portal is disabled by default.
Authentication Timeout	The number of seconds the access point keeps an authentication session open with a wireless client. If the client fails to enter authentication credentials within the timeout period, the client may need to refresh the web authentication page. The range is from 60 to 600 seconds. Default is 300.
Additional HTTP Port	HTTP portal authentication uses the HTTP management port by default. You can configure an additional port for that process.
HTTP Port	Once Additional HTTP Port is enabled, define an additional port for HTTP protocol. The value can be 80 or 1024 to 65535 and is 80 by default. The HTTP Port must be different from the HTTP port in <i>Administration > Management Access</i> page.
Additional HTTPS Port	HTTPS portal authentication uses the HTTPS management port by default. You can configure an additional port for that process.
HTTPS Port	Once Additional HTTPS Port is enabled, define an additional port for HTTPS protocol. The value can be 443 or 1024 to 65535 and is 443 by default. The additional HTTPS Port must be different from the HTTPS port in <i>Administration > Management Access</i> page.

Portal Profiles

Go to *Configuration > Captive Portal > Portal Profiles* to define detailed settings for Captive Portal profile. Create up to two profiles.

The screenshot shows the Linksys configuration web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless, and Captive Portal (selected). Under 'Captive Portal', the sub-menu 'Portal Profiles' is highlighted. The main content area is titled 'Portal Profiles' and contains a 'Select Your Profile' section with a dropdown menu showing 'Profile 1'. Below this is the 'Profile Settings' section, which includes fields for 'Protocol' (set to HTTP), 'Authentication' (set to Local), 'Group Name' (set to Default), 'Landing Page' (with an 'Enable' checkbox), 'Redirect to Original URL' (with an 'Enable' checkbox), 'Promotion URL' (with a '(Max 128 characters)' note), and 'Session Timeout' (set to 0 minutes, with a range of 0-1440 and a default of 0). At the bottom right of the settings area are 'Save' and 'Cancel' buttons. The footer of the interface states: '© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

Portal Profiles	
Captive Portal Profile	Select a profile to configure.
Protocol	Select the protocol used to access the Portal Authentication web server. It can be HTTP or HTTPS.
Authentication	Select an authentication method for clients. Local - The access point uses a local database to authenticated wireless clients. Radius - The access point uses a database on a remote RADIUS server to authenticate wireless clients. The RADIUS server must support EAP-MD5. Password Only - Wireless clients only need a password. Username is unnecessary. No Password - Wireless clients accept defined terms to access the wireless network. Password and username both are unnecessary.
Landing Page	Enable Landing Page to determine where authenticated wireless clients will be directed after logging in at Captive Portal. Choose <i>Original URL</i> or <i>Promotion URL</i> .
Redirect to Original URL	If Landing Page is enabled, this setting redirects authenticated wireless clients from the Captive Portal login screen to the URL the user typed in.
Promotion URL	Enter a URL to which authenticated clients will be redirected from the Captive Portal login page. Landing Page must be enabled and Redirect to Original URL must be disabled.
Session Timeout	Set the session time in minutes. The access point will disconnect authenticated clients when the session time expires. Session time can range from 0 to 1440 minutes. The default is 0 minutes, which means no timeout.
Local Authentication	
Group Name	Assigns an existing group to the profile. All users who belong to the group are permitted to access the network through this portal. The option 'Default' means a group which includes all users.

Radius Authentication	
Primary Server	Enter the IP address of the RADIUS Server on your network.
Primary Server Port	Enter the port number used for connections to the RADIUS Server.
Primary Shared Secret	Enter the key value to match the RADIUS Server.
Backup Server	The Backup Authentication Server will be used when the Primary Authentication Server is not available.
Backup Server Port	Enter the port number used for connections to the Backup RADIUS Server.
Backup Shared Secret	Enter the key value to match the Backup RADIUS Server.
Password Only Authentication	
Password	The password for the profile. Wireless clients only need one password to access the wireless network.

Local User

Go to Configuration > Captive Portal > Local User to configure user settings for Captive Portal. Up to 128 users are supported.

The screenshot shows the Linksys configuration interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories, with 'Captive Portal' expanded to show 'Global Configuration', 'Portal Profiles', 'Local User' (selected), 'Local Group', 'VMS Customization', 'Profile Association', and 'Client Information'. The main content area is titled 'User' and contains a 'Local User Table' with columns for 'User Name', 'New Password', and 'Confirm New Password'. Below the table are 'Add' and 'Delete' buttons. At the bottom right of the table are 'Save' and 'Cancel' buttons. A footer at the bottom of the page reads: '© 2014 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

User Name	Enter the name of the user account. The user name includes 1 to 32 characters. Special characters except ':' and ';' are allowed.
Password	Enter the password of the user account. The password must be between 4 and 32 characters in length. Special characters except ':' and ';' are allowed.
Confirm Password	Re-enter the password to confirm it.

Local Group

Go to *Configuration > Captive Portal > Local Group* to configure group settings. Groups include multiple local users and are mapped to Captive Portal profiles. Up to two groups are supported.

The screenshot shows the Linksys configuration interface for a LARAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless, Captive Portal (selected), Gmail Configuration, Portal Profiles, Local User, Local Group (selected), Web Customization, Profile Association, Client Information, AOL, and Cluster. The main content area is titled 'Group' and contains a 'New Group' section. This section includes a 'Group Name' input field with a placeholder '(Range: 1-32 characters)' and an 'Add' button. Below this is a 'Group Members' section with a 'Group Selection' dropdown and a 'Delete' button. Two large text areas are present, both labeled 'Members' and 'Other Users', each with a placeholder 'xxxxxxxx End of List xxxxxxxx'. Navigation buttons '<<' and '>>' are located between these two areas. At the bottom of the page, a copyright notice reads: '© 2010 Belkin International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.'

Group Name	Enter the name of the new group. The group name includes 1 to 32 characters. Special characters except ':' and ';' are allowed. Click Add.
Group Selection	Select one group to delete or configure its user members.
Members	User members of the selected group. You can select one user and click ">>" button to remove it.
Other Users	Other users which don't belong to the selected group. You can select one user and click "<<" button to add it into the group.

Web Customization

Go to *Configuration > Captive Portal > Web Customization* to customize the authentication web page of Captive Portal.

The screenshot shows the Linksys configuration web interface for a LAPAC3600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists various configuration categories, with 'Captive Portal' selected under 'Web Customization'. The main content area is titled 'Web Customization' and contains the following fields:

- Profile:** Profile 1 (dropdown)
- New Logo Upload:** Choose File (button), No file chosen (text), Upload (button)
- Logo Selection:** Default (dropdown), Delete (button)
- Background Color:** #00105A (text, Format #xxxxxx, Default #00105A)
- Font Color:** #FFFFFF (text, Format #xxxxxx, Default #FFFFFF)
- Welcome Title:** Welcome to the Wireless Network (text, Range: 1-64 Characters)
- Login Instruction:** You can login using your username and password. (text, Range: 1-96 Characters)
- User Label:** Username: (text, Range: 1-16 Characters)
- Password Label:** Password: (text, Range: 1-16 Characters)
- Button Name:** Connect (text, Range: 1-12 Characters)
- Button Color:** #70A0D4 (text, Format #xxxxxx, Default #70A0D4)
- Term of Use Label:** Check box to indicate that you have read and so (text, Range: 1-128 Characters)
- Term of Use:** Terms of use (text, Max 1024 characters)
- Success Text:** You have logged on successfully! (text, Range: 1-128 Characters)
- Failure Text:** Bad username or password! (text, Range: 1-128 Characters)

At the bottom right of the form are buttons for 'Preview', 'Save', and 'Cancel'. The footer of the page states: '© 2016 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

Profile	Select a profile to configure.
New Logo Upload	Logos display in the web page. Select an image file from your local PC and click Upload. Formats .gif, .png and .jpg are supported. File size cannot exceed 5KB. One profile can support one default and one new logo image. If a second new logo is uploaded, it will replace the first new logo.
Logo Selection	Select a logo image from the list.
Background Color	The HTML code for the background color in 6-digit hexadecimal format. The default is #0073BA.
Font Color	The HTML code for the font color in 6-digit hexadecimal format. The default is #FFFFFF.
Welcome Title	Customize text to go with your logo. The default is <i>Welcome to the Wireless Network.</i>
Login Instruction	Customize text to go with the login box. Default text for different authentication options: <i>Local Authentication/Radius Authentication</i> You can login using your username and password. <i>Password Only Authentication</i> You can login using your password. <i>Local Authentication</i> Click Connect to login.
User Label	Customize the username text box. Enter up to 16 characters. The default is <i>Username</i> .
Password Label	Customize the user password text box. Enter up to 16 characters. The default is <i>Password</i> .
Button Name	Customize the text that appears in the log in button. Enter up to 12 characters. The default is <i>Connect</i> .
Button Color	The HTML code for the background color of the button in 6-digit hexadecimal format. The default is #70A0D4.
Terms of Use Label	Customize the text to go with the checkbox. Enter up to 128 characters. The default is <i>Check here to indicate that you have read and accepted the following Terms of Use.</i>

Terms of Use	Customize the text to go with Terms of Use. Enter up to 1024 characters. The default is <i>Terms of Use</i> .
Success Text	Customize the text that shows when the client has been authenticated. The default is <i>You have logged on successfully! Please keep this window open when using the wireless network.</i>
Failure Text	Customize the text that shows when authentication fails. Enter up to 128 characters. The default is <i>Bad username or password.</i>

Profile Association

Go to *Configuration > Captive Portal > Profile Association* to associate defined Captive Portal profiles with SSIDs.

The screenshot shows the Linksys configuration web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar shows a tree view with 'Administration' expanded, containing 'LAN', 'Wireless', and 'Captive Portal'. Under 'Captive Portal', there are links for 'Global Configuration', 'Portal Profiles', 'Local User', 'Local Group', 'Web Customization', 'Profile Association' (selected), and 'Client Information'. The main content area is titled 'Profile Association' and features a 'Select Your Radio' dropdown set to 'Radio 1'. Below this is a table with columns 'SSID', 'SSID Name', and 'Profile'. The table lists SSIDs 1 through 8, with SSID 1 named 'Linksys@240' and others blank. Each row has a 'None' button in the 'Profile' column. At the bottom right of the table are 'Save' and 'Cancel' buttons. A footer at the very bottom reads: '© 2014 Belkin International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.'

SSID	SSID Name	Profile
SSID 1	Linksys@240	None
SSID 2		None
SSID 3		None
SSID 4		None
SSID 5		None
SSID 6		None
SSID 7		None
SSID 8		None

SSID	A list of available SSIDs.
SSID Name	The name of the SSID.
Profile Name	Choose the profile that is associated with the SSID. If the profile associated with the SSID is deleted, then the association will be removed. If <i>None</i> is selected, it means no profile is associated.

Client Information

Go to *Configuration > Captive Portal > Client Information* to view the status of wireless clients that are authenticated by Captive Portal.

The screenshot shows the Linksys configuration web interface for a LAPAC3600 AC3600 Dual Band Access Point. The top navigation bar includes tabs for System Status, Quick Start, Configuration (selected), Maintenance, and Support. The left sidebar lists various configuration categories: Administration, LAN, Wireless, Captive Portal (selected), ACL, and Cluster. Under the Captive Portal section, sub-items include Global Configuration, Portal Profiles, Local User, Local Group, Web Customization, Profile Association, and Client Information (selected). The main content area is titled 'Client Information' and displays a table of 'Authenticated Clients'. The table has columns for MAC Address, IP Address, User Name, SSID, Online Time (sec), Away Timeout (sec), and See. A 'Refresh' button is located below the table header. The footer of the interface contains the copyright notice: '© 2019 Linksys International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.'

MAC Address	MAC address of the client.
IP Address	IP address of the client.
User Name	User name used by the client to log in.
SSID Name	Name of the SSID to which the client is connected.
Online Time	How long the client has been online. Measured in seconds.
Away Timeout	An authenticated client that has been disconnected from the access point has a specific amount of time within which it may reconnect without re-authentication. The timer starts when the client disconnects from the SSID. After the time reaches zero, the client is de-authenticated. If the timeout is set to 0, the client is not de-authenticated. Measured in seconds.
Session Timeout	The remaining time of the authenticated session. The timer starts when the client is authenticated. After the time reaches zero, the client is de-authenticated. If the value is fixed to 0, the session won't time out. Measured in seconds.

ACL

ACLs are a collection of permit and deny conditions that can block unwarranted attempts to reach network resources.

Each ACL is a set of up to 10 rules. Each rule specifies whether the contents of a given field should be used to permit or deny access to the network. Rule can be based on various criteria and may apply to one or more fields with a packet. The priority of each rule will be determined by the rule index. Rule index number 1 has the highest priority to process and rule index number 10 is the last one to process. There is an implicit deny for traffic that does not match any rules.

Once ACL has been created and configured, bind your ACL to the wireless interface. The ACL can be applied to the traffic sent from a wireless client to the access point (upstream) or from the access point to a wireless client (downstream).

To create ACLs and associate them to an interface, perform the following steps.

1. Create ACLs.

To add a new ACL, type in a name and choose IPv4 or IPv6. Click **Add ACL**. To add a rule to a specific ACL, select the ACL name from the *ACL Names* dropdown list, and select a priority from the *Rule Index* dropdown list. After that, you can define what kind of traffic to permit or deny. Always remember there is an implicit deny for traffic that does not match any rules.

2. Associate the ACL with wireless interfaces by using ACL Association page.

To modify ACLs not in use, you have the following options.

1. You can unbind the ACL from a specific wireless interface by selecting *None* on the *ACL Association* page.
2. If you don't need an ACL anymore, you can delete it. To delete an ACL, select it from the *ACL Name* dropdown list and click **Delete ACL**.
3. If you like to delete a rule associated with an ACL, click **Reset** next to *Rule Index*. That rule will go back to default mode, all matching criteria for this specified rule will be gone.

ACL Profiles

Go to *Configuration > ACL > ACL Profiles* to configure ACL profiles and their rules.

The screenshot shows the Linksys configuration interface for the LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The left sidebar lists 'Administration', 'LAN', 'Wireless', 'Captive Portal', 'ACL', and 'Cluster'. The 'ACL' section is expanded, showing 'ACL Profiles' and 'ACL Association'. The main content area is titled 'ACL Settings' and is divided into two sections: 'ACL NAMES' and 'RULE CONFIGURATION'.

ACL NAMES

ACL Name: (Range: 1-32 characters)
ACL Type: IPV4

RULE CONFIGURATION

Rule Configuration

ACL Names: ACL1(IPV4)

Rule Index: 1

Enable Rule: ☐ Enable

Action: Deny

Match Every Packet: ☐

Protocol & IP

Match Protocol: ☐ ☒ Select From List IP

Match to Value: (Range: 0-255)

Match Source IP: ☐

IP/Wildcard Mask: /

Match Source Port: ☐ ☒ Select From List To

Match to Port: (Range: 0-65535)

Match Destination IP: ☐

IP/Wildcard Mask: /

Match Destination Port: ☐ ☒ Select From List To

© 2014 Linksys International, Inc. and/or its subsidiaries and affiliates. Including Linksys, LLC. All rights reserved.

ACL Profile	
ACL Name	A name can include from 1 to 32 alphanumeric characters to identify an ACL.
ACL Type	Configuration type of ACL is IPv4 or IPv6. Click Add ACL to add one new ACL profile.
Rule Configuration	
ACL Names	Select a profile to configure. An ACL profile includes ACL name and type. Click Delete ACL to delete an ACL.
Rule Index	Select and configure a new rule for the selected ACL.
Enable Rule	Enable or disable the ACL rule. It's disabled by default.
Action	Whether the ACL rule permits or denies an action.
Match Every Packet	Rule matches the frame or packet regardless of its contents. If this is checked, you cannot configure any other matching condition listed below; e.g, Protocol, Source IP/Port, Destination IP/Port.
Match Protocol	Use a Layer 3 or Layer 4 protocol as a matching condition. Set the protocol value with following methods. - Select From List - IP – Internet Protocol - ICMP – Internet Control Message Protocol - IGMP – Internet Group Management Protocol - TCP – Transmission Control Protocol - UDP – User Datagram Protocol - Match to Value Set a protocol with protocol ID from 0 to 255.

Match Source IP	Permit or deny packet by source IP address. - If the ACL type is IPv4, set an IPv4 address and its wildcard mask. Note—Wildcard 0 means to match that value, 1 means don't match. For example, a mask of 0000 0000 0000 0000 0000 1111 1111 which means that you match on the bits where there is 0 and don't match on the bits where there are 1s. You need to translate the 1s to a decimal integer and you write 0 for each four zeros. In this example since 1111 1111 equals to 255, the wildcard mask would be written as 0.0.0.255. To match traffic by source IP address from 192.168.2.0 to 192.168.2.254, enter the source IP as 192.168.2.0 and wildcard mask as 0.0.0.255. To match a specific source IP address e.g. 192.168.2.100, enter the source IP as 192.168.2.100 and wildcard mask as 0.0.0.0. - If the ACL type is IPv6, set an IPv6 address and its prefix length. The range for IPv6 prefix length is 0 to 128.
Match Source Port	Permit or deny packet by a source port identified in the datagram header. - Select from List - FTP - Port 21 - FTP Data - Port 20 - HTTP - Port 80 - SMTP - Port 25 - SNMP - Port 161 - Telnet - Port 23 - TFTP - Port 69 - Match to Port Enter a single destination port number for matched packets. The port range is 0-65535.

Match Destination IP	Permit or deny packet by destination IP address. - If the type of ACLs is IPv4, set an IPv4 address and its wildcard mask. Note—Wildcard 0 means to match that value, 1 means don't match. For example, a mask of 0000 0000 0000 0000 0000 1111 1111 which means that you match on the bits where there is 0 and don't match on the bits where there are 1s. You need to translate the 1s to a decimal integer and you write 0 for each four zeros. In this example since 1111 1111 equals to 255, the wildcard mask would be written as 0.0.0.255. To match traffic by destination IP address from 192.168.2.0 to 192.168.2.254, enter destination IP as 192.168.2.0 and wildcard mask as 0.0.0.255. To match a specific destination IP address e.g. 192.168.2.100, enter the destination IP as 192.168.2.100 and wildcard mask as 0.0.0.0. - If the type of ACLs is IPv6, set an IPv6 address and its prefix length as destination IP. The range for IPv6 prefix length is 0 to 128.
Match Destination Port	Permit or deny packet by a destination port identified in the datagram header. - Select from List Choose a port by port name. FTP – Port 21 FTP Data – Port 20 HTTP – Port 80 SMTP – Port 25 SNMP – Port 161 Telnet – Port 23 TFTP – Port 69 - Match to Port Enter a single destination port number for matched packets. The port range is 0-65535.

Match IP DSCP	Matches packets based on IP DSCP value. - Select From List Choose a DSCP value from the list. default Match packets with default dscp (000000) af11 Match packets with AF11 dscp (001010) af12 Match packets with AF12 dscp (001100) af13 Match packets with AF13 dscp (001110) af21 Match packets with AF21 dscp (010010) af22 Match packets with AF22 dscp (010100) af23 Match packets with AF23 dscp (010110) af31 Match packets with AF31 dscp (011010) af32 Match packets with AF32 dscp (011100) af33 Match packets with AF33 dscp (011110) af41 Match packets with AF41 dscp (100010) af42 Match packets with AF42 dscp (100100) af43 Match packets with AF43 dscp (100110) cs1 Match packets with CS1(precedence 1) dscp (001000) cs2 Match packets with CS2(precedence 2) dscp (010000) cs3 Match packets with CS3(precedence 3) dscp (011000) cs4 Match packets with CS4(precedence 4) dscp (100000) cs5 Match packets with CS5(precedence 5) dscp (101000) cs6 Match packets with CS6(precedence 6) dscp (110000) cs7 Match packets with CS7(precedence 7) dscp (111000) ef Match packets with EF dscp (101110) - Match to Value A custom DSCP value from 0 to 63.
Match IP Precedence	Matches packets based on their IP Precedence value from 0 to 7. This is applicable only when the type of ACLs is IPv4.

Match IP TOS	Matches a type of service from the dropdown list. This is applicable only when the type of ACLs is IPv4. Normal Service - 0000 Minimize Monetary Cost - 0001 Maximize Reliability - 0010 Maximize Throughput - 0100 Minimize Delay - 1000
IPv6 Flow Label	A number that is unique to an IPv6 packet is used by end stations to signify QoS handling in routers. The range is 0 to 1048575.

ACL Association

Go to *Configuration > ACL > ACL Association* to associate defined ACL profiles with SSIDs.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.002

System Status Quick Start Configuration Maintenance Support

Administration LAN Wireless Captive Portal ACL ACL Association Cluster

ACL Association

Select Your Radio

Wireless Radio: Radio 1

SSID	SSID Name	ACL Name Down	ACL Name Up
SSID 1	LinksysMB240	None	None
SSID 2		None	None
SSID 3		None	None
SSID 4		None	None
SSID 5		None	None
SSID 6		None	None
SSID 7		None	None
SSID 8		None	None

Save Cancel

© 2018 Linksys International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

ACL Association	
SSID	The index of SSID.
ACL Name Down	Choose the profile that is associated with the SSID for downstream (from access point to wireless client) traffic. If the profile associated with the SSID is deleted, the association will be removed. If <i>None</i> is selected, no profile is associated. After switching the packet or frame to the outbound interface, the ACL's rules are checked for a match. The packet or frame is transmitted if it is permitted and discarded if it is denied.
ACL Name Up	Choose the profile that is associated with the SSID for upstream (from wireless client to access point) traffic. If the profile associated with the SSID is deleted, the association will be removed. If <i>None</i> is selected, no profile is associated. When a packet or frame is received by the access point, the ACL's rules are checked for a match. The packet or frame is processed if it is permitted and discarded if it is denied.

Cluster

The cluster function provides a centralized method to administer and control wireless services across multiple devices. When access points are clustered, you can view, deploy, configure, and secure the wireless network as a single entity.

The access points within a cluster must have the same management VLAN configured. A cluster can support 16 LAPAC2600 access points as long as they are same model number.

In each cluster, one access point must be manually configured as the master access point. There can only be one master in a cluster. This master will propagate configuration information, such as wireless settings, time settings etc. to the other team members within a cluster. Login to the master access point to change sharable parameter settings instead of slaves.

When firmware is upgraded on the master, all slaves within the same cluster will receive the upgrade.

Clustered access points share these configurations:

- User Accounts
- Time Settings
- Log Settings
- Management Access
- Discovery Settings
- IGMP/MLD Snooping
- Wireless Network Mode
- SSID Settings
- Wireless Security
- Rogue AP Detection
- Wireless Scheduler
- Wireless Scheduler Association
- Wireless Connection Control
- Rate Limit
- QoS
- Advanced Wireless Settings
- Captive Portal Settings
- Ethernet Port Settings
- VLAN Settings
- ACL Settings


These configurations are not shared by clustered access points:

- IP Settings
- WDS
- Output Power
- Hostname
- Workgroup Bridge
- Wireless Channel
- 802.1x Supplicant

Settings & Status

Go to *Configuration > Cluster > Settings & Status* to manage the AP cluster function.

Choose a member type.

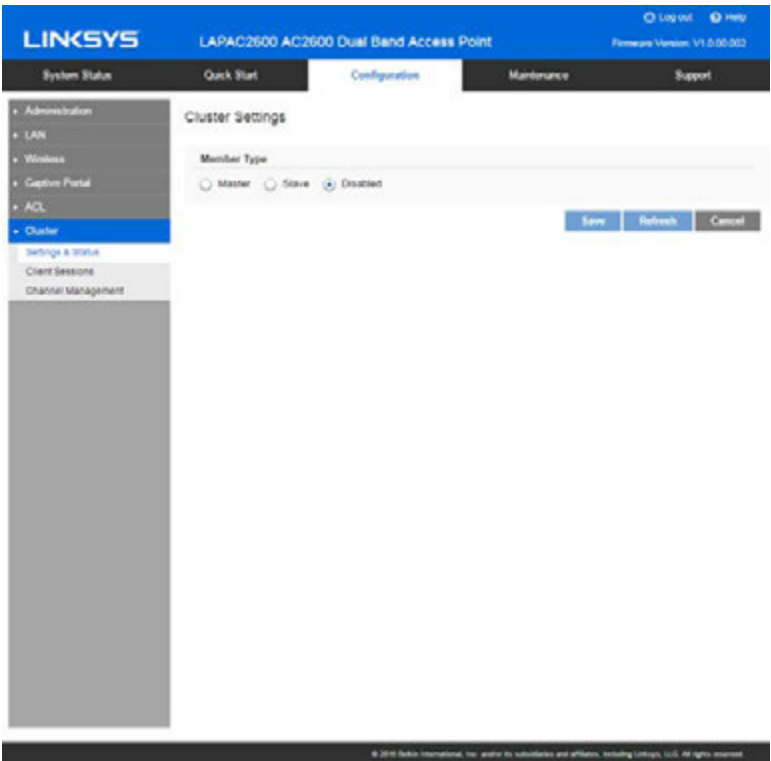

Type	Disabled—Disable the cluster function. Master—Enable the cluster function and assign the access point to be the master. Note— If system detects there is one Master already existed in the same cluster, the new access point that likes to become master will be assigned to slave automatically. Slave—Enable the cluster function and assign the access point to be the slave. Note—When the cluster function is enabled, WDS and workgroup bridge will be disabled automatically.
------	--

Master

LINKSYS

LAPAC2600 AC2600 Dual Band Access Point

Log Out Help

System Status

Quick Start

Configuration

Maintenance

Support

Administration

LAN

Wireless

Captive Portal

ACL

Cluster

Settings & Status

Client Sessions

Channel Management

Cluster Settings

Member Type

☒ Master ☐ Slave ☐ Disabled

Cluster Status

Status: Disabled

Member Number: 0

Cluster Settings

Location: (Range: 0-32 characters)

Cluster Name: (Range: 4-32 characters)

Cluster Members

Type	Location	MAC Address	IP Address	Firmware Version
------	----------	-------------	------------	------------------

Save Refresh Cancel

© 2014 Linksys. All rights reserved. Linksys, the Linksys logo, and all other marks contained herein are trademarks of Linksys Corporation or its affiliates in the United States and other countries.

Status	Disabled—Cluster function is disabled. Active—Cluster function is enabled and master is active. Active (Backup Master)—Cluster function is enabled and backup master is active. Inactive (Cannot reach the master)—Cluster function is enabled but it's inactive because device cannot reach the master.
Member Number	Number of the active members in the cluster. If an access point joins the cluster but is powered off or cannot reach the master, it is not counted.
Location (Optional)	Where the access point is physically located; for example, Reception. Length is from 0 to 32 bytes.
Cluster Name	Name of the cluster for the LAP device to join; for example, "lab cluster". All access points with the same cluster name belong to the same cluster. Length of this value is from 4 to 32 bytes and special characters are allowed. This is a mandatory field if the cluster function is turned on.
Backup Master	When an access point works as a cluster slave, it can be enabled as a backup master. When master gets offline, it will take the role of master. When the backup master begins to work, it will send advertisements and slaves will send keep-alive and report sessions to it. When shareable settings are modified in it, it will share them to all slaves. When master gets online again, this backup master AP will stop the master function and let original master AP take over master role.

Client Sessions

Go to *Configuration > Cluster > Client Sessions* to see the status of wireless clients within the cluster.

The screenshot displays the Linksys web interface for the LARAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration' (selected), 'Maintenance', and 'Support'. The left sidebar lists various configuration categories: Administration, LAN, Wireless, Captive Portal, ACL, Cluster (selected), Settings & Status, Client Sessions, and Channel Management. The main content area is titled 'Client Sessions' and features a table of 'Authenticated Clients'. The table has columns for AP IP, Location, SSID, User MAC, Online Time (Sec), Link Rate (Mbps), and Signal L (dBm). A 'Refresh' button is located below the table header. The footer of the interface contains the copyright notice: '© 2018 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

The session is the period of time in which a user on a client device (station) with a unique MAC address maintains a connection with the wireless network. The session begins when the WLAN client logs on to the network, and the session ends when the WLAN client either logs off intentionally or loses the connection for some other reason.

When one wireless client of Captive Portal roams from one access point to another in the same cluster, it need not re-authenticate.

IP Address	IP address of the access point to which the client connects.
Location	Location of the access point to which the client connects.
SSID	SSID name of the access point to which the client connects.
User MAC	MAC address of the client.
Online Time	Displays how long this client has been online since it is authenticated. Unit is second.
Link Rate	Indicates the link rate of the client. Unit is Mbps.
Signal	The signal strength of the client is displayed. Unit is dBm.
Rx Total	The total bytes which are received from the client by the access point. Unit is Byte.
Tx Total	The total bytes which are sent to the client by the access point. Unit is Byte.
Rx Rate	Current transfer rate of the data which are received from the client by the access point. Unit is Kbps.
Tx Rate	Current transfer rate of the data which are sent to the client by the access point. Unit is Kbps.

Channel Management

Go to *Configuration > Cluster > Channel Management* to manage the channel assignments for access points within a cluster.

LINKSYS LARAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.002

System Status Quick Start **Configuration** Maintenance Support

Administration
LAN
Wireless
Captive Portal
ACL
Cluster
Settings & Status
Client Sessions
Channel Management

Channel Management

Auto Channel

Auto Channel: ☐ Enable

Scan Date: Daily

Scan Time: 00 : 00 (Hour : Minute)

Scan Trigger: Immediately

Current Channels

Type	Location	IP Address	Wireless Radio	Status	Channel	Locked
------	----------	------------	----------------	--------	---------	--------

Save Refresh Cancel

© 2014 Linksys International, Inc. All rights reserved. All other trademarks and registered trademarks are the property of their respective owners.

When channel management is enabled, the access point automatically assigns radio channels within a cluster. Auto channel assignment reduces mutual interference (or interference with other access points outside of its cluster) and maximizes Wi-Fi bandwidth to help maintain efficient communication over the wireless network.

Auto Channel	
Auto Channel	Access point scans available Wi-Fi channels and changes the channel if better network performance is possible. Disabled by default.
Scan Day	Choose the day of the week when Auto Channel scans Wi-Fi channels. You may choose specific days or have the access point scan and select the best channel daily.
ScanTime	Choose the time of day when Auto Channel performs scan.
Scan Trigger	Because Auto Channel will change the channel if it finds a better one, you can choose when to allow a scan. • Immediately – Scan according to the day/time specified. • No Clients – Scan only if no clients are connected to the wireless radio. If there are clients connected, the access point will complete the Auto Channel operation the next scheduled time when no clients are connected.
Current Channels	
Type	Member type of the access point. It can be Master, Slave or Backup Master.
Location	Where the access point is physically located
IP Address	IP address of the access point.
Wireless Radio	1 stands for 2.4Ghz radio, and 2 stands for 5Ghz radio.
Status	Status of the wireless radio. It can be Active or Inactive.
Channel	Current channel number of the wireless radio.
Locked	Select if you feel the current channel is the best for that radio.

Chapter 4 - System Status

Status

System Summary

Go to *System Status > Status > System Summary* for status of the access point.

The screenshot displays the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes the Linksys logo, the device name, the firmware version (V1.0.00.003), and links for Log out and Help. Below this, a secondary navigation bar shows tabs for System Status, Quick Start, Configuration, Maintenance, and Support. The left sidebar under the 'Status' menu lists System Summary, LAN Status, Wireless Status, Wireless Clients, Statistics, and Log View. The main content area, titled 'System Summary', displays the following information:

Device SKU:	LAPAC2600
Firmware Version:	V1.0.00.003
Firmware Checksum:	77b1375e
Hardware Version:	V01
Local MAC Address:	B4:75:0E:19:9B:B2
Serial Number:	14J10507400128
Host Name:	lap999b2
System Up Time:	0 days, 2 hours, 40 minutes, 15 seconds
System Time:	2015/1/01 Thu 03:41:14 (-08:00)
Power Source:	Power Adaptor


A 'Refresh' button is located at the bottom right of the summary table. The footer of the page contains the copyright notice: © 2015 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

System Summary	
Device SKU	The SKU is often used to identify device model number and region.
Firmware Version	The version of the firmware currently installed.
Firmware Checksum	The checksum of the firmware running in the access point.
Hardware Version	The version of the hardware.
Local MAC Address	The MAC (physical) address of the wireless access point.
Serial Number	The serial number of the device.
Host Name	The host name assigned to the access point.
System Up Time	How long the system has been running since the last restart or reboot.
System Time	The current date and time.
Power Source	The power source of the access point. It can be Power over Ethernet (PoE) or Power Adapter. When two power sources are plugged in, Power Adaptor will be displayed.
LAG Status	Indicates the status of LAG (Link Aggregation). It can be "Inactive" or "Active" • When LAG is inactive, only one Ethernet port works at a given time. • LAG only works when link speed and duplex of the two Ethernet ports are the same and duplex must be Full. LACP does not support half-duplex. • LAG is based on 802.3ad LACP (Link Aggregation Control Protocol) so it works only when link ends of the two Ethernet ports of the Access Ports also support 802.3ad LACP and enable it.

Buttons	
Refresh	Click to update the data on the screen.

LAN Status

Go to *System Status > Status > LAN Status* to see settings and status of LAN interface.

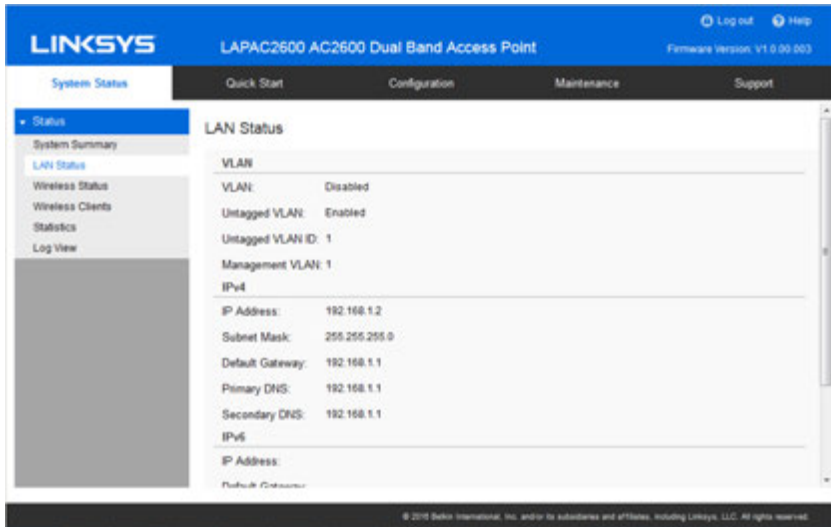

The screenshot displays the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes the Linksys logo, the device name, the firmware version (V1.0.00.003), and links for Log out and Help. Below this is a main navigation menu with System Status, Quick Start, Configuration, Maintenance, and Support. The left sidebar shows a tree view under the Status section, with LAN Status selected. The main content area displays the LAN Status page, which includes a table for VLAN settings and a section for IPv4 and IPv6 addresses.

VLAN	
VLAN:	Disabled
Untagged VLAN:	Enabled
Untagged VLAN ID:	1
Management VLAN:	1

IPv4

IP Address:	192.168.1.2
Subnet Mask:	255.255.255.0
Default Gateway:	192.168.1.1
Primary DNS:	192.168.1.1
Secondary DNS:	192.168.1.1

IPv6

IP Address:	
-------------	--

Refresh Configuration

© 2015 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

VLAN	
VLAN	Enabled or disabled (default).
Untagged VLAN	Enabled (default) or disabled. When enabled, and if its VLAN ID is equal to Untagged VLAN ID, all traffic is untagged when sent from LAN ports. Untagged traffic can be accepted by LAN ports. If disabled, traffic is always tagged when sent from LAN port and only tagged traffic can be accepted from LAN port. By default, all traffic on the access point uses VLAN 1, the default untagged VLAN. This means that all traffic is untagged until you disable the untagged VLAN, change the untagged traffic VLAN ID, or change the VLAN ID for a SSID.
Untagged VLAN ID	Displays the untagged VLAN ID. Traffic on the VLAN that you specify in this field is not be tagged with a VLAN ID when forwarded to the network. VLAN 1 is the default ID for untagged VLAN and management VLAN.
Management VLAN	Displays the Management VLAN ID. The VLAN associated with the IP address you use to connect to the access point. Provide a number between 1 and 4094 for the Management VLAN ID. The default is 1. This VLAN is also the default untagged VLAN. If you already have a management VLAN configured on your network with a different VLAN ID, you must change the VLAN ID of the management VLAN on the access point.

IPv4/v6	
IP Address	The IP address of the wireless access point.
Subnet Mask	The Network Mask (Subnet Mask) for the IP address above.
Default Gateway	Enter the gateway for the LAN segment to which the wireless access point is attached (the same value as the PCs on that LAN segment).
Primary DNS	The primary DNS address provided by the DHCP server or configured manually.
Secondary DNS	The secondary DNS address provided by the DHCP server or configured manually.

Wireless Status

Go to *System Status > Status > Wireless Status* to see settings and status of wireless radios and SSIDs.

The screenshot shows the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes links for Log out and Help. The main menu has tabs for System Status, Quick Start, Configuration, Maintenance, and Support. The left sidebar shows a tree view with Status selected, containing System Summary, LAN Status, Wireless Status (highlighted), Wireless Clients, Statistics, and Log View.

The main content area is titled "Wireless Status". It includes a "Select Your Radio" dropdown menu set to "Radio 1". Below this, the "Radio Status" section shows "Radio Status: Enabled" and "Mode: B/G/N-Mixed". Further down, it displays "Current Channel: 11" and "Channel Bandwidth: 20MHz".

The "SSID Status" section contains a table with the following data:

Interface	SSID Name	Status	MAC Address	VLAN ID	Priority	Scheduler State
SSID 1	LINKSYS24G	Enabled	04:75:0E:19:9B:B3	1	0	N/A
SSID 2		Disabled	06:75:0E:19:9B:B3	1	0	N/A
SSID 3		Disabled	10:75:0E:19:9B:B3	1	0	N/A
SSID 4		Disabled	26:75:0E:19:9B:B3	1	0	N/A
SSID 5		Disabled	36:75:0E:19:9B:B3	1	0	N/A


At the bottom of the page, a copyright notice reads: "© 2016 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved."

Radio Status	
Wireless Radio	Select the desired radio from the list. Radio 1 is for 2.4GHz, and Radio 2 is for 5GHz.
Radio Status	Indicates whether the radio is enabled.
Mode	Current 802.11 mode (a/b/g/n/ac) of the radio.
Channel	The channel currently in use.
Channel Bandwidth	Current channel bandwidth of the radio. When set to 20 MHz, only the 20 MHz channel is in use. When set to 20/40 MHz, Wireless-N connections will use 40 MHz channel, but Wireless-B and Wireless-G will still use 20 MHz channel.
SSID Status	
Interface	SSID index.
SSID Name	Name of the SSID.
Status	Status of the SSID: Enabled or Disabled.
MAC Address	MAC Address of the SSID.
VLAN ID	VLAN ID of the SSID.
Priority	The 802.1p priority of the SSID.
Scheduler State	• N/A—No scheduler is enabled on the SSID, or the SSID is disabled by administrator. • Active—The SSID is enabled. • Inactive—The SSID is disabled.

WDS Root	
Status	Status of the WDS Root: Enabled or Disabled.
Local SSID	Name of the WDS Root.
Local MAC	MAC Address of the WDS Root.
VLAN List	VLAN List of the WDS Root. When VLAN function is enabled, WDS Root only receives packets in the VLAN list from WDS Stations and packets not in the list will be dropped.
WDS Station	
Interface	The index of WDS Station.
Status	Status of the WDS Station: Enabled or Disabled.
Local MAC	MAC Address of the WDS Root.
Remote SSID	SSID of the destination access point which is on the other end of the WDS link to which data is sent or handed-off and from which data is received.
Remote MAC	MAC Address of the destination access point which is on the other end of the WDS link to which data is sent or handed-off and from which data is received.
Connection Status	Status of the WDS Station: Disabled, Connected or Not Connected.
Workgroup Bridge Status	
Status	Status of the Workgroup Bridge: Enabled or Disabled.
Local MAC	MAC address of the Workgroup Bridge.
Remote SSID	SSID of the destination access point on the other end of the Workgroup Bridge link to which data is sent and from which data is received.
Remote MAC	MAC address of the destination access point on the other end of the Workgroup Bridge link to which data is sent and from which data is received.
Connection Status	Status of the Workgroup Bridge: Disabled, Connected or Not Connected.

Wireless Clients

Go to *System Status > Status > Wireless Clients* to see connected clients based on each wireless interface.

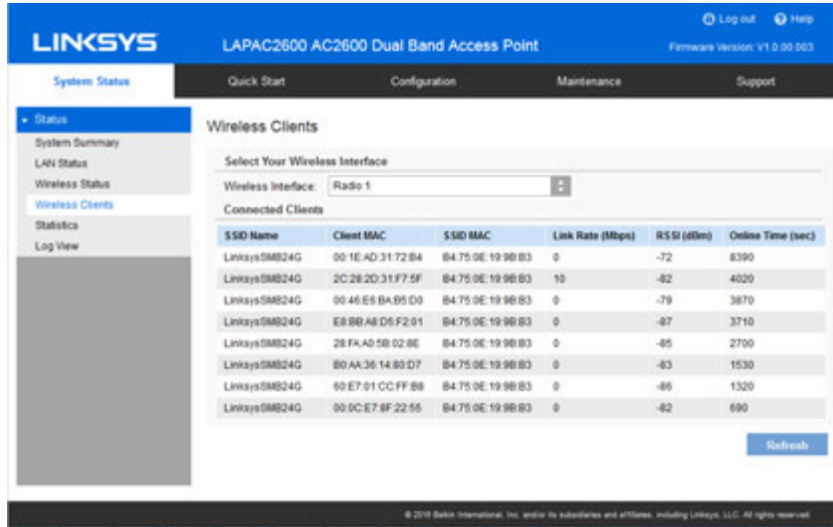

The screenshot shows the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes links for System Status, Quick Start, Configuration, Maintenance, and Support. The left sidebar shows the Status menu with options for System Summary, LAN Status, Wireless Status, Wireless Clients (selected), Statistics, and Log View. The main content area is titled 'Wireless Clients' and features a 'Select Your Wireless Interface' dropdown menu set to 'Radio 1'. Below this is a table of connected clients with the following data:

SSID Name	Client MAC	SSID MAC	Link Rate (Mbps)	RSSI (dBm)	Online Time (sec)
LinksysSMB24G	00 1E AD 31 72 B4	B4 75 0E 19 9B B3	0	-72	8390
LinksysSMB24G	2C 28 2D 31 F7 5F	B4 75 0E 19 9B B3	10	-82	4020
LinksysSMB24G	00 46 E5 B4 B5 D0	B4 75 0E 19 9B B3	0	-79	3870
LinksysSMB24G	E8 8B AB D5 F2 01	B4 75 0E 19 9B B3	0	-87	3710
LinksysSMB24G	28 FA AD 5B 02 8E	B4 75 0E 19 9B B3	0	-85	2700
LinksysSMB24G	80 AA 36 14 80 D7	B4 75 0E 19 9B B3	0	-83	1530
LinksysSMB24G	60 E7 01 CC FF 88	B4 75 0E 19 9B B3	0	-86	1320
LinksysSMB24G	00 DC E7 8F 22 55	B4 75 0E 19 9B B3	0	-82	690

A 'Refresh' button is located at the bottom right of the table.

Wireless Interface	Select the desired interface from the list. The interfaces include eight SSIDs per radio.
SSID Name	Name of the SSID to which the client connects.
Client MAC	The MAC address of the client.
SSID MAC	MAC of the SSID to which the client connects.
Link Rate	The link rate of the client. Unit is Mbps.
RSSI	The signal strength of the client. Unit is dBm.
Online Time	How long this client has been online. Unit is seconds.

Statistics

Go to *System Status > Status > Statistics* to see real-time statistics on data transmitted and received based on each SSID per Radio, and LAN interface.

The screenshot shows the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The 'Status' menu is selected, and the 'Statistics' sub-menu is active. The 'Interface Statistics' page is displayed, showing a table of statistics for various interfaces. The 'Wireless Radio' is set to 'Radio 1'.

Interface	Total Packets	Total Bytes	Total Dropped Packets	Total Dropped Bytes	Errors
LAN	84890	41,167,759	0	0	0
SSID 1	62,505	71,864,825	0	0	0
SSID 2	0	0	0	0	0
SSID 3	0	0	0	0	0
SSID 4	0	0	0	0	0
SSID 5	0	0	0	0	0
SSID 6	0	0	0	0	0
SSID 7	0	0	0	0	0
SSID 8	0	0	0	0	0
WDS Root	0	0	0	0	0

Wireless Radio

Select the desired radio from the list.


Radio 1 is for 2.4GHz, and Radio 2 is for 5GHz.

Transmit/Receive

- **Total Packets**—The total packets sent (in Transmit table) or received (in Received table) by the interface.
- **Total Bytes**—The total bytes sent (in Transmit table) or received (in Received table) by the interface.
- **Total Dropped Packets**—The total number of dropped packets sent (in Transmit table) or received (in Received table) by the interface.
- **Total Dropped Bytes**—The total number of dropped bytes sent (in Transmit table) or received (in Received table) by the interface.
- **Errors**—The total number of errors related to sending and receiving data on this interface.

Log View

Go to *System Status > Status > Log View* to see a list of system events such as login attempts and configuration changes.

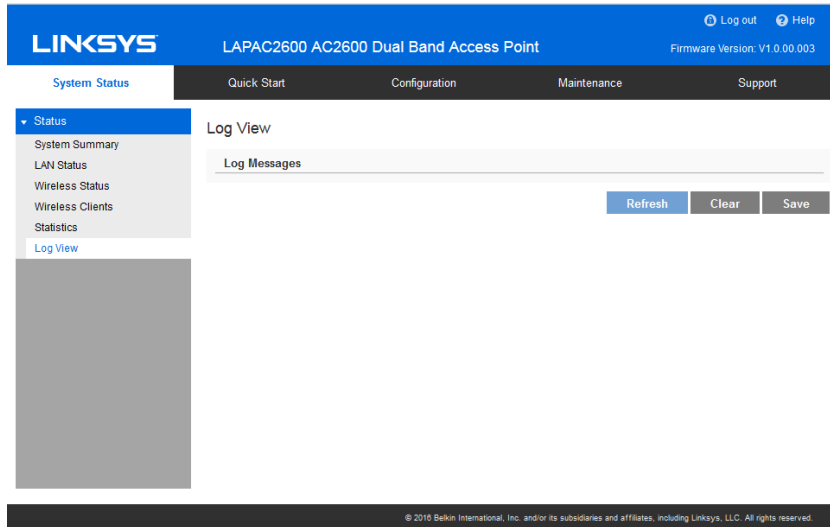

Log Messages	
Log Messages	Show the log messages.
Buttons	
Refresh	Update the data on screen.
Save	Save the log to a file on your PC.
Clear	Delete the existing logs from device.

Chapter 5 – Maintenance

Maintenance


Firmware Upgrade

Go to *Maintenance > Maintenance > Firmware Upgrade* to upgrade the firmware in the wireless access point by using HTTP/HTTPS, or TFTP.

Check the Linksys support website (<http://www.linksys.com/support>) and download the latest firmware release to a storage device or PC. Perform the firmware upgrade by following the steps below.

If an access point works as master of an AP cluster, all slaves within the same cluster will be updated, as well.

Do not power off the device or disconnect the Ethernet cable during the upgrade. The access point will reboot automatically after the upgrade is complete.

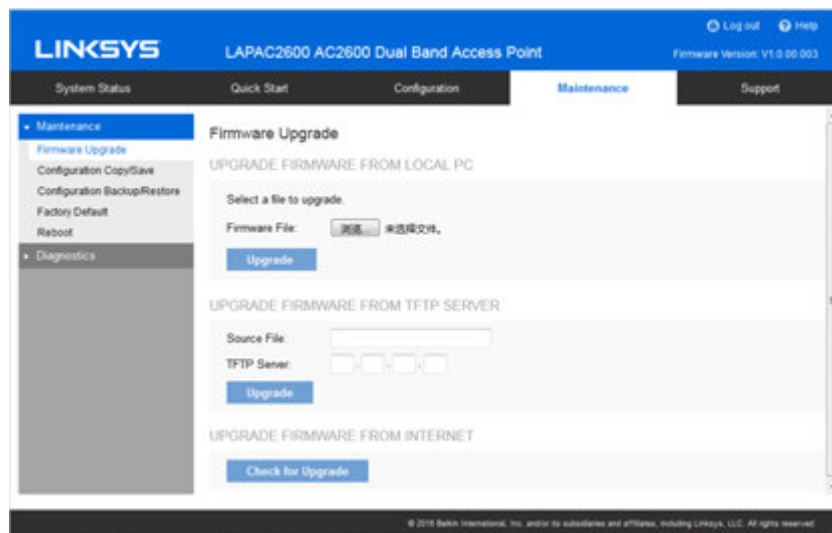

To perform the firmware upgrade from local PC:

1. Click **Choose File** to navigate to the location of the upgrade file.
2. Select the upgrade file. Its name will appear next to the **Choose File** button.
3. Click **Upgrade**.

To perform the firmware upgrade from TFTP server:

1. Enter the IP address of the TFTP server and the source file. The source file is the firmware filename you stored in your TFTP server. Only IPv4 addresses are supported.
2. Click **Upgrade**.

To perform a firmware upgrade from the Internet:

1. Click **Check for Upgrade** to see if there is new firmware available.
2. Click the **OK** on the popup dialogue box to start the firmware download and upgrade if a new version of firmware is available.

Configuration Copy/Save

Go to *Maintenance > Maintenance > Configuration Copy/Save* to copy configurations within the access point and delete copied configurations.

The screenshot displays the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The 'Maintenance' section is expanded, showing options like 'Firmware Upgrade', 'Configuration Copy/Save', 'Configuration Backup/Restore', 'Factory Default', and 'Reboot'. The 'Configuration Copy/Save' page is active, featuring a 'Configuration Files' section with 'CONFIGURATION FILES COPY/SAVE' options. Under 'Source File', 'Backup Configuration' is selected. Under 'Destination File', 'Backup Configuration' is also selected. 'Save' and 'Cancel' buttons are present. Below this is a 'CONFIGURATION FILES TABLE' with columns 'Configuration File Name' and 'Create Time'. It lists a 'Backup Configuration' file created on 20180422 09:22:19, with a checkbox and a 'Delete' button.

LINKSYS LAPAC2600 AC2600 Dual Band Access Point Firmware Version: V1.0.0.003

System Status Quick Start Configuration Maintenance Support

▼ Maintenance

- Firmware Upgrade
- Configuration Copy/Save
- Configuration Backup/Restore
- Factory Default
- Reboot

▼ Diagnostics

Configuration Files

CONFIGURATION FILES COPY/SAVE

Source File: ☒ Backup Configuration ☐ Current Configuration

Destination File: ☒ Backup Configuration ☐ Current Configuration

Save Cancel

CONFIGURATION FILES TABLE

Configuration File Name	Create Time
☐ Backup Configuration	20180422 09:22:19

Delete

© 2018 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

Configuration files copy/save	
Configuration Files	There are two kinds of configuration files in the access point. • Backup Configuration — An additional configuration file saved in the flash memory for use as a backup. • Current Configuration — The configuration which is running in the device currently. When device boots up, device will read the settings from this file.
Configuration Files Copy/Save	Copy configuration file from one to another. Source Configuration can be one of following: • Backup Configuration (if it exists) • Current Configuration Destination Configuration can be one following: • Backup Configuration • Current Configuration Need note that Source Configuration and Destination Configuration cannot be same and if you copy Backup Configuration to Current Configuration, device will reboot after the copy.
Configuration Files Table	
Configuration Files Name	Configuration files which are copied in the access point.
Create Time	Creating time of configuration files in the access point.

Configuration Backup/Restore

Go to *Maintenance > Maintenance > Configuration Backup/Restore* to download the configuration file from the device. You can save it to external storage, e.g., your PC, or network storage. You can also upload a previously saved configuration file from external storage to the device. It is highly recommended you save one extra copy of the configuration file to external storage after you are done with access point setup.


The screenshot shows the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance', and 'Support'. The 'Maintenance' tab is active, and the left sidebar shows 'Maintenance >' expanded, with 'Configuration Backup/Restore' selected. The main content area is titled 'Configuration Backup/Restore' and contains two sections: 'BACKUP/RESTORE TO/FROM LOCAL PC' and 'BACKUP/RESTORE TO/FROM TFTP SERVER'. The first section has 'Backup Configuration' and 'Restore Configuration' options, each with a 'Choose File' button and a 'Backup Configuration' dropdown. The second section has 'Backup Configuration to TFTP Server' and 'Restore Configuration from TFTP Server' options, each with a 'Source File' input, a 'Destination File' input, a 'TFTP Server' input, and a 'Backup' or 'Restore' button. The footer shows copyright information for 2018 Ruckus International, Inc.

Backup/Restore to/from Local PC	
Backup Configuration	Once you have the access point working properly, you should back up the settings to a file on your computer. You can later restore the access point's settings from this file, if necessary. To create a backup file of the current settings: • Choose a source file. It can be <i>Backup Configuration</i> or <i>Current Configuration</i>. • Click Backup. • If you don't have your browser set up to save downloaded files automatically, locate where you want to save the file, rename it if you like, and click Save.
Restore Configuration	To restore settings from a backup file: 1. Choose a destination file. It can be <i>Backup Configuration</i> or <i>Current Configuration</i>. 2. Click Choose File. 3. Locate and select the previously saved backup file. 4. Click Restore.
Backup/Restore to/from TFTP server	
Backup Configuration	To create a backup file of the current settings: 1. Choose a source file. It can be <i>Backup Configuration</i> or <i>Current Configuration</i>. 2. Enter the destination file name you plan to save in TFTP server. 3. Enter the IP address for the TFTP server. Only IPv4 addresses are supported. 4. Click Backup.

Restore Configuration	To restore settings from a backup file: 1. Choose a destination file and it can be <i>Backup Configuration</i> or <i>Current Configuration</i>. 2. Enter the source file name stored in TFTP server. 3. Enter the IP address for the TFTP server. Only IPv4 addresses are supported. 4. Click Restore.
------------------------------	---

Factory Default


It's highly recommended you save your current configuration file before you restore to factory default settings. To save your current configuration file, click *Maintenance > Configuration Backup/Restore*.

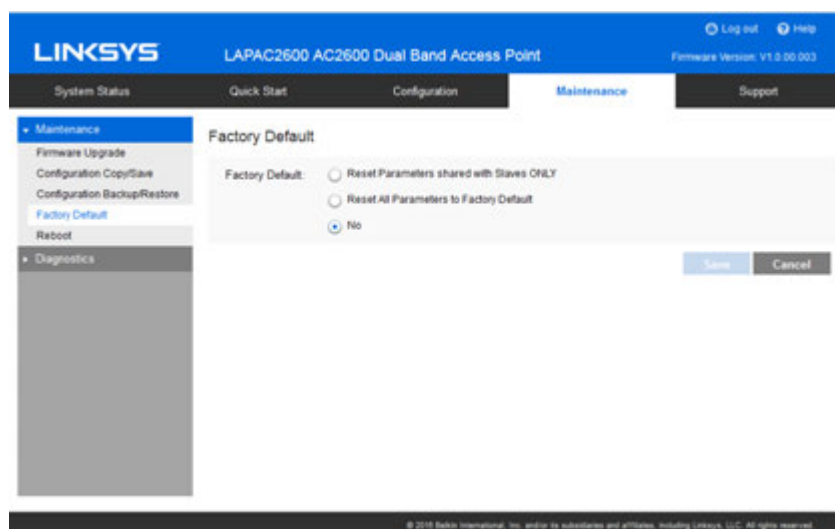

Factory Default	To restore your access point to its factory defaults, select an option and click Save. - Reset Parameters shared with Slaves ONLY When current AP is a master of a cluster, select this option to restore all sharable parameters of current AP and its slaves to factory defaults. Cluster settings and non-sharable parameters will not reset. - Reset All Parameters to Factory Default - No Don't restore to factory defaults.
------------------------	--

Reboot

Go to *Maintenance > Maintenance > Reboot* to power cycle the device. The current configuration file will remain after reboot.

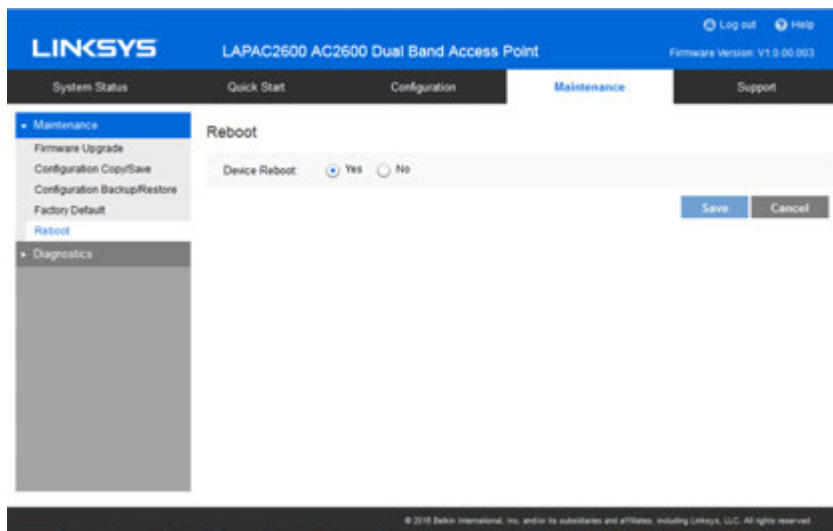

Device Reboot	If you click Save when the Yes radio button is selected, the device will power cycle.
----------------------	---

Diagnostics

Ping Test


Go to *Maintenance > Diagnostics > Ping Test* to determine the accessibility of a host on the network.

The screenshot shows the Linksys web interface for a LAPAC2600 AC2600 Dual Band Access Point. The top navigation bar includes 'System Status', 'Quick Start', 'Configuration', 'Maintenance' (selected), and 'Support'. The left sidebar shows 'Maintenance' and 'Diagnostics' (selected), with sub-items 'Ping Test', 'Packet Capture', and 'Diagnostic Log'. The main content area is titled 'Ping Test' and contains the following fields: 'IP Type' (set to IPv4), 'IP or Domain Name' (empty text box), 'Packet Size' (set to 32 bytes), 'Times to Ping' (set to 5 seconds), and a 'Ping Result' section with a large empty box. At the bottom right of the form are 'Start to Ping' and 'Stop' buttons. The footer of the interface states: '© 2015 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

General	
IP Type	Enter the IP type of destination address.
IP or URL Address	Enter the IP address or domain name that you want to ping.
Packet Size	Enter the size of the packet.
Times to Ping	Select the desired number from the drop-list. • 5 • 10 • 15 • Unlimited

Packet Capture


Go to *Maintenance > Diagnostics > Packet Capture* to capture and store 802.3 packets received and transmitted by the access point based on one specified network interface. The network interface can be radio, SSID or LAN.

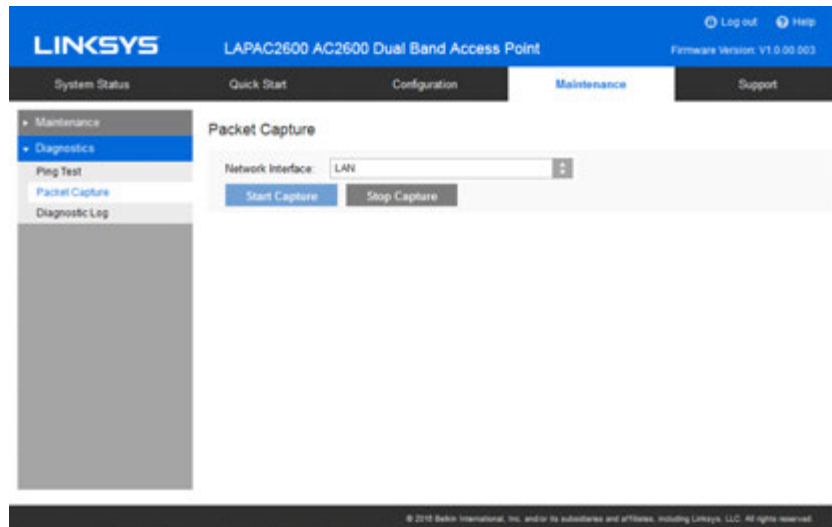

Network Interface	Select the desired network interface from the drop-down list. The interface can be Radio, SSID or Ethernet.
Start Capture	Click to start the capture. You will be asked to specify a local file to store the packets.
Stop Capture	Click to stop the capture.

Diagnostic Log

Go to *Maintenance > Diagnostics > Diagnostic Log* to get system detail information, such as configuration file, system status and statistics data, hardware information, operational status. The information is useful in troubleshooting and working with technical support.

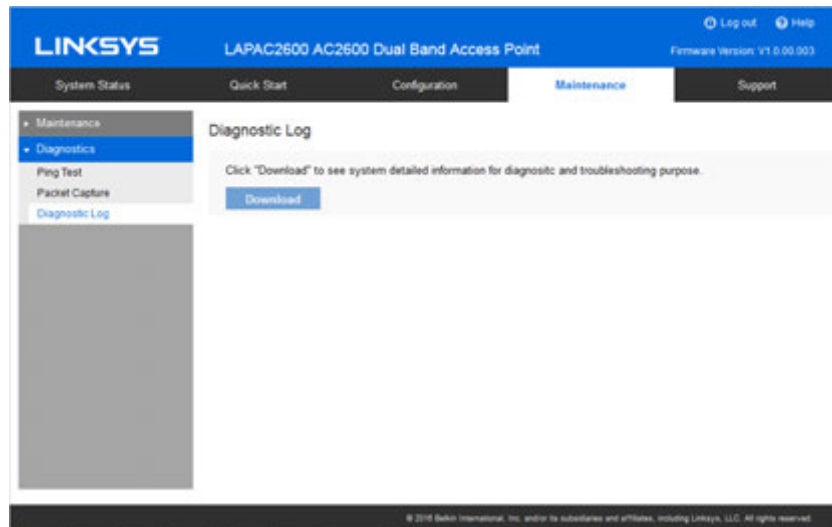

Click **Download** to download the device diagnostic log into a local file.

Appendix A - Troubleshooting

Overview

This chapter covers some common problems encountered while using the wireless access point, and some possible solutions to them. If you follow the suggested steps and the wireless access point still does not function properly, contact your dealer for further advice.

General Problems


I can't find new access point on my network.

Check the following:

- The wireless access point is properly installed, LAN connections are OK, and it is powered ON. Check the LEDs for system and port status.
- Ensure that your PC and the wireless access point are on the same network segment. (If you don't have a router, this must be the case.)
- You can use the following method to determine the IP address of the wireless access point, and then try to connect using the IP address, instead of the name.

To find the access point's IP address:

1. Open a MS-DOS Prompt or Command Prompt Window.
2. Use the Ping command to ping the wireless access point. Enter "ping" followed by the default name of the wireless access point. Default name is "lap" followed by the last five characters of device MAC address (e.g., ping lap964d6).
3. Check the output of the ping command to determine the IP address of the wireless access point, as shown below.

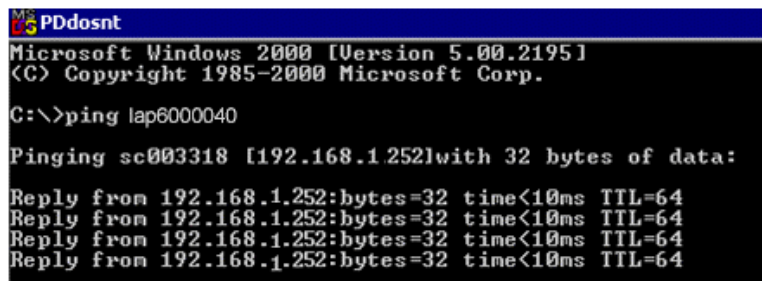

```
Microsoft Windows [Version 5.00.2195]
(C) Copyright 1985-2000 Microsoft Corp.

C:\>ping lap6000040

Pinging sc003318 [192.168.1.252] with 32 bytes of data:

Reply from 192.168.1.252: bytes=32 time<10ms TTL=64
Reply from 192.168.1.252: bytes=32 time<10ms TTL=64
Reply from 192.168.1.252: bytes=32 time<10ms TTL=64
Reply from 192.168.1.252: bytes=32 time<10ms TTL=64
```

If your PC uses a fixed (static) IP address, ensure that it is using an IP address that is in the network segment (subnet) with the wireless access point. On Windows PCs, you can use Control Panel > Network to check the properties for the TCP/IP protocol.

If there is no DHCP Server found, the wireless access point will roll back to an IP address and mask of 192.168.1.252 and 255.255.255.0.

My PC can't connect to the LAN via the wireless access point.

Check the following:

- The SSID and security settings on the PC match the settings on the access point.
- On the PC, the wireless mode is set to Infrastructure.
- If using the Access Control feature, the PC's name and address is in the Trusted Stations list.
- If using 802.1x mode, ensure the PC's 802.1x software is configured correctly. See Appendix C([p. 122](#)) for details of setup for the Windows XP 802.1x client. If using a different client, refer to the vendor's documentation.

Appendix B - About Wireless LANs

Overview

Wireless networks have their own terms and jargon. You must understand many of these terms in order to configure and operate a wireless LAN.

Wireless LAN Terminology

Modes

Wireless LANs can work in either of two (2) modes:

- Ad-hoc
- Infrastructure

Ad-hoc Mode

Ad-hoc Mode does not require an access point or a wired (Ethernet) LAN. Wireless stations, e.g., notebook PCs with wireless cards, communicate directly with each other.

Infrastructure Mode

In Infrastructure Mode, one or more access points are used to connect wireless stations, e.g., notebook PCs with wireless cards, to a wired (Ethernet) LAN. The wireless stations can then access all LAN resources.

Note—Access points can only function in Infrastructure Mode, and can communicate only with wireless stations that are set to Infrastructure Mode.

SSID/ESSID

BSS/SSID

A group of wireless stations and a single access point, all using the same ID (SSID), form a Basic Service Set (BSS).

Using the same SSID is essential. Devices with different SSIDs are unable to communicate with each other.

ESS/ESSID

A group of wireless stations, and multiple access points all using the same ID (ESSID), form an Extended Service Set (ESS).

Different access points within an ESS can use different channels. To reduce interference, it is recommended that adjacent access points use different channels.

As wireless stations are physically moved through the area covered by an ESS, they will automatically change to the access point that has the least interference or best performance.

Channels

- The wireless channel sets the radio frequency used for communication.
- Access points use a fixed channel. You can select the channel used. This allows you to choose a channel that provides the least interference and best performance. For USA and Canada, the following channels are available:
 - 2.4GHz:
 - to 2.462 GHz; 11 channels
 - 5GHz:
 - 5.180 to 5.240 GHz; 4 channels
 - 5.745 to 5.825 GHz; 5 channels
- When using multiple access points it is better if adjacent access points use different channels to reduce interference. The recommended channel spacing between adjacent access points is five channels, e.g., use Channels 1 and 6, or 6 and 11.
- In Infrastructure Mode wireless stations normally scan all channels looking for an access point. If more than one access point can be used, the one with the strongest signal is used. (This can only happen within an ESS.)
- If using Ad-hoc Mode (no access point) all wireless stations should be set to use the same channel. However, most wireless stations will still scan all channels to see if there is an existing Ad-hoc group they can join.

WEP

WEP (Wired Equivalent Privacy) is a standard for encrypting data before it is transmitted. This is desirable because it is impossible to prevent snoopers from receiving any data which is transmitted by your wireless stations. If the data is encrypted, it is meaningless unless the receiver can decrypt it.

If WEP is used, the wireless stations and the wireless access point must have the same settings.

WPA-PSK

In WPA-PSK, like WEP, data is encrypted before transmission. WPA is more secure than WEP. The PSK (pre-shared key) must be entered on each wireless station. The 256-bit encryption key is derived from the PSK, and changes frequently.

WPA2-PSK

This is a further development of WPA-PSK, and offers even greater security, using the AES (Advanced Encryption Standard) method of encryption. It should be used if possible.

WPA-Enterprise

This version of WPA requires a RADIUS server on your LAN to provide the client authentication according to the 802.1X standard. Data transmissions are encrypted using the WPA standard.

If this option is used:

- The access point must have a client login on the RADIUS server.
- Each user must have a user login on the RADIUS server.
- Each user's wireless client must support 802.1X and provide the login data when required.

All data transmission is encrypted using the WPA standard. Keys are automatically generated, so no key input is required.

WPA2-Enterprise

This version of WPA2 requires a RADIUS server on your LAN to provide the client authentication according to the 802.1X standard. Data transmissions are encrypted using the WPA2 standard.

If this option is used:

- The access point must have a client login on the RADIUS server.
- Each user must have a user login on the RADIUS server.
- Each user's wireless client must support 802.1X and provide the login data when required.

All data transmission is encrypted using the WPA2 standard. Keys are automatically generated, so no key input is required.

802.1x

This uses the 802.1X standard for client authentication, and WEP for data encryption. If possible, you should use WPA-Enterprise instead, because WPA encryption is much stronger than WEP encryption.

If this option is used:

- The access point must have a client login on the RADIUS server.
- Each user must have a user login on the RADIUS server.
- Each user's wireless client must support 802.1X and provide the login data when required.
- All data transmission is encrypted using the WEP standard. You only have to select the WEP key size; the WEP key is automatically generated.

Appendix C - PC and Server Configuration

Overview

All wireless stations need to have settings that match the wireless access point. These settings depend on the mode in which the access point is being used.

- If using WEP or WPA2-PSK, it is only necessary to ensure that each wireless station's settings match those of the wireless access point, as described below.
- For 802.1x modes, configuration is much more complex. The RADIUS server must be configured correctly, and setup of each wireless station is also more complex.

Using WEP

For each of the following items, each wireless station must have the same settings as the wireless access point.

Mode	On each PC, the mode must be set to Infrastructure.
SSID (ESSID)	This must match the value used on the wireless access point. The default value is LinksysSMB24Gfor radio 1 and LinksysSMB5G for radio 2. Note—<i>The SSID is case sensitive.</i>
Wireless Security	• Each wireless station must be set to use WEP data encryption. • The key size (64 bit, 128 bit) must be set to match the access point. • The key values on the PC must match the key values on the access point. Note—<i>One set of WEP keys is supported per radio.</i>

Using WPA2-PSK

For each of the following items, each wireless station must have the same settings as the wireless access point.

Mode	On each PC, the mode must be set to Infrastructure.
SSID (ESSID)	This must match the value used on the wireless access point. The default value is LinksysSMB24Gfor radio 1 and LinksysSMB5Gfor radio 2. Note—<i>The SSID is case sensitive.</i>
Wireless Security	On each client, wireless security must be set to WPA2-PSK. • The pre-shared key entered on the access point must also be entered on each wireless client. • The encryption method (e.g. TKIP, AES) must be set to match the access point.

Using WPA2-Enterprise

This is the most secure and most complex system.

WPA-Enterprise mode provides greater security and centralized management, but it is more complex to configure.

Wireless Station Configuration

For each of the following, wireless stations must have the same settings as the wireless access point.

Mode	On each PC, the mode must be set to Infrastructure.
SSID (ESSID)	This must match the value used on the wireless access point. The default value is LinksysSMB24Gfor radio 1 and LinksysSMB5Gfor radio 2. <i>Note—The SSID is case sensitive.</i>
802.1x Authentication	Each client must obtain a certificate for authentication for the RADIUS server.
802.1x Encryption	Typically, EAP-TLS is used. This is a dynamic key system, so keys do NOT have to be entered on each wireless station. You can also use a static WEP key (EAP-MD5). The wireless access point supports both methods simultaneously.

RADIUS Server Configuration

If using WPA2-Enterprise mode, the RADIUS server on your network must be configured as follows:

- It must provide and accept certificates for user authentication.
- There must be a client login for the wireless access point itself.
- The wireless access point will use its default name as its client login name. (However, your RADIUS server may ignore this and use the IP address instead.)
- The Shared Key, set on the Security screen of the access point, must match the Shared Secret value on the RADIUS server.
- Encryption settings must be correct.

802.1x Server Setup (Windows 2000 Server)

This section describes using Microsoft Internet Authentication Server as the RADIUS server, since it is the most common RADIUS server available that supports the EAP-TLS authentication method.

The following services on the Windows 2000 Domain Controller (PDC) are also required.


- dhcpcd
- dns
- rras
- webserver (IIS)
- RADIUS Server (Internet Authentication Service)
- Certificate Authority

Windows 2000 Domain Controller Setup


1. Run dcpromo.exe from the command prompt.
2. Follow all of the default prompts, ensure that DNS is installed and enabled during installation.

Services Installation


1. Select the *Control Panel > Add/Remove Programs*.
2. Click Add/Remove Windows Components from the left side.
3. Ensure that the following components are selected.
 - Certificate Services—After enabling this, you will see a warning that the computer cannot be renamed and joined after installing certificate services. Select Yes to select certificate services and continue
 - World Wide Web Server—Select World Wide Web Server on the Internet Information Services (IIS) component.
 - From the Networking Services category, select Dynamic Host Configuration Protocol (DHCP), and Internet Authentication Service (DNS should already be selected and installed).

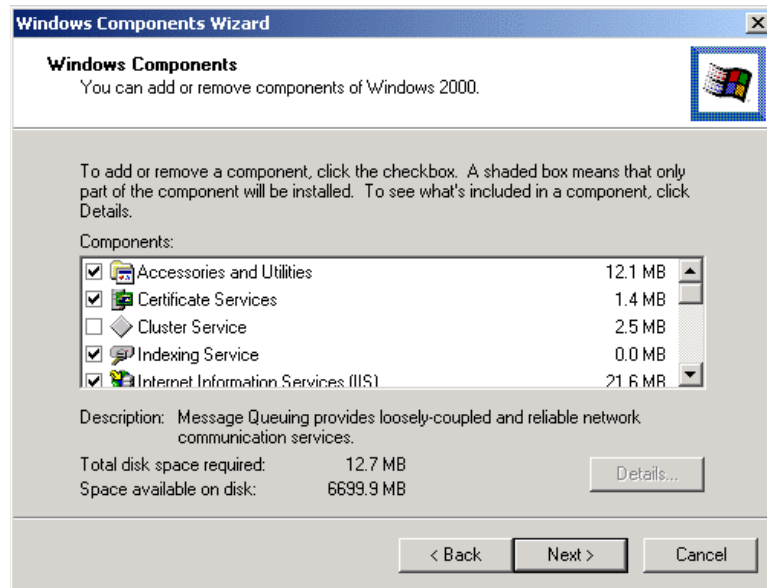

4. Click **Next**.
5. Select Enterprise root CA, and click **Next**.

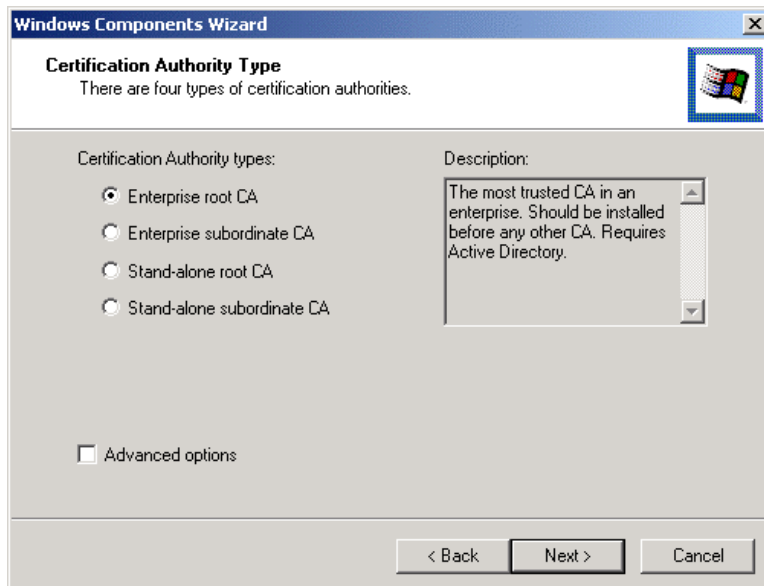

6. Enter the information for the Certificate Authority, and click **Next**.

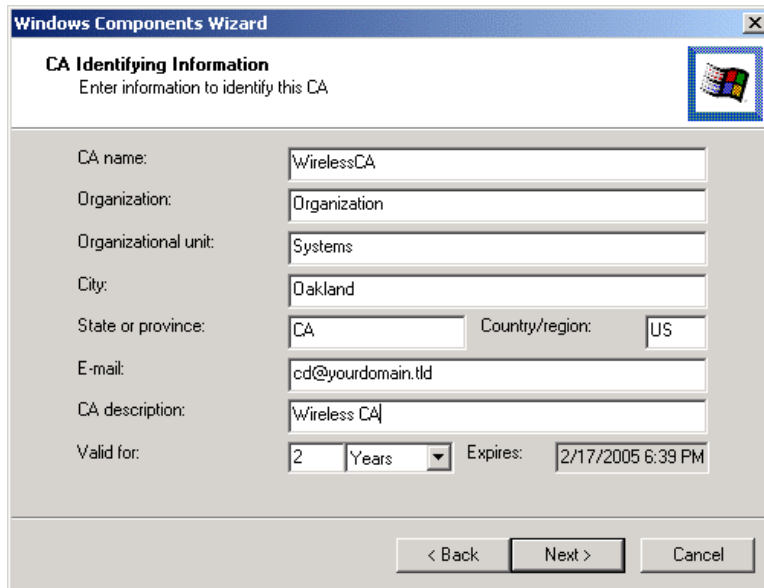

Windows Components Wizard

CA Identifying Information
Enter information to identify this CA

CA name: WirelessCA

Organization: Organization

Organizational unit: Systems

City: Oakland

State or province: CA Country/region: US

E-mail: cd@yourdomain.tld

CA description: Wireless CA


Valid for: 2 Years Expires: 2/17/2005 6:39 PM

< Back Next > Cancel

7. Click **Next** if you don't want to change the CA's configuration data.
8. Installation will warn you that Internet Information Services are running, and must be stopped before continuing. Click **OK**, then **Finish**.


DHCP server configuration

1. Click on *Start > Programs > Administrative Tools > DHCP*.
2. Right-click on the server entry, and select **New Scope**.

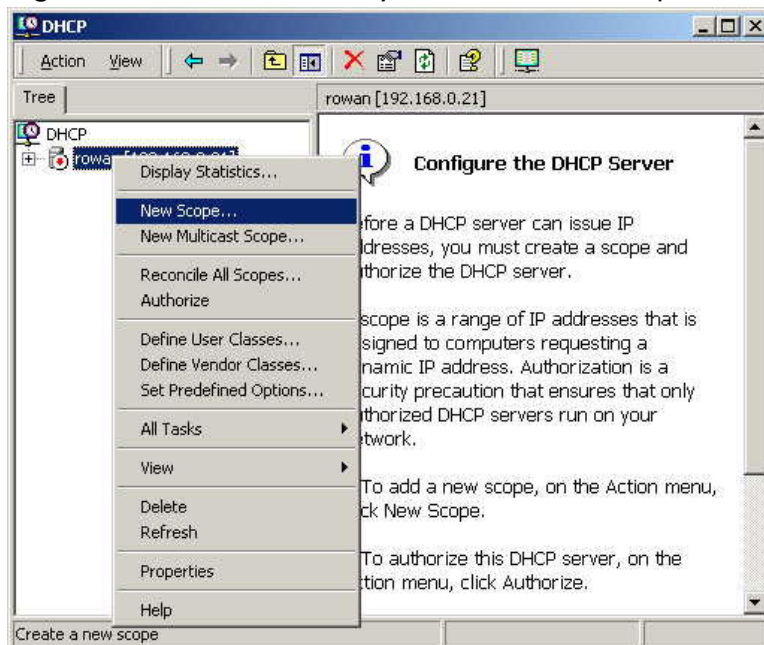


3. Click **Next** when the New Scope Wizard Begins.
4. Enter the name and description for the scope, click **Next**.

5. Define the IP address range. Change the subnet mask if necessary. Click **Next**.

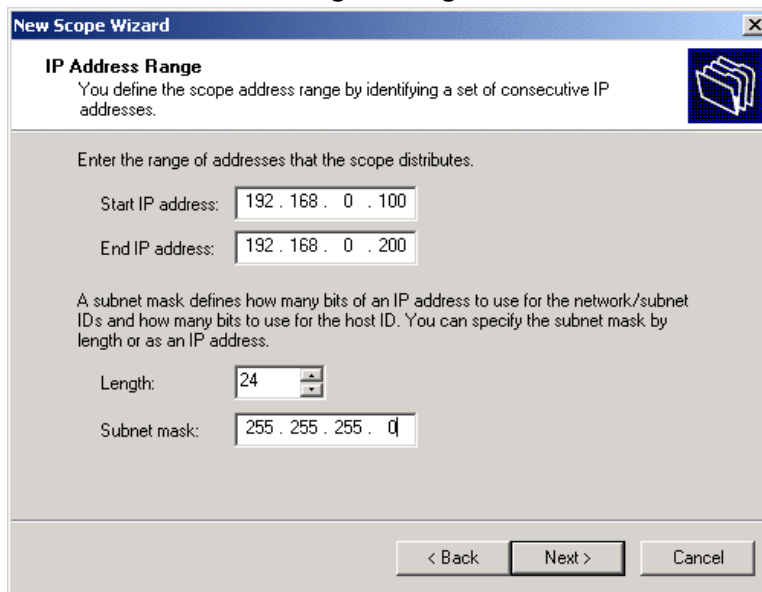

The screenshot shows the 'New Scope Wizard' window, specifically the 'IP Address Range' step. The window title is 'New Scope Wizard'. Below the title bar, there's a section header 'IP Address Range' and a description: 'You define the scope address range by identifying a set of consecutive IP addresses.' To the right of this text is a folder icon. The main area contains the instruction 'Enter the range of addresses that the scope distributes.' followed by two input fields: 'Start IP address:' with the value '192 . 168 . 0 . 100' and 'End IP address:' with the value '192 . 168 . 0 . 200'. Below these is a paragraph explaining subnet masks. Then, there's a 'Length:' field with a value of '24' and a 'Subnet mask:' field with the value '255 . 255 . 255 . 0'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

6. Add exclusions in the address fields if required. If no exclusions are required, leave it blank. Click **Next**.
7. Change the Lease Duration time if preferred. Click **Next**.
8. Select Yes, I want to configure these options now, and click **Next**.
9. Enter the router address for the current subnet. The router address may be left blank if there is no router. Click **Next**.
10. For the parent domain, enter the domain you specified for the domain controller setup, and enter the server's address for the IP address. Click **Next**.

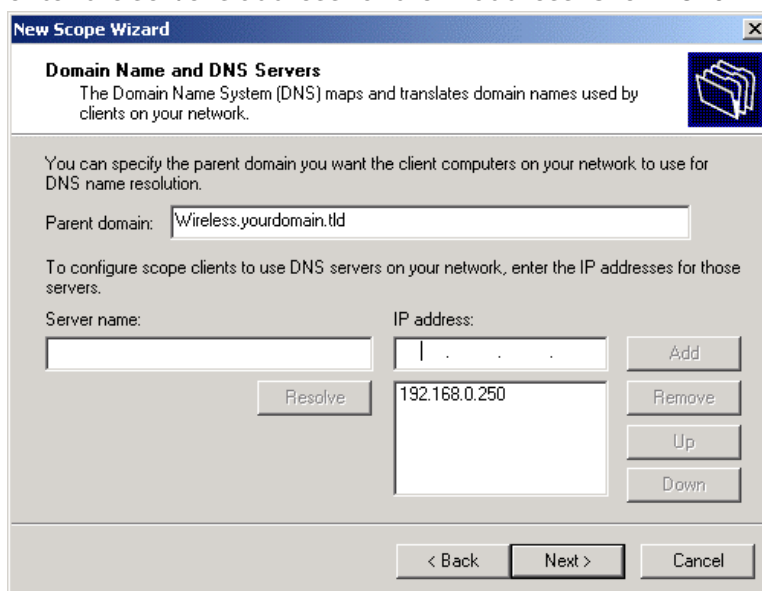


The screenshot shows the 'New Scope Wizard' window, specifically the 'Domain Name and DNS Servers' step. The window title is 'New Scope Wizard'. Below the title bar, there's a section header 'Domain Name and DNS Servers' and a description: 'The Domain Name System (DNS) maps and translates domain names used by clients on your network.' To the right of this text is a folder icon. The main area contains the instruction 'You can specify the parent domain you want the client computers on your network to use for DNS name resolution.' followed by a 'Parent domain:' field with the value 'Wireless.yourdomain.tld'. Below this is a paragraph explaining DNS servers. Then, there's a table with two columns: 'Server name:' and 'IP address:'. The 'Server name:' column has an empty input field. The 'IP address:' column has a list of IP addresses, with '192.168.0.250' currently selected. To the right of the table are buttons: 'Add', 'Remove', 'Up', and 'Down'. Below the table is a 'Resolve' button. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'.

11. If you don't want a WINS server, just click **Next**.
12. Select Yes, I want to activate this scope now. Click **Next**, then **Finish**.

13. Right-click on the server, and select Authorize. It may take a few minutes to complete.

Certificate Authority Setup


1. Select *Start > Programs > Administrative Tools > Certification Authority*.
2. Right-click *Policy Settings*, and select *New > Certificate to Issue*.

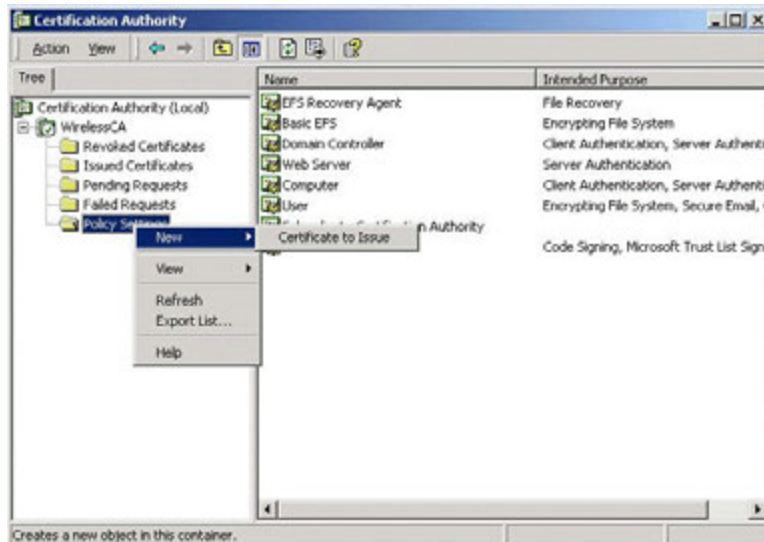


3. Select *Authenticated Session* and *Smartcard Logon* (select more than one by holding down the Ctrl key). Click **OK**.




4. Select *Start > Programs > Administrative Tools > Active Directory Users and Computers*.
5. Right-click on your active directory domain, and select *Properties*.

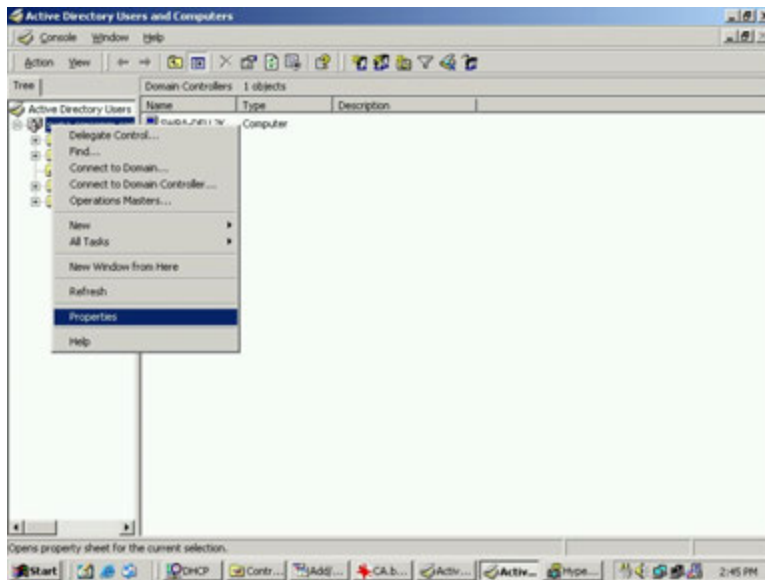

6. Select the *Group Policy* tab, choose *Default Domain Policy* then click **Edit**.

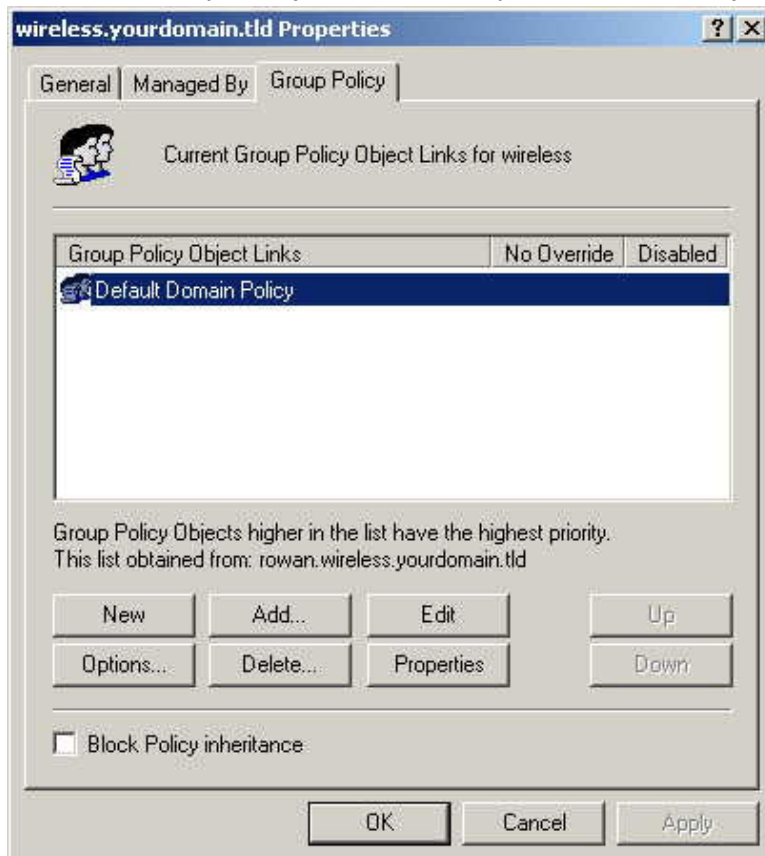

7. Select *Computer Configuration > Windows Settings > Security Settings > Public Key Policies*, right-click *Automatic Certificate Request Settings > New > Automatic Certificate Request*.

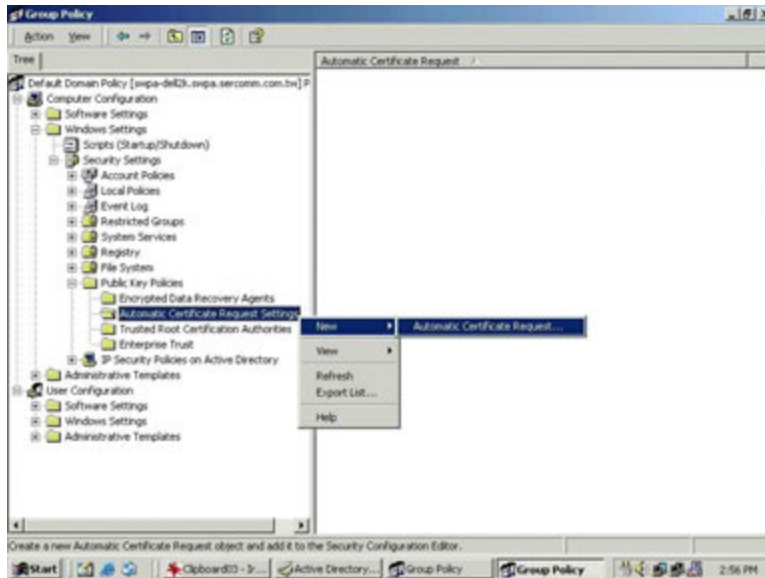


8. When the Certificate Request Wizard appears, click **Next**.
9. Select **Computer**, click **Next**.




10. Ensure that your *Certificate Authority* is checked, click **Next**.
11. Review the policy change information and click **Finish**.
12. Click *Start>Run*, type "cmd" and press **Enter**. Enter "secdit /refreshpolicy machine_policy". This command may take a few minutes to take effect.

Internet Authentication Service (RADIUS) Setup


1. Select *Start > Programs > Administrative Tools > Internet Authentication Service*.
2. Right-click on *Clients*, and select *New Client*.

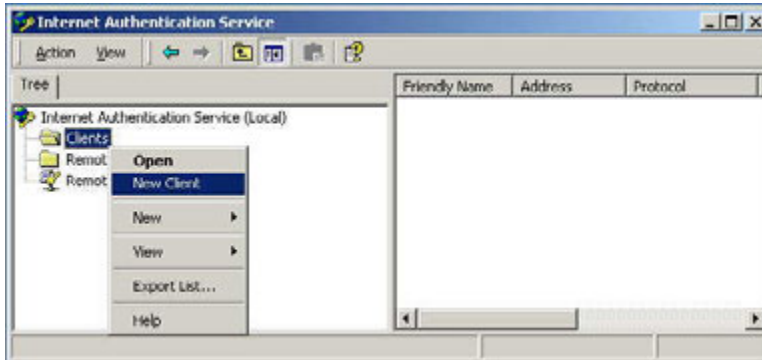

3. Enter a name for the access point, click **Next**.
4. Enter the address or name of the wireless access point, and set the shared secret, as entered on the Security Settings of the wireless access point.
5. Click **Finish**.
6. Right-click on *Remote Access Policies*, select *New Remote Access Policy*.
7. Assuming you are using EAP-TLS, name the policy "eap-tls", and click **Next**.
8. Click **Add...**
If you don't want to set any restrictions and a condition is required, select *Day-And-Time-Restrictions*, and click **Add...**

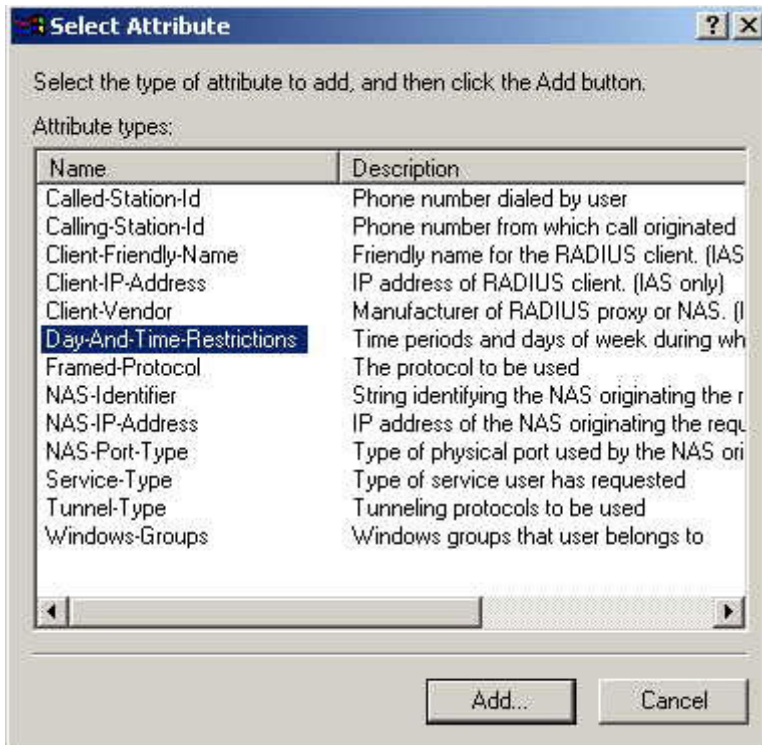


9. Click **Permitted**, then **OK**. Select **Next**.
10. Select *Grant remote access permission*. Click **Next**.
11. Click **Edit Profile...** and select the Authentication tab. Enable Extensible Authentication Protocol, and select Smart Card or other Certificate. Deselect other authentication methods listed. Click **OK**.

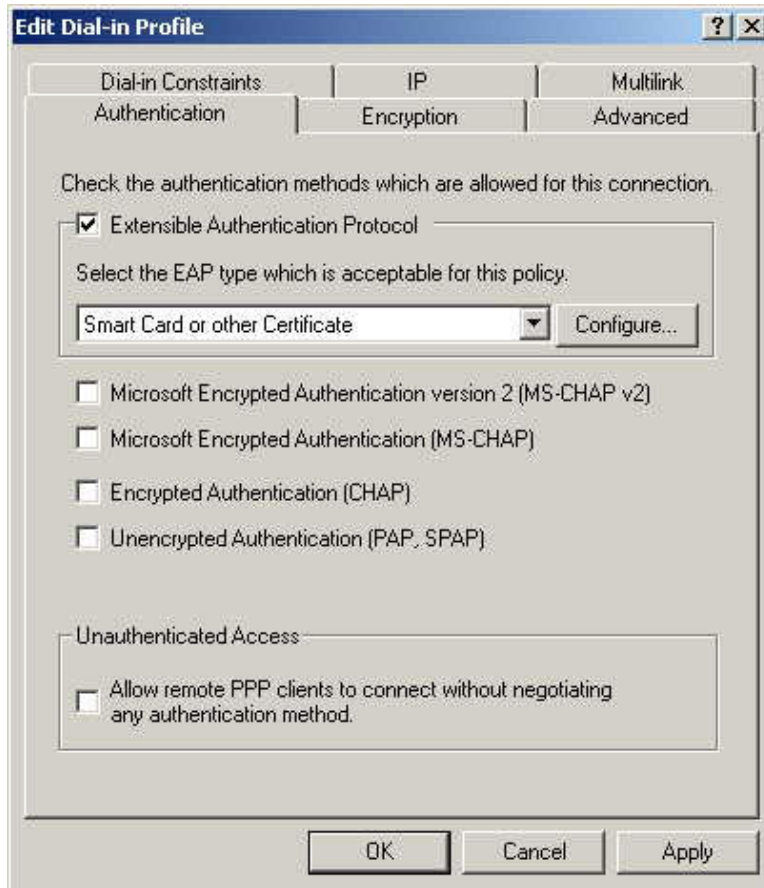

12. Select No if you don't want to view the help for EAP. Click **Finish**.

Remote Access Login for Users

1. Select *Start > Programs > Administrative Tools > Active Directory Users and Computers*.
2. Double-click on the user who you want to enable.
3. Select the *Dial-in* tab, and enable *Allow access*. Click **OK**.

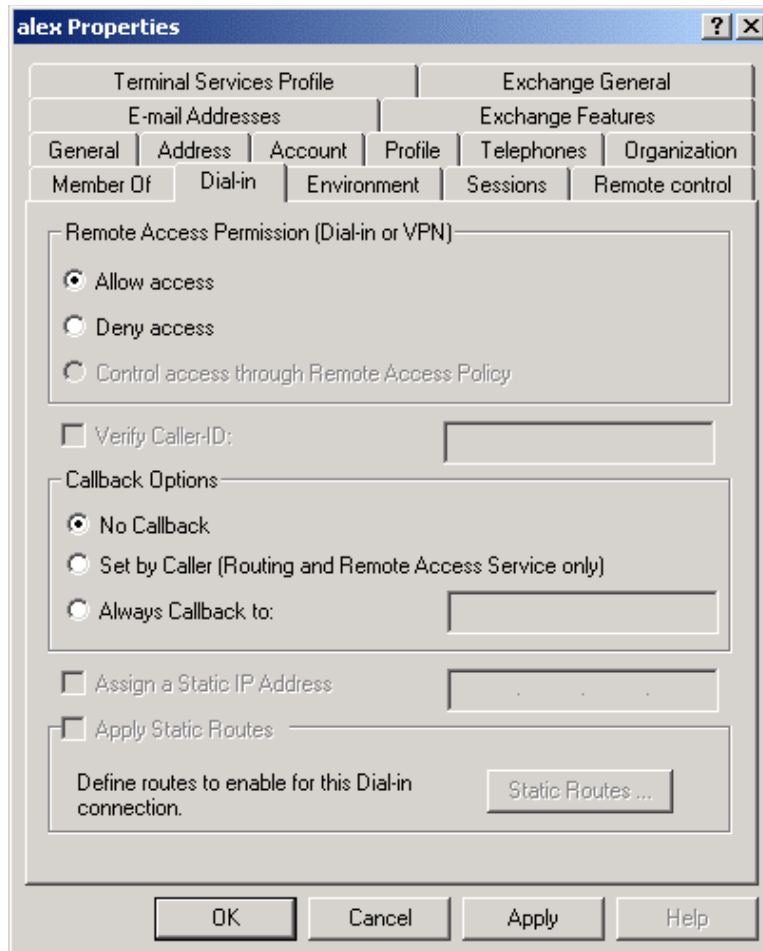

802.1x Client Setup on Windows XP

Windows XP ships with a complete 802.1x client implementation. If using Windows 2000, you can install SP3 (Service Pack 3) to gain the same functionality.

If you don't have either of these systems, you must use the 802.1x client software provided with your wireless adapter. Refer to your vendor's documentation for setup instructions.

The following instructions assume:


- You are using Windows XP.
- You are connecting to a Windows 2000 server for authentication.
- You already have a login (Username and password) on the Windows 2000 server.

Client Certificate Setup


1. Connect to a network that doesn't require port authentication.
2. Start your Web browser. In the address box, enter the IP address of the Windows 2000 Server, followed by "/certsrv", e.g., "<http://192.168.0.2/certsrv>".
3. You will be prompted for a user name and password. Enter the *User name* and *Password* assigned to you by your network administrator, and click **OK**.




4. On the first screen (below), select *Request a certificate*, click **Next**.

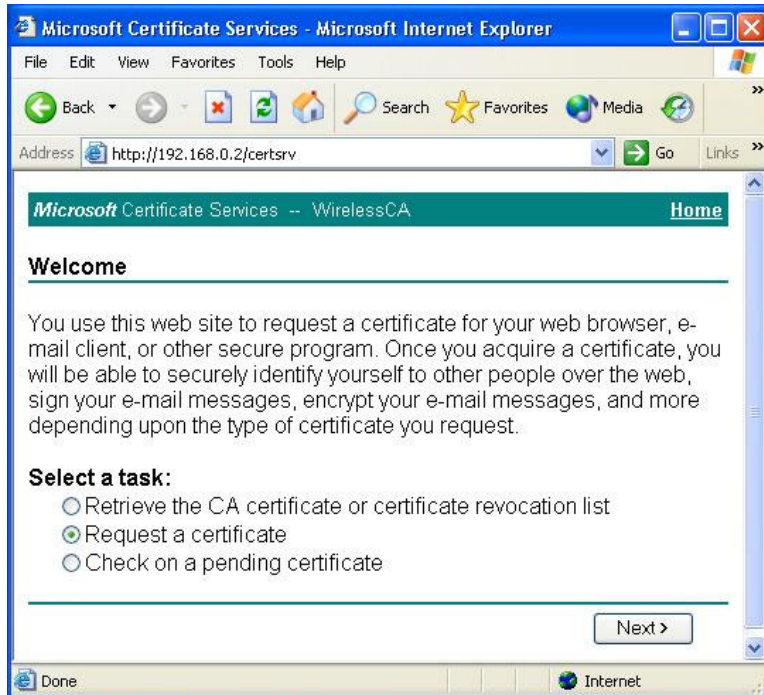


5. Select *User certificate request* and select *User Certificate*, click **Next**.

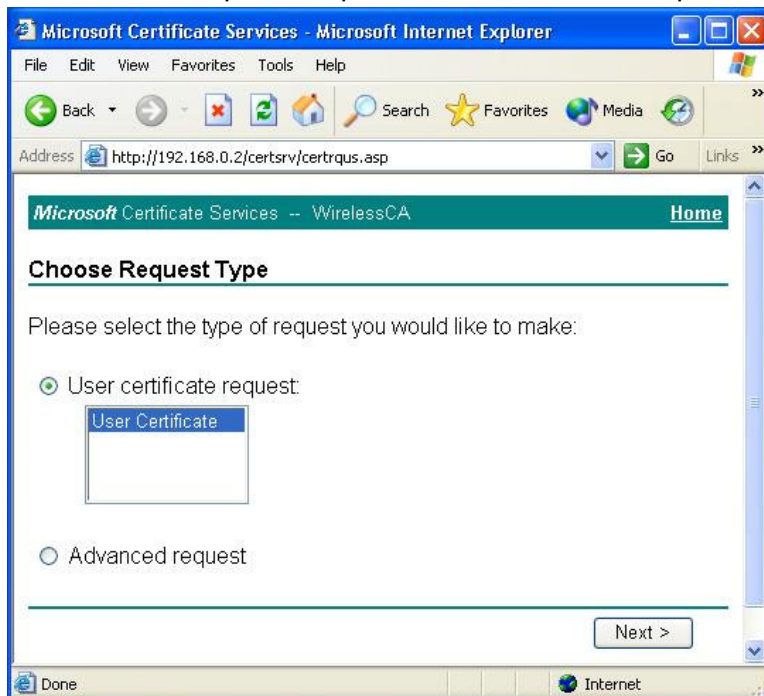

6. Click **Submit**.

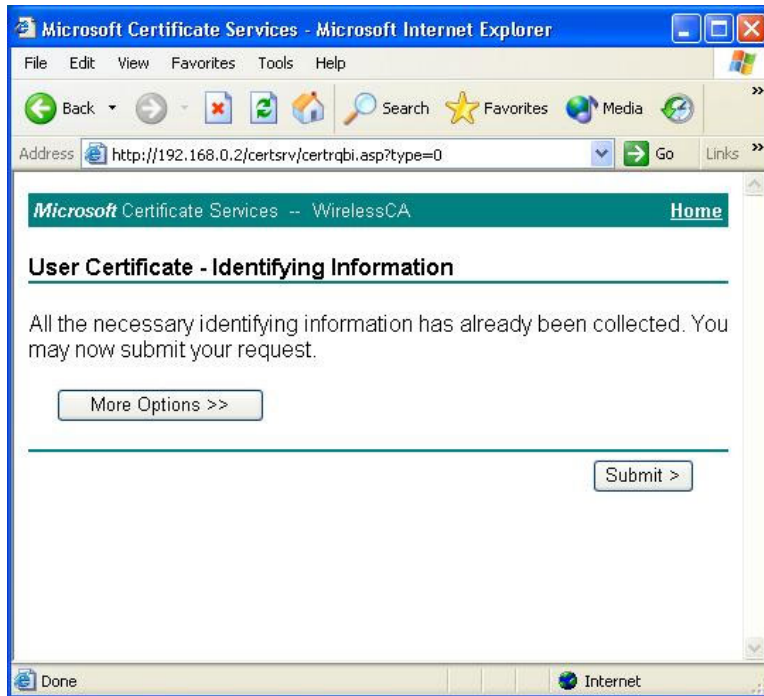

7. A message will be displayed, and the certificate will be returned to you. Click *Install this certificate*.

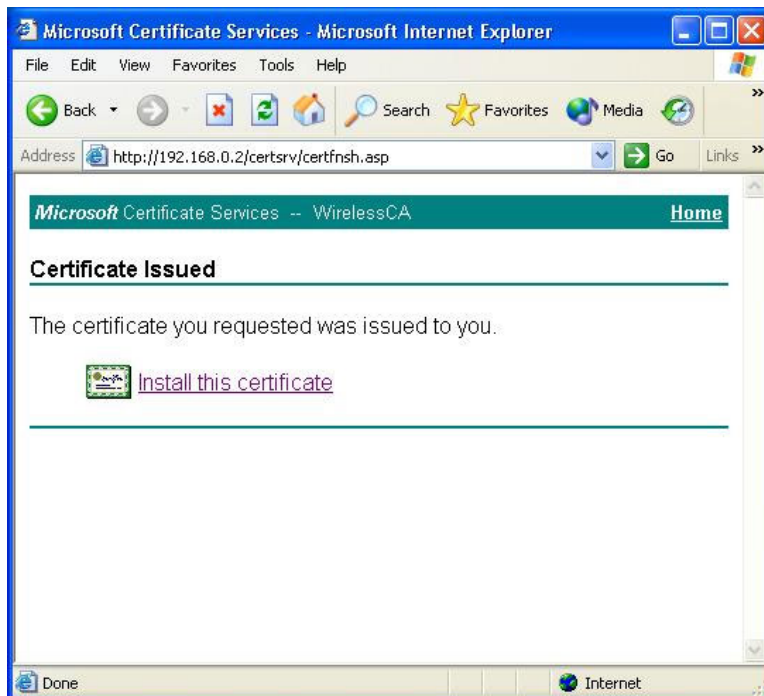


8. You will receive a confirmation message. Click **Yes**.



Certificate setup is now complete.

802.1x Authentication Setup

1. Select *Start > Control Panel > Network Connections*.
2. Right-click on the *Wireless Network Connection*, and select *Properties*.
3. Select the *Authentication* tab, and ensure that *Enable network access control using IEEE 802.1X* is selected, and *Smart Card or other Certificate* is selected from the *EAP type*.

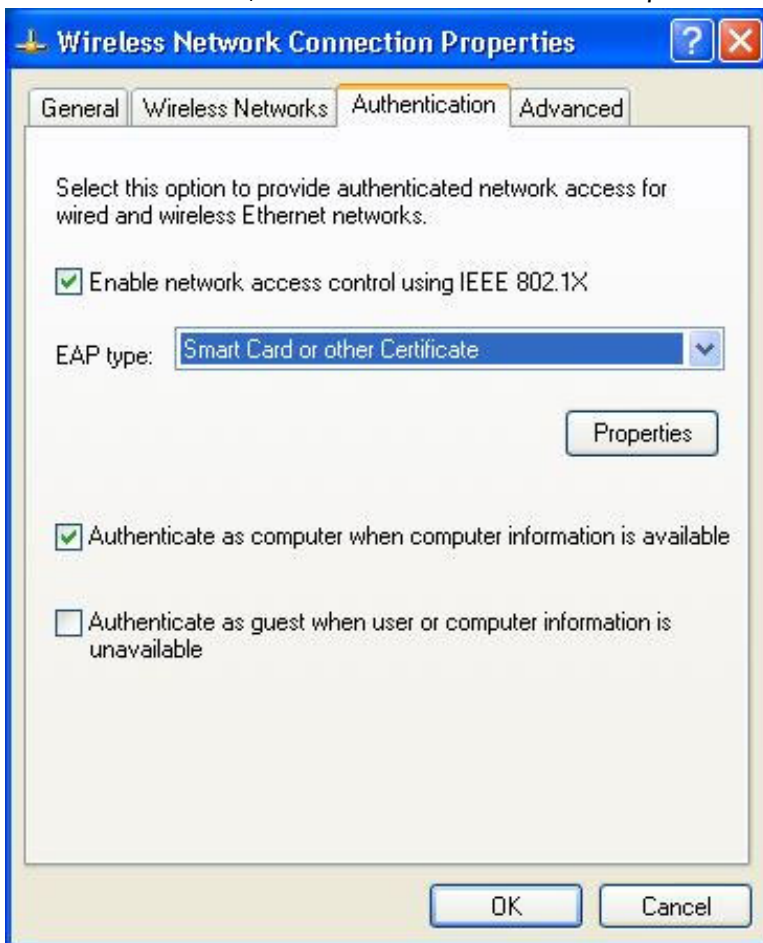

Encryption Settings


The encryption settings must match the access point's on the wireless network you wish to join.

- Windows XP will detect any available wireless networks, and allow you to configure each network independently.
- Your network administrator can advise you of the correct settings for each network. 802.1x networks typically use EAP-TLS. This is a dynamic key system, so there is no need to enter key values.

Enabling Encryption

To enable encryption for a wireless network:

1. Click on the *Wireless Networks* tab.

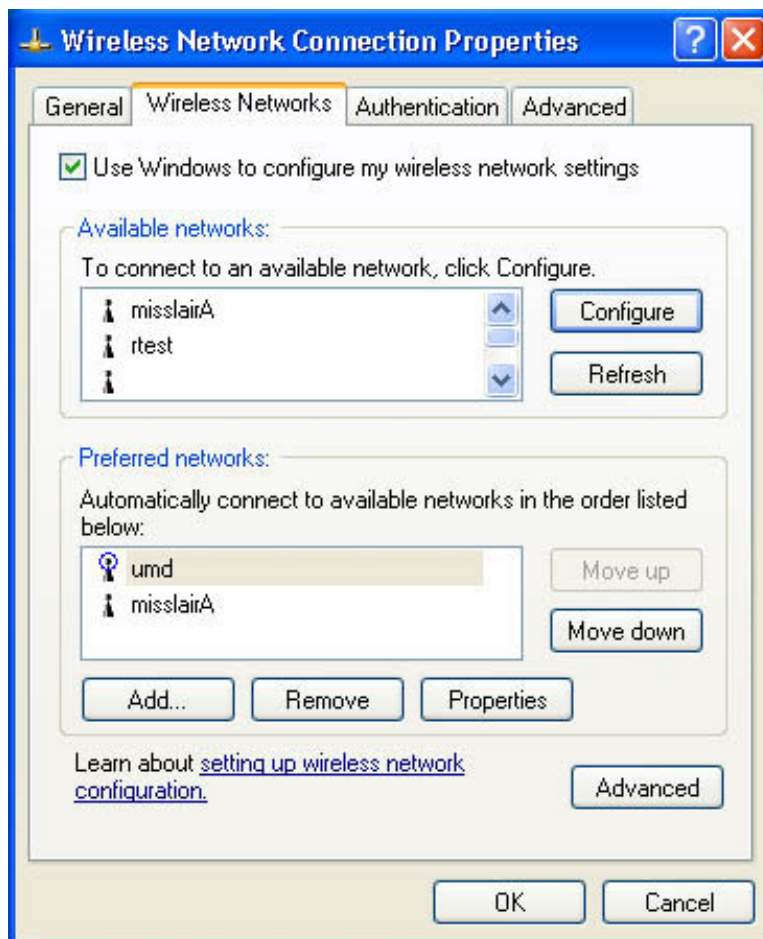

2. Select the wireless network from the *Available networks* list, and click **Configure**.
3. Select and enter the correct values, as advised by your network administrator. For example, to use EAP-TLS, you would enable *Data encryption*, and click the checkbox for the setting *The key is provided for me automatically*, as shown below.

Wireless Network Properties ? X

Network name (SSID):

Wireless network key (WEP)

This network requires a key for the following:

- ☒ Data encryption (WEP enabled)
- ☐ Network Authentication (Shared mode)

Network key:

Key format:

Key length:

Key index (advanced):

- ☒ The key is provided for me automatically

☐ This is a computer-to-computer (ad hoc) network; wireless access points are not used

OK Cancel


Setup for Windows XP and 802.1x client is now complete.

Using 802.1x Mode (without WPA)

This is very similar to using WPA-Enterprise.

The only difference is that on your client, you must NOT enable the setting *The key is provided for me automatically*.

Instead, you must enter the WEP key manually, ensuring it matches the WEP key used on the access point.

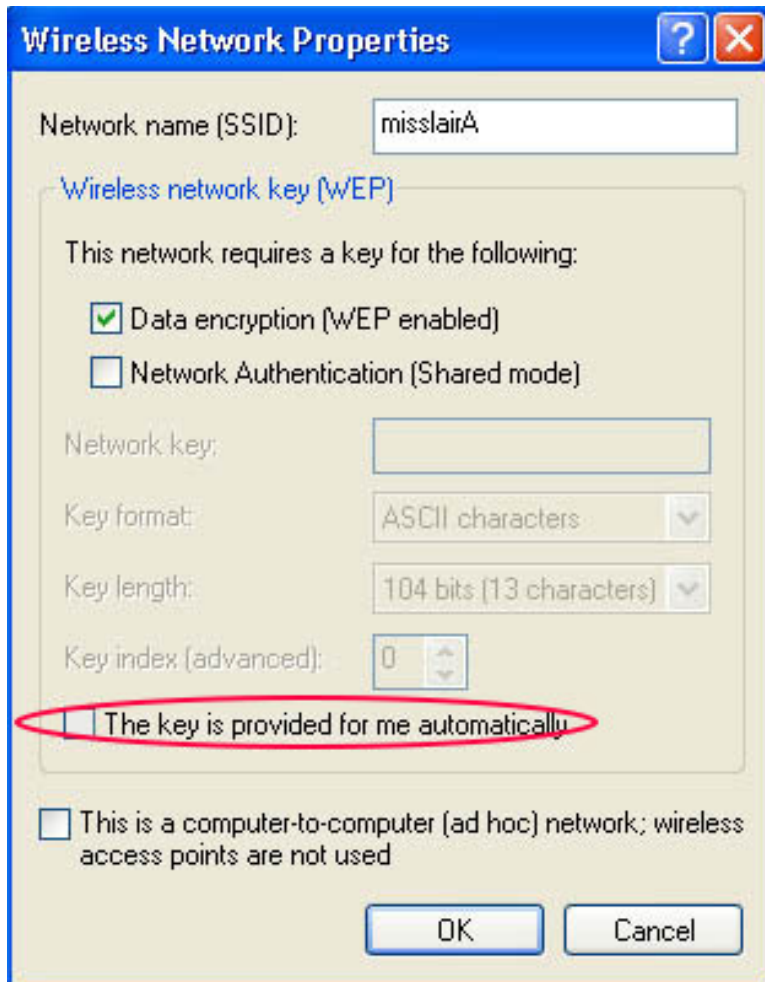

Note—On some systems, the 64-bit WEP key is shown as 40-bit and the 128-bit WEP key is shown as 104-bit. This difference arises because the key input by the user is 24 bits less than the key size used for encryption.

