



BOSCH



Washing machine

WGG2440REU

[NL] User manual and
installation instructions

Refer to the Digital User's Guide for more information.



Index

1 Safety.....	4	7 Display	21
1.1 General instructions	4	8 Buttons	24
1.2 Destination of the device rate	4	9 Programs	26
1.3 Restriction of users	4	10 Accessories.....	30
1.4 Secure installation.....	5	11 Laundry.....	30
1.5 Safer use	7	11.1 Preparing the laundry.....	30
1.6 Safe cleaning and maintenance	9	12 Detergent and care ginger.....	31
2 Avoiding material damage	11	13 The Ministry at its core.....	31
3 Environmental protection and saving ring.....	12	13.1 Switching on the appliance	31
3.1 Disposing of the packaging	12	13.2 Set program	31
3.2 Saving on energy and resources	12	13.3 Adjust program settings	31
3.3 Energy Saving Mode	12	13.4 Loading the drum with laundry	32
4 Set-up and connection	13	13.5 Inserting the dosing aid for liquid detergent	32
4.1 Unpacking the device	13	13.6 Using the dosing aid for liquid detergent	32
4.2 Package contents.....	13	13.7 Dosing detergent and care agent	33
4.3 Installation site requirements	13	13.8 Starting the program ...	33
4.4 Removing transport locks	14	13.9 Soaking the laundry	33
4.5 Connecting the device	15	13.10 Adding laundry	33
4.6 Adjusting the device	16	13.11 Program cancel.....	33
4.7 Connecting the appliance electrically.....	17	13.12 Taking out the laundry	34
5 Getting to know your device.....	18	13.13 Switching off the appliance	34
5.1 Device	18	14 Child Lock	34
5.2 Detergent drawer.....	18	14.1 Activating child lock	34
5.3 Control panel.....	19	14.2 Deactivating the child lock.....	34
6 Before using for the first time	20		
6.1 Starting a wash cycle without laundry.....	20		

15 Basic Settings	35
15.1 Overview of the basic settings	35
15.2 Changing basic settings.....	36
16 Cleaning and maintenance	36
16.1 Cleaning the drum	36
16.2 Cleaning the detergent drawer.....	36
16.3 Cleaning the drain pump.....	37
17 Troubleshooting	41
17.1 Emergency release	50
18 Transporting, Storing and drain.....	50
18.1 Disassembling the device	50
18.2 Installing transport locks	50
18.3 Putting the device back into operation	50
18.4 Disposal of your old appliance	51
19 Customer Service.....	51
19.1 Product number (E no.) and production number (FD)	51
20 Consumption Values	53
21 Technical data.....	53



1 Safety

Observe the following safety instructions.

1.1 General instructions



Read this manual carefully.

Keep the operating instructions and product information for future reference.
for use or for subsequent owners.

Do not connect the device in case of transport damage.

1.2 Destination of the device

Only use the device:

to wash machine-safe textiles and wool by hand
wash care label.

with tap water and commercially available washing machine
detergents and maintenance products.

for domestic use and in enclosed spaces within the
dry environment.

to an altitude of 4000 m above sea level.

1.3 Restriction of users


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the resulting hazards. Children must not play with the appliance.

Cleaning and user maintenance shall not be made by children unless they are supervised.

Make sure that children up to 3 years old and pets cannot reach the device.

 
1.4 Secure installation

Observe the safety regulations when installing the device.

 **WARNING** – Risk of electric shock! Improper installations are dangerous.

- ▶ Only connect and use the device in accordance with the information on the type plate.
- ▶ Only connect the device to a mains supply with alternating current via a properly installed earthing socket.

- ▶ The protective earth system of the electrical house installation must be installed in accordance with the electrical engineering regulations. The installation must have a sufficiently large conductor diameter.

- ▶ When using an earth leakage circuit breaker, only use a type marked with .
- ▶ Never power the device via an external switching device, e.g. a time switch or remote control.
- ▶ When the device is installed, the mains plug of the mains connection cable must be freely accessible or, if free access is not possible, an all-pole disconnecting device must be installed in the permanently installed electrical system in accordance with the installation instructions.
- ▶ When setting up the device, make sure that the power cord is not pinched or damaged.
Damaged power cord insulation is dangerous.
- ▶ Never bring the connecting cable into contact with hot appliance parts or heat sources.
- ▶ Never bring the power cable into contact with sharp points or edges.
- ▶ Never kink, pinch or alter the power cord.

 **WARNING** – Risk of fire!

Using an extended power cord and unauthorized adapters is dangerous.

- ▶ Do not use extension cords or multiple sockets.

- ▶ Use only manufacturer-approved adapters and power cords.
- ▶ If the power cord is too short and a longer power cord is not available, contact an electrical retailer to adjust the home installation.

⚠ WARNING – Risk of injury!

The heavy weight of the device can cause injuries when lifted.

- ▶ Do not lift the device alone.

If this appliance is installed incorrectly in a washer-dryer column, the installed appliance may fall.

- ▶ Stack the dryer on top of a washing machine only with the dryer manufacturer's connection kit. No other method of installation is allowed.
- ▶ Do not install the appliance in a washer-dryer column if the dryer manufacturer does not offer a suitable connection set.
- ▶ Do not install appliances from different manufacturers and with different depths and widths in a washer-dryer column.
- ▶ Do not set up a washer-dryer column on a platform, the devices can tilt.

⚠ WARNING – Risk of suffocation!

Children can pull packing material over their head and become entangled and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

⚠ CAUTION – Risk of injury!

The device may vibrate or move during operation.

- ▶ Set up the device on a clean, flat and solid surface.
- ▶ Level the appliance using the appliance feet and a spirit level.

There is a tripping hazard with incorrectly laid hoses and mains connection cables.

- ▶ Lay the hoses and connection cables in such a way that they cannot be tripped over.

If the appliance is moved by protruding parts, such as the loading door, the parts can break off.

- ▶ Do not move the appliance by protruding parts.

⚠ CAUTION – Risk of cutting!

Sharp edges on the device can cause cuts if touched.

- ▶ Do not touch the device on sharp edges.
- ▶ Use protective gloves when installing and transporting the device.

1.5 Safer use

⚠ WARNING – Risk of electric shock!

A damaged appliance or damaged power cord is dangerous.

- ▶ Never use a damaged device.
- ▶ Never pull on the power cord to disconnect the device from the power supply. Always pull the plug on the power cord.
- ▶ If the appliance or the mains cable is damaged, immediately unplug the mains cable from the socket or switch off the fuse in the fuse box and close the tap.
- ▶ Contact customer service. → *Page 51* Penetrating moisture can cause an electric shock.
- ▶ Only use the device in closed rooms.
- ▶ Never expose the device to excessive heat and humidity.
- ▶ Do not use a steam cleaner, pressure washer, hoses or nozzles to clean the appliance.

⚠ WARNING – Risk of health hazard! Children can lock themselves in the appliance and endanger their lives.

- ▶ Do not install the appliance behind a door that blocks or prevents the opening of the appliance door.
- ▶ In the case of discarded appliances, remove the plug of the mains cable from the socket, then cut the mains cable and damage the lock of the appliance door so that the appliance door no longer closes.

⚠ WARNING – Risk of suffocation! Children can inhale or swallow small parts and choke.

- ▶ Keep small parts away from children.
- ▶ Do not allow children to play with small parts.

⚠ WARNING – Risk of poisoning! Detergents and care products can lead to poisoning if ingested.

- ▶ Consult a doctor in case of accidental ingestion.
- ▶ Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of explosion! If laundry has been pretreated with cleaning agents containing solvents, this can lead to an explosion in the appliance.

- ▶ Rinse pre-treated laundry thoroughly with water before washing.

⚠ CAUTION – Risk of injury! The cover plate may break when climbing or clambering on the device.

- ▶ Do not climb or scramble on the device. The appliance may tip over when sitting or leaning on the open door.
- ▶ Do not sit or lean on the appliance door.
- ▶ Do not place any objects on the appliance door.

Reaching into the rotating drum can cause injury to hands.

- ▶ Wait for the drum to come to a complete stop before reaching inside the drum with your hand.

⚠ CAUTION – Risk of burns!

The soap gets hot when washing at high temperatures.

- ▶ Do not touch the hot soapy water.

⚠ CAUTION – Risk of chemical burns! When opening the detergent drawer, detergent and care products may splash out of the appliance. Contact with eyes or skin may cause irritation.


- ▶ In case of contact with detergents or care products, rinse eyes or skin thoroughly with clean water.
- ▶ Consult a doctor in case of accidental ingestion.
- ▶ Keep detergents and care products out of the reach of children.

1.6 Safe cleaning and maintenance

Observe the safety instructions when cleaning and maintaining the device.

⚠ WARNING – Risk of electric shock! Improper repairs are dangerous.

- ▶ Only trained specialist personnel may carry out repairs on the device.
- ▶ Only original spare parts may be used for repair of the device.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. Penetrating moisture can cause a shock.
- ▶ Do not use a steam cleaner, pressure washer, hoses or nozzles to clean the appliance.

 **WARNING – Risk of injury!**

The use of non-original spare parts and non-original accessories is dangerous.

- ▶ Only use original spare parts and original accessories from the manufacturer.

 **WARNING – Risk of poisoning!**

Toxic fumes can be generated when cleaning agents containing solvents are used.

- ▶ Do not use solvent-based cleaning agents.

2 Material damage avoid

Follow this instruction to avoid material damage and damage to the device.

PAY ATTENTION!

Incorrect dosage of fabric softeners, detergents, care products and cleaning agents can affect the functioning of the appliance.

- ▶ Follow the manufacturer's dosing recommendations.

Exceeding the maximum load quantity affects the operation of the appliance.

- ▶ Observe and do not exceed the maximum load for each programme.

→ *"Programs", Page 26*

The device is secured for transport with transport locks. Transport locks that have not been removed can lead to material damage and damage to the device.

- ▶ Before commissioning, remove and store all transport locks completely.
- ▶ Before each transport, install all transport locks completely to avoid transport damage.

Improper connection of the water inlet hose can lead to material damage.

- ▶ Tighten the screw connections on the water supply hand-tight.
- ▶ It is best to connect the water inlet hose directly to the water tap without additional connecting elements such as adapter, extension, valve or the like.
- ▶ Make sure that the internal diameter of the water tap is at least 17 mm.

- ▶ Make sure that the thread length on the connection to the water tap is at least 10 mm.

Water pressure that is too low or too high can interfere with the appliance function.

- ▶ Make sure that the water pressure on the water supply system is at least 100 kPa (1 bar) and at most 1000 kPa (10 bar).
- ▶ If the water pressure exceeds the specified maximum value, a pressure reducing valve must be installed between the drinking water connection and the hose set of the device.
- ▶ Do not connect the appliance to the mixer tap of a pressureless water heater or boiler.

Modified or damaged water hoses can lead to material damage and damage to the device.

- ▶ Never kink, pinch, modify or cut water hoses.
- ▶ Only use supplied water hoses or original spare hoses.
- ▶ Reuse never used water hoses.

Use with contaminated or too hot water can cause material damage and damage to the device.

- ▶ Operate the device only with cold tap water.

Unsuitable cleaning agents can damage the surfaces of the device.

- ▶ Do not use sharp or abrasive cleaning agents.
- ▶ Do not use strong alcohol-based cleaning agents.
- ▶ Do not use hard scouring or dishwashing sponges.
- ▶ Clean the device only with water and a soft, damp cloth.

- ▶ Remove all detergent residues, spray mist residues or residues immediately upon contact with the appliance.

3 Environmental protection and savings

3.1 Disposing of the packaging

The packaging materials are environmentally friendly and can be reused.

- ▶ Dispose of the individual components separately according to type.

3.2 Energy- and resource-efficient

If you follow these directions, your device will use less power and water.

Use programs with low temperatures and longer washing times and use the maximum load capacity.

- aThe energy consumption and water consumption are the most efficient.

Detergent according to the degree of soiling of the laundry .

- aFor a light to normal degree of contamination, a small amount of detergent is sufficient. Follow the detergent manufacturer's dosing recommendations.

Reduce washing temperature for lightly and normally soiled laundry.

- aAt low temperatures, it consumes device less energy. For light to normal soiling, lower temperatures than those stated on the care label are also sufficient.

Set the maximum speed if the laundry is subsequently to be dried in the tumble dryer.

- aDryer laundry shortens the programme time during drying and reduces energy consumption. With a higher spin speed, the residual moisture in the laundry decreases and the spinning sound volume increases.

Wash laundry without prewash.

- aWashing with prewash extends program duration and increases energy and water consumption.

The device has automatic load matching.

- aThe automatic load matching ming optimally adapts the water consumption and program duration to the type of textile and the load capacity.

3.3 Energy Saving Mode

If you do not operate the device for a long time, it automatically switches to energy-saving mode.

The energy saving mode is exited when you operate the device again.

4 Set up and connect

4.1 Unpacking device

PAY ATTENTION!

Objects that remain in the drum and that are not intended for use with the device can lead to material and device damage.

- ▶ Before use, remove all these items and the supplied accessories from the drum.

1. Completely remove packaging material and protection from the device.

→ *"Disposal of the packaging", Page 12*

2. Check the device for visible damage.

3. Open the appliance door.
→ *"The Ministry in Essence", Page 31*

4. Remove the accessories from the drum.

5. Close the appliance door.

4.2 Package contents

After unpacking, check all parts for transport damage and the completeness of the delivery.

PAY ATTENTION!

Use with incomplete or defective accessories may impair the operation of the device or cause material damage and damage to the device.

- ▶ Do not use the device with incomplete or defective accessories.
- ▶ Replace the accessories before using the device.
→ *"Accessories", Page 30*

Remark: The device has been checked at the factory for correct operation. Water stains may remain in the device. The stains disappear after the first wash.

The delivery consists of: s

Washing machine

sAccompanying documents s

Transport protections

→ *"Remove transport locks", page 14*

scover caps

sWater supply hose

→ *"Connecting the water inlet hose", page 15*

4.3 Installation site requirements



WARNING

Risk of electric shock!

The device contains live parts.

Touching live parts is dangerous.

- ▶ Do not use the appliance without a cover.



WARNING

Risk of injury!

When used on a plinth, the device can tip over.

- ▶ The device feet for commissioning on a plinth must be absolutely with the fixings
→ *Page 30* confirm from the manufacturer.

PAY ATTENTION!


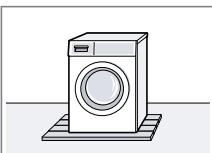
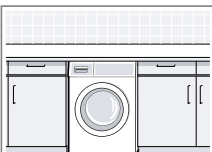
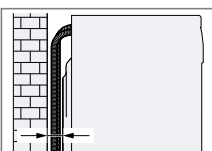
Freezing residual water in the device can damage the device.

- ▶ Do not place and use the device in frost-sensitive places or outdoors.

NLSet up and connect

If the device is tilted more than 40°, residual water can run out of the device and cause material damage.

- ▶ Carefully tilt the device.
- ▶ Transport the device upright.


installation site	To demand
<p>Plinth</p> 	<p>The device with locking lips → <i>Page 30</i> to confirm.</p>
<p>Floor with wooden beams</p> 	<p>Place the device guess at a wa-resistant wooden plate (thick-too minimal 30mm) which screwed to the floor.</p>
<p>kitchen</p> 	<p>The device al-borrow under a continuous work place sheet, that fixed with the adjacent cabinet is connected Pine tree. Required niche width: 60 cm.</p>
<p>on a wall</p> 	<p>No snakes and mains connection between wall and device clamping man.</p>

4.4 Removing transport locks


The device is secured for transport with transport locks at the rear of the device.

Remark:Keep the screws of the transport locks and the sleeves for later transport
→ *Page 50*.


- 1.Pull the hoses out of the holders.

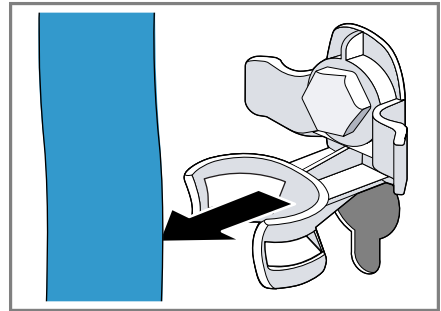


- 2.Loosen and remove all bolts of the 4 transport locks with a SW13 open-end wrench ① ②.

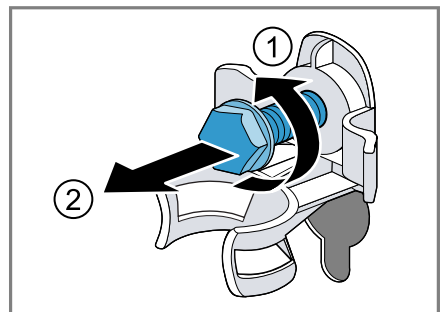


3.Remove the mains connection cable from the holder.

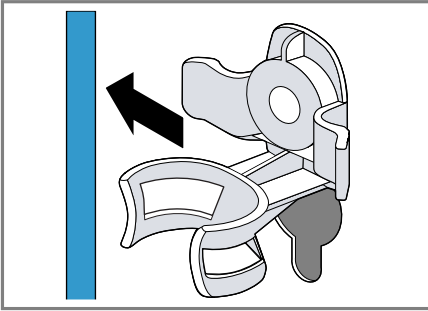


4.Remove the 4 sleeves.

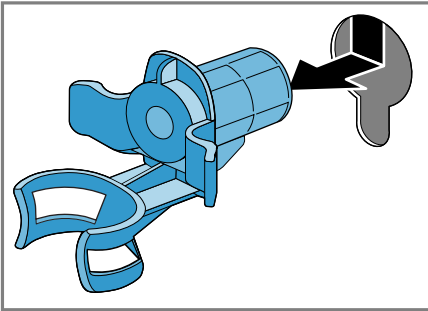

5.Install the 4 cover caps.

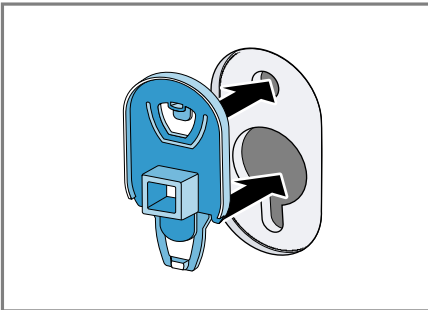


6.Push the 4 cover caps down.

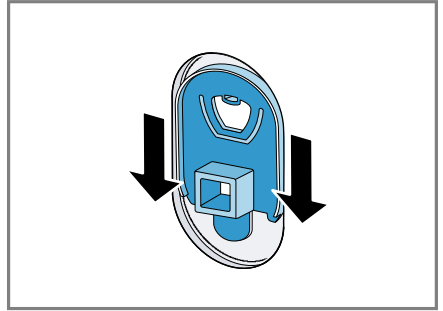


4.5 Connecting device

Connect water supply hose

1.Connect the water supply hose to the appliance.

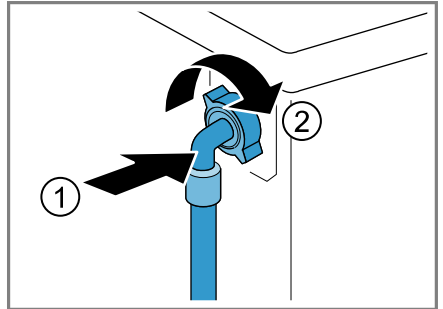

2.Connect the water inlet hose to the tap (26.4 mm = 3/4").

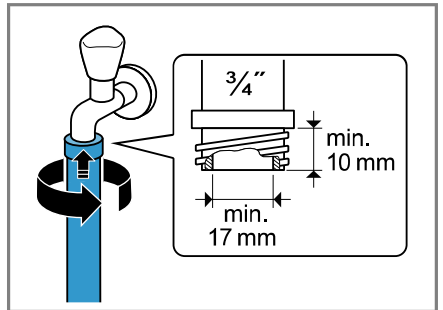

NLSet up and connect

3. Open the tap carefully and check that the connections are tight.

Water drainage connection types

The information will help you connect this appliance to the water outlet.


PAY ATTENTION!

When draining, the water drain hose is under pressure and can come loose from the installed connection position.

- ▶ Secure the water drain hose against unintentional disconnection.


Remark: Observe the pumping heights.

The maximum pumping height bed

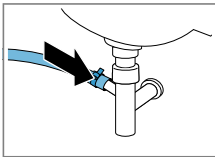


The connection position tie with a hose clamp (24-40 mm) bore gene.

washbasin

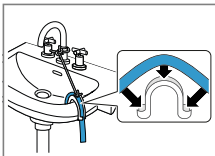

the water drainage feeding hose with a bend → *Page 30* fixate and gene.

plastic stand pipe with rubber run muff or a floor drain

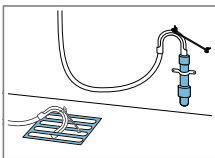


the water drainage feeding hose with a bend → *Page 30* fixate and gene.


4.6 Adjusting the device

To reduce noises and vibrations and to prevent the device from walking, place the device horizontally.

1. Loosen the lock nuts with a SW17 open-end wrench.

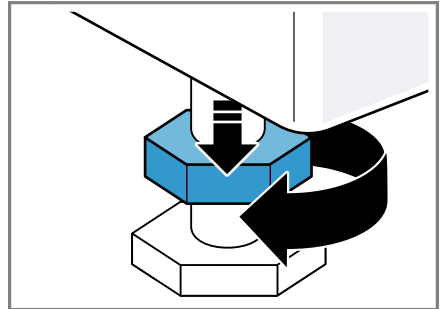


2. To adjust the appliance, turn the appliance feet. Check the horizontal adjustment of the appliance with a spirit level.

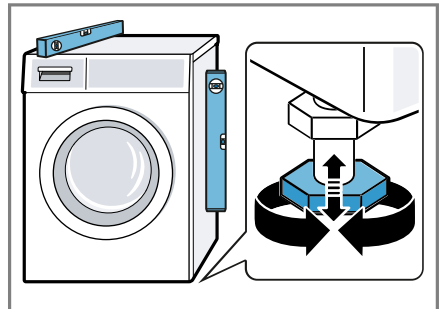

All appliance feet must be firmly planted on the floor.

3. Tighten the lock nuts against the housing with an open-end wrench SW17 hand-tight.

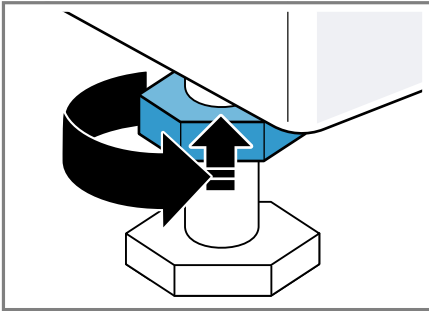

Hold the appliance foot while doing so and do not adjust the height.

4.7 Connecting the appliance electrically

Remark: Your home electrical installation for this appliance must comply with local legal and safety regulations and must include an earth leakage circuit breaker.

1. Insert the mains plug of the appliance's connecting cable into a socket in the vicinity of the appliance.


The connection data of the device can be found in the technical data
→ *Page 53*.

2. Check the mains plug for tightness.

5 Getting to know your device

5.1 Device

Here you will find an overview of the components of your device.

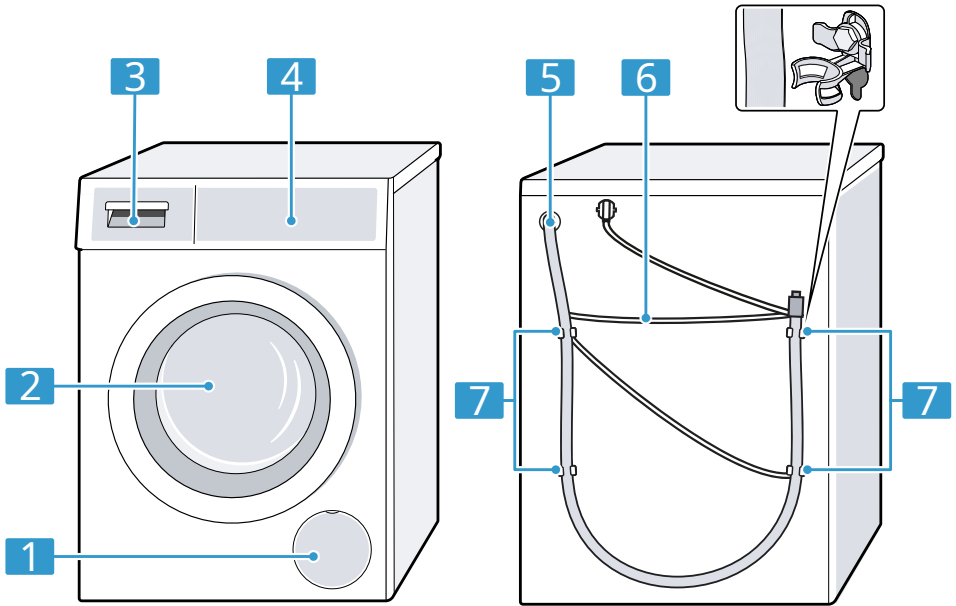

Depending on the device type, details in the picture may differ, e.g. the color and the form.


- 1** Service valve/pump
→ *Page 37*
- 2** Door
- 3** Detergent drawer → *Page 18*
- 4** Control panel
→ *Page 19*
- 5** water drain pump
→ *Page 16*
- 6** mains connection cable → *Page 17*

- 7** Transport protections
→ *Page 14*

5.2 Detergent drawer

Remark: Observe the manufacturer's information on the use and dosing of the washing products and care products and the information in the program descriptions.


→ *"Programs", Page 26*

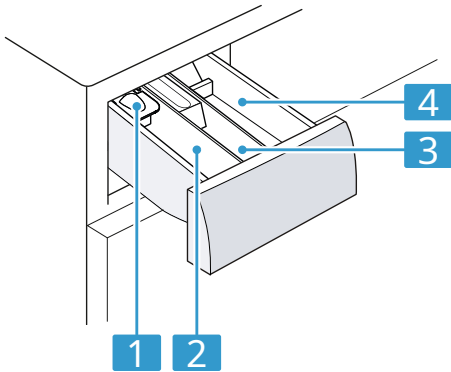

- | | |
|----------|---|
| 1 | Dosing aid for liquid detergent
→ "Insert the dosing aid for liquid detergent",
Page 32 |
| 2 | Detergent compartment II:
detergent for the main wash |
| 3 | Detergent dispenser:
fabric softener |
| 4 | Detergent compartment I:
detergent for prewash |

5.3 Control panel

You can set all functions of your device and obtain information about the operating status via the control panel.

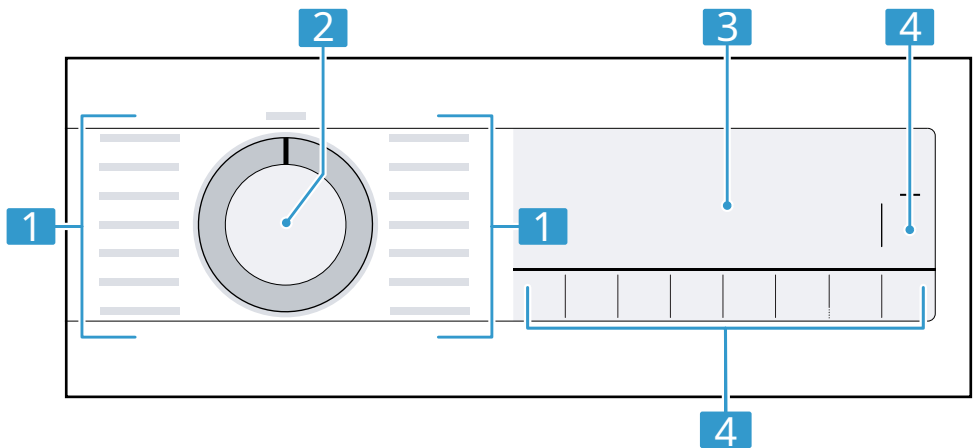

- | | |
|----------|-----------------------------|
| 1 | Programs → Page 26 |
| 2 | program voter
→ Page 3 1 |
| 3 | Display → Page 21 |
| 4 | Buttons → Page 24 |


6 Before first use

Prepare the device for use.


6.1 Starting a wash cycle without laundry

Your device has been thoroughly checked before leaving the factory. To remove any residual water, wash without any laundry the first time.

1. Turn the program selector on Cleaning the drum to make.
2. Close the door.
3. Pull out the detergent drawer.
4. Approx. Pour 1 liter of tap water into compartment II.

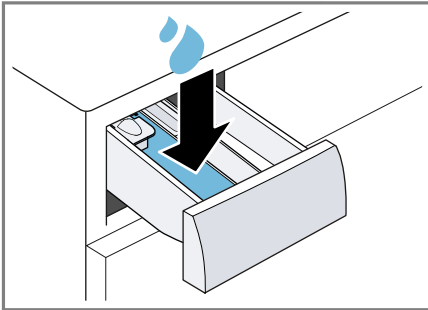

5. Fill powder detergent into compartment II.

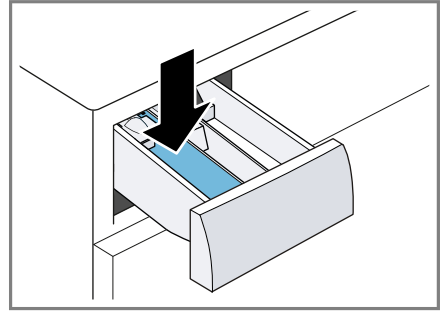


To avoid foaming, use only half the amount recommended by the detergent manufacturer for light soiling. Do not use wool or delicate detergent.

6. Slide the detergent drawer into the appliance.
7. To start the program, press Start/Reload to press.
 - a The display shows the remaining program duration.
 - a After the program end, it shows display: "End".
8. Start the first wash cycle or turn the program selector to Off to turn off the device.
→ *"The Ministry in Essence", Page 31*

7 Display



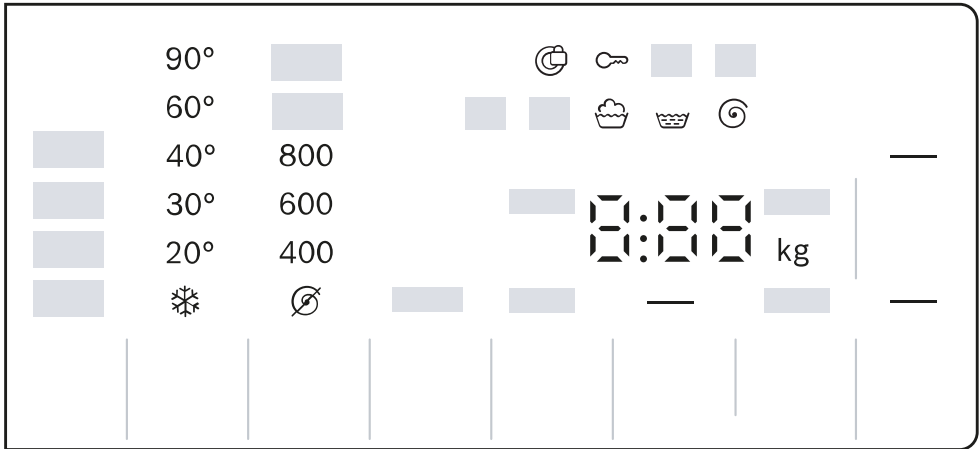










The display shows the current setting values, options or information texts.





Example display indication

Display	name	More information
0:40 ₁	Program duration / remaining time of the program	Approximate expected program duration or time remaining in the program.
"10" / — ¹	Ready in time	→ "Buttons", Page 24
9.0 kg ₁	Recommended load	Maximum load amount for the set program in kg.
☞ - 1400 ☺	Spin speed tal	Set spin speed in rpm. → "Buttons", Page 24 ☞: without spinning, only draining
* - 90	Temperature	Set temperature in °C. → "Buttons", Page 24 * (cold)
—	Start / Pause	Start, cancel or pause slights up: the program is running and can be aborted or paused. sflashes: the program can be started or resumed.
↓	prewash	Program status

¹Example


 









Display	name	More information
	Wash	Program status
	To rinse	Program status
	Centrifuge	Program status
end	Program end	Program status
	Child lock	lights up: the child lock is activated. s flashes: the child lock is activated and the device was operated. → "Deactivate child lock", page 34
	Anti-crease function	The anti-crease function is activated. → "Buttons", Page 25
	prewash	The prewash is activated. → "Buttons", Page 24
	Extra water and extra rinse	Wash with more water and a rinse cycle is activated. → "Buttons", Page 24
	speedPerfect	Washing in a shorter time is activated. → "Buttons", Page 24
	Blood	The stain type is activated.
	Grass	The stain type is activated.
	Red wine	The stain type is activated.
	Butter/salad oil	The stain type is activated.
	Drum memory flour cleaning	flashes: drum dirty. Run the Drum Clean program for cleaning and maintenance of the drum and the lye container. → "Cleaning the drum", page 36
:	voltage control lesson system	Flashing: The automatic voltage control system detects impermissible undervoltage. The program pauses. Remark:The program will continue when the voltage is allowed again.
.	voltage control lesson system	Flashing: The program has been paused due to illegal undervoltages. The voltage is allowed again and the program continues. Remark:The program duration is extended.


1Example

Display	name	More information
	Door	slights up: the door is locked and can not be opened. sflashes: the door is not closed. soff: the door is unlocked and can be den open.
	Crane	sNo water pressure. sThe water pressure is too low.
E:35 / -10 ₁	Error	Error code, error indication, signal.
1Example		

8 Keys

The selection of the program settings depends on the program set.

Knob	Choice	More information
 Start/Reload (Start/Reload)	sstart sCancel spause	Start, cancel or pause program.
 SpeedPerfect	sactivate sdeactivate	Activate or deactivate reduced program duration. Remark: The energy consumption is higher. This does not affect the washing result.
 Anti Stain (Anti Stains)	Multiple se- reading	Choose the stain type. The temperature, the drum movement and the soaking time are adapted to the type of stain.
 Finished in (Ready in)	up to 24 hours	Capture the program end. The program duration is already included in the set number of hours. After the program has started, the program duration is displayed.
 temp. (Temperature)	 - 90 °C	Adjust the temperature in °C.
 Spin Speed Reduction (Spin)	 - 1400 rpm min	Adjust the spin speed or deactivate the spin. The selection drains the water and deactivates the spin cycle. The laundry remains wet in the drum.
 3 sec. (Children's security 3 sec.)	sactivate sdeactivate	→ "Child Lock", Page 34
 Prewash (Pre- <small>used to be)</small>	sactivate sdeactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry.
 Extra Rinse (Additional rinse)	sactivate sdeactivate	Wash with more water and activate or deactivate an extra rinse cycle. Recommended for particularly sensitive skin or in areas with very soft water.

Knob	Choice	More information
 Less Ironing (Anti wrinkle)	sactivate sdeactivate	Activate or deactivate washing with less crease. To reduce creasing in the laundry, the spin process and spin speed are adjusted. The laundry is so damp after washing that it hangs out well on the washing line.


9 Programs

Remark: The care labels on the laundry give you additional information on program selection.

Program	Description	Max. belasting (kg)
Cotton	<p>Wash hard-wearing cotton, linen and blended fabrics.</p> <p>Also suitable as a shortened program for normally soiled laundry if you activate SpeedPerfect.</p> <p>Program setting: smax. 90 °C smax. 1400 rpm</p>	<p>9.0</p> <p>5.0¹</p>
Eco 40-60	<p>Wash cotton, linen and blended fabrics.</p> <p>Remark: Textiles that can be washed at 40 °C to 60 °C according to the care symbol can be washed together.</p> <p>The wash result corresponds to the best possible wash result class and complies with legal regulations. The wash result corresponds to the best possible wash result class and complies with legal regulations.</p> <p>For this programme, the washing temperature is automatically adjusted depending on the load capacity in order to achieve optimum energy efficiency with the best possible washing result. The washing temperature cannot be changed.</p> <p>Program setting: Remark: The temperature is not adjustable in this program and is set automatically. smax. - °C smax. 1400 rpm</p>	9.0
wrinkle recovery loin	<p>Wash textiles made of synthetic and blended fabrics.</p> <p>Program setting: smax. 60 °C smax. 1200 rpm</p>	4.0


¹  SpeedPerfect activated



² Washing not possible

Program	Description	Max. belasting (kg)
Fast mix	Wash textiles made of cotton, linen, synthetic materials and blended fabrics. Suitable for lightly soiled laundry. Program setting: smax. 60 °C smax. 1400 rpm	4.0
Delicate/Silk	Wash delicate, washable textiles made of silk, viscose and synthetics. Use a detergent for delicates or silk. Remark:Wash particularly sensitive textiles or textiles with hooks, eyes or brackets in a laundry net. Program setting: smax. 40 °C smax. 800 rpm	2.0
 Wool	Wash by hand or machine washable textiles made of wool or with a high wool content. To avoid shrinkage of the laundry, the drum with textiles moves especially gently with long pauses. Use a wool detergent. Program setting: smax. 40 °C smax. 800 rpm	2.0
To rinse	Rinse with subsequent centrifugation and drain the water. Program setting: max. 1400 rpm	-
Centrifuge/ Drain	Centrifuge and drain water. If you only want to drain the water, activate . The laundry is not spun. Program setting: max. 1400 rpm	-
Hygiene Plus	Wash hard-wearing cotton, linen and blended fabrics. Suitable for allergy sufferers and with high hygiene requirements. Remark:When the set temperature is reached, it remains constant throughout the washing process. Program setting: smax. 60 °C	6,5

 ¹  SpeedPerfect activated

²Washing not possible

Program	Description	Max. belathing (kg)
	smax. 1400 rpm	
Sport	Wash sports and leisure textiles made of synthetic, microfibre and fleece. Use a detergent for sports textiles. Do not use fabric softener. Tip: Wash heavily soiled laundry with the Easy-Care programme. Program setting: smax. 40 °C smax. 800 rpm	2.0
Blanket	Wash synthetic fiber filled pillows, duvets or fillings with down. Wash large parts separately. Use a detergent for down or delicates. Dose sparingly. Do not use fabric softener. Remark: To avoid excessive foaming, before washing, roll the laundry together and remove the air from the laundry. Program setting: smax. 60 °C smax. 1200 rpm	2.5
Jeans/Dark <small>used to be</small>	Wash dark and colour-intensive textiles made of cotton and easy-care textiles, e.g. jeans. Wash the laundry inside out. Use a liquid detergent. Program setting: smax. 40 °C smax. 1200 rpm	4.0
drum cleaning gene	Cleaning and maintenance of the drum. Use the program in the following cases: sbefore first use swith frequent washing with a washing temperature of 40°C and below safter a long absence Use a powder detergent or a detergent containing bleach.	- ²
¹  SpeedPerfect activated ² Washing not possible		

Program	Description	Max. belasting (kg)
Extra fast 15'/30'	<p data-bbox="300 240 882 268">Halve the amount of detergent to avoid foaming.</p> <p data-bbox="300 300 837 352">Do not use fabric softener. Do not use wool, delicate or liquid detergent.</p> <p data-bbox="300 360 904 443">Remark: If you have not used a program with a temperature of 60 °C or higher for a long time, the drum cleaning indicator flashes as a reminder.</p> <p data-bbox="300 539 927 703">Wash cotton, synthetic and blended fabrics.</p> <p data-bbox="300 539 927 703">Short program for lightly soiled small items of laundry. The program duration is approx. 30 minutes. If you want to shorten the program duration to 15 minutes, activate  SpeedPerfect. The maximum load capacity is reduced to 2.0 kg. Program setting:</p> <p data-bbox="300 735 437 762">smax. 40 °C</p> <p data-bbox="300 767 490 794">smax. 1200 rpm</p>	4.0
1 	SpeedPerfect activated	
2	Washing not possible	

10 Accessories

Use only original accessories. These are adapted to the device.

Remark:Some accessories are available in other colours. Contact the

→ "Customer Service", page 51.

	Usage	Order number
Extension water supply feeding hose	Cold water or Aquastop water inlet hose lengthen (2.50 m).	WMZ2381
Mounting brackets	Improve the firmness of the device.	WMZ2200
longer water supply feeding hose	Standard water supply replace the feed hose with a longer hose (2.20 m).	00353925
bend	Fix the water drain hose.	00655300
Liquid Detergent Inserts	Dispense liquid detergent.	00605740
Elevation	The device higher places so that it is easily filled and can be emptied.	WMZPW20W

11 Laundry

Remark:You can find more information in the digital operating instructions by scanning the QR code in the table of contents or on www.bosch-home.com.

11.1 Preparing the laundry

PAY ATTENTION!

Objects left in the laundry can damage the laundry and the drum.

- ▶ Before use, remove all objects from the pockets of the laundry.

- ▶ To protect your appliance and the laundry, prepare the laundry.

- Empty pockets
- Brush sand out of all covers and pockets
- Close duvet covers and pillowcases
- Close zippers, Velcro fasteners, hooks and eyes
- Tie fabric belts, apron straps, etc. together, or use a laundry bag
- Tie together long drawstrings and cords with fixed ends in hoods or trousers

- Remove curtain rollers and lead laces or use a laundry net
- use a laundry net for small items of laundry, e.g. children's socks
- some stubborn, dried-on stains can be removed by washing several times
- wash large and small items of laundry together
- do not rub in fresh stains, but dab off with soapy water
- Unfold and loosen the laundry or observe the program descriptions

12 Detergent and detergent care product

Comments

sMore information can be found in the digital manual by scanning the QR code in the table of contents or at www.boschhome.com.

sTake the information regarding Safety → *Page 4* and Avoid material damage → *Page 11* heed.

Information from the manufacturer about use and dosage can be found on the packaging.

Comments

swith liquid detergents only tend to use self-flowing liquid detergents

svarious liquid detergents don't mix

sdetergent and fabric softener not to blend

sNot stored for too long and strongly using thickened products. sUse dyes in moderation

salt can affect stainless steel

Detergent and laundry care productNL

sno decolorizing agent in the appliance ready to use

B The Operation in essence

Remark: You can find more information in the digital operating instructions by scanning the QR code in the table of contents or on www.bosch-home.com.

13.1 Switch on device

Required: The device is correctly set up and connected.

→ *"Setting up and connecting", Page 13*

- ▶ Set the program selector to a programme.

13.2 Set program

1. Turn the program selector and set it to the desired programme.

→ *"Programs", Page 26*

2. If desired, adjust the program settings.

→ *"Adjust program settings", page 31*

13.3 Adjust program settings

Required: A program is set.

→ *"Set program", page 31*

- ▶ Adjust the program settings.

→ *"Buttons", Page 24*

Remark: The program settings are not saved permanently for the program.

13.4 Filling the drum with laundry

Remark: To avoid creasing, observe the maximum load of the programs.

→ "Programs", Page 26

Requirements

sThe laundry is prepared and sorted.

→ "Laundry", Page 30

sThe drum is empty.


1. Open the door.
2. Place the laundry in the drum.
3. Close the door.

Make sure that no small items of laundry are caught in the door.


13.5 Inserting the liquid detergent dosing aid

When you order the dosing aid as an accessory, you must fit the dosing aid.

1. Pull out the detergent drawer.
2. Press the insert down and take out the detergent drawer.

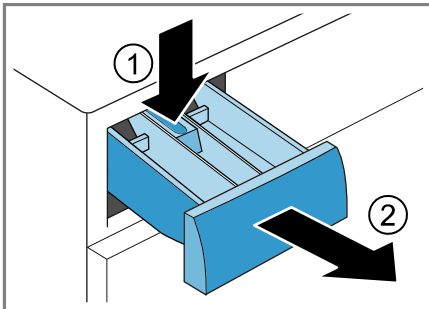

3. Place the dosing aid.

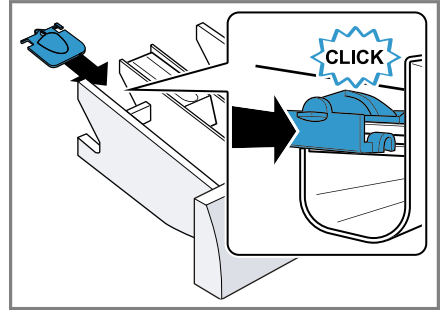


4. Insert the detergent drawer.


13.6 Using the dosing aid for liquid detergent know

You can use a dosing aid in the detergent drawer to dose liquid detergent.

1. Pull out the detergent drawer.
2. Push the dosing aid forward.

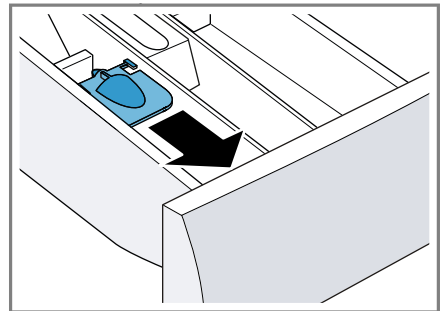

3. Fold the dosing aid downwards and click into place.

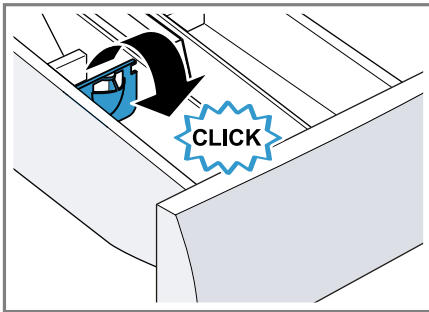

4. Slide in the detergent drawer.

13.7 Dosing detergent and care agent

Comments

sUse the dosing aid for liquid
Do not use with gel-like detergents, washing powder, switched on prewash or ready-in time. sKeep the directions for washing agent and laundry care agent
→ *Page 31*at.

1. Pull out the detergent drawer.
2. Fill with detergent.
→ *"Detergent drawer", Page 18*
3. Fill with detergent if desired.
4. Slide the detergent drawer into the appliance.

13.8 Starting the program

Required: A program is set.

→ *"Set program", page 31*

- ▶ on ▷ Start/Reload to press.

aThe drum rotates and find a load recognition g place, which up to 2 minutes k an last and after that it flows water in the app ready.

aThe display shows the program duration function ready in time. a After the program end, it shows display: "End".

13.9 Soaking laundry

Remark: No additional detergent is needed. The soapy water is then used for washing.

1. Start the program.
2. To pause the program, after about 10 minutes, press
▷ Start/Reload.
3. To resume the program after the desired soaking time, press
▷ Start/Reload.

13.10 Adding laundry

After the program has started, you can remove or add laundry depending on the program status.

Required: A program has started.

→ *"Starting the program", Page 33*

1. on ▷ Start/Reload to press.
The device pauses.

Remark: If you want to add laundry, follow the instructions on the display.

→ *"Display", page 23*

2. Open the door.
3. Reload or remove the laundry.
4. Close the door.
5. On Start/Reload to press.

13.11 Program Cancel

1. on ▷ Start/Reload to press.
2. Open the appliance door.

At high temperature and high water level, the appliance door remains locked for safety reasons.

- Start the program at a high temperatureTo rinse.
- Start the program at a high water levelCentrifuge or select a suitable program for draining.

→ "Programs", Page 26

3.Remove the laundry.


→ "Taking out the laundry", Page 34

13.12 Take out the laundry

- 1.Open the door.
- 2.Remove the laundry from the drum.

13.13 Switch off device

- 1.Turn the program selector onOffto make.
- 2.Close the water tap.
- 3.Wipe the rubber sleeve dry and remove any foreign objects.

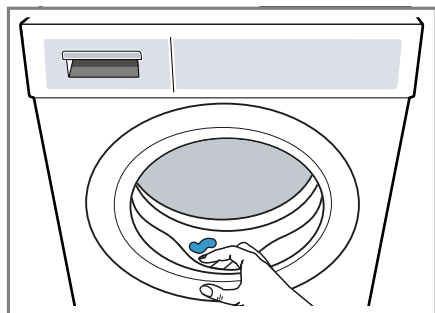


- 4.Leave the appliance door and detergent drawer open so that the residual water can dry up.

14 Child Lock

Secure your device against unwanted operation via the controls.

14.1 Activating child lock

- ▶ Both keys 3 seconds.
3 seconds.

aThe display shows  reflected to give.

aThe controls are blocked.

aThe childproof lock remains in effect even after the switching on the device and activated in the event of a power failure.

14.2 Deactivate child lock

Required:To deactivate the child lock, the appliance must be switched on.


- ▶ Press both buttons for about 3 seconds.
3 sec..

agoes out in the display .

15 Basic Settings

You can configure the basic settings of your device according to your needs.

15.1 Overview of the basic settings

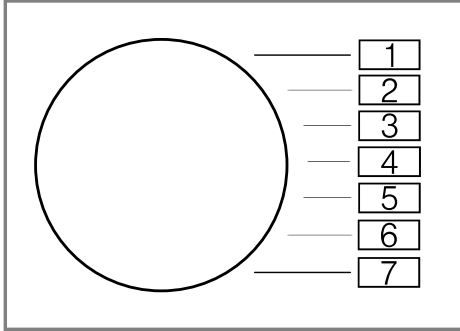


Basic setting	Program-position	Where the	Description
Signal	2	0 (off) 1 (soft) 2 (average share) 3 (loud) 4 (very loud)	Adjust the volume of the signal after the program has ended.
Key signal	3	0 (off) 1 (soft) 2 (average share) 3 (loud) 4 (very loud)	Adjust the volume of the signal when selecting the buttons.
Reminder drum cleaning went	4	On (on) OFF (off)	Activate or deactivate the drum cleaning reminder.
program counter	5	42 ¹	Display the number of programs that have ended.

¹Example

15.2 Changing basic settings

1. Set the program selector to position 1.

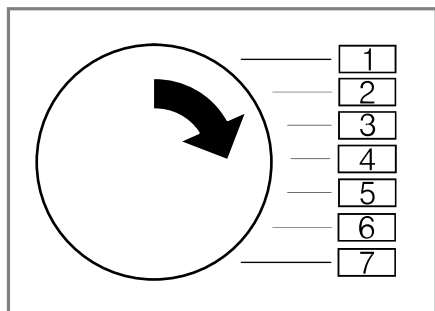

2. Press **Spin** **Speed Reduction** and at the same time turn the program selector to position 2.
 - a) The display shows the current value the on.
3. Set the program selector to the desired position.
→ "Overview of the basic settings", page 35
4. Press **Finish** into change the value.
5. Turn off the device to save the change.

16 Cleaning and care loves

Carefully clean and maintain your appliance to ensure that it continues to work properly for a long time.

Remark: You can find more information in the digital operating instructions by scanning the QR code in the table of contents or on www.bosch-home.com.

16.1 Cleaning the drum


⚠ CAREFULLY

Risk of injury!
Permanent washing at low temperatures and lack of ventilation of the appliance can damage the drum and cause injuries.


- ▶ Regularly run a drum cleaning program or wash at a temperature of at least 60°C.
- ▶ Leave the appliance to dry with the door and detergent drawer open after each use.
- ▶ The program **Cleaning the drum** without laundry with powder detergent.

16.2 Cleaning the detergent drawer


1. Pull out the detergent drawer.
2. Press the insert down and remove the detergent drawer.

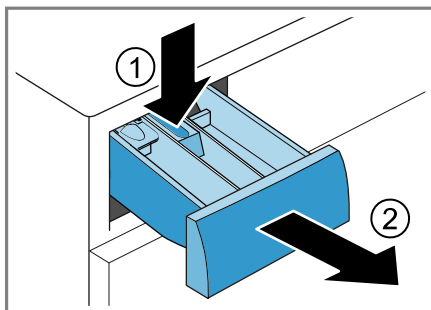


3. Pull out the insert from bottom to top.

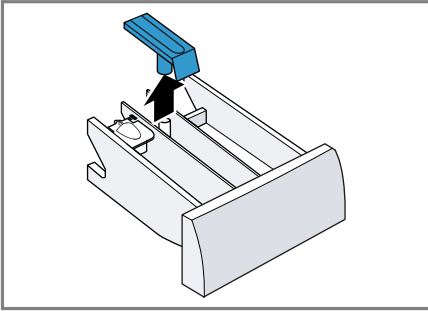


4. Clean and dry the detergent drawer and insert with water and a brush.

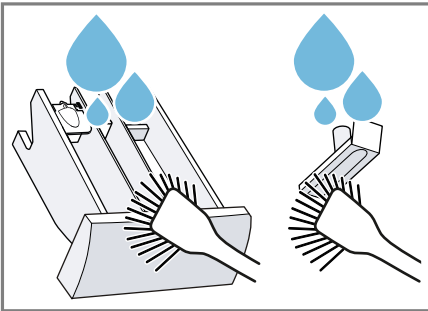

5. Place the insert and click into place.

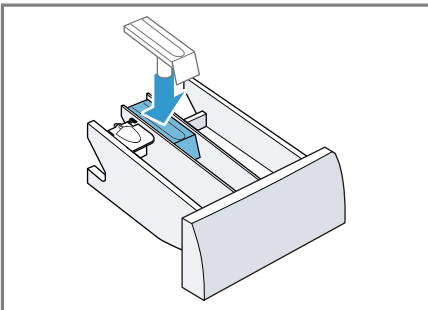

6. Clean the opening for the detergent drawer.

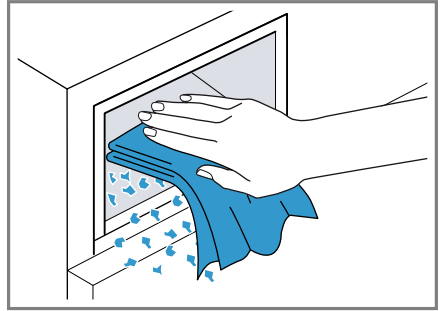


7. Slide the detergent drawer into the appliance.

16.3 Cleaning the drain pump


Clean the drain pump in the event of malfunctions, e.g. blockages or chatter.

Emptying the drain pump


1. Close the tap.
2. Turn off the device.
3. Disconnect the plug of the device from the mains.
4. Open and remove the service door.

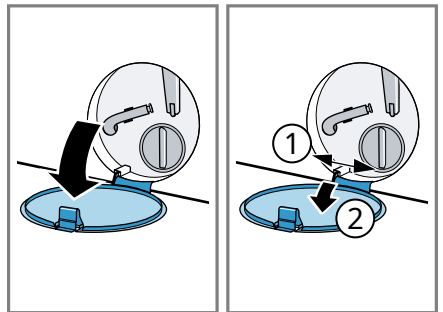

5. Place a sufficiently large container under the opening.

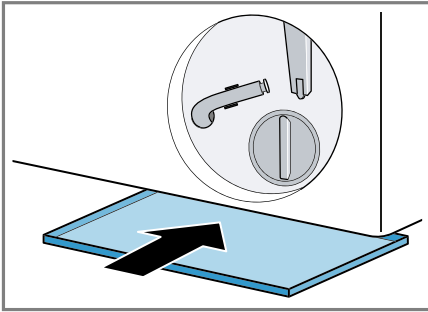


6. Remove the drain hose from the holder.

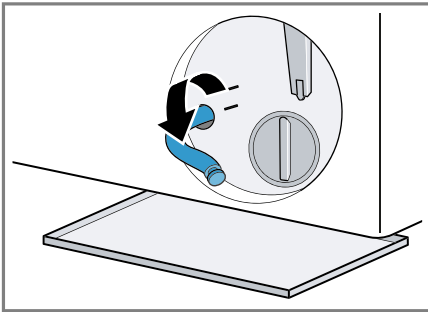


7. **⚠ CAUTION - Risk of burns!** The soap gets hot when washing at high temperatures.


- Do not touch the hot soapy water.
Pull off the sealing cap to allow the wash water to flow into the collection container.

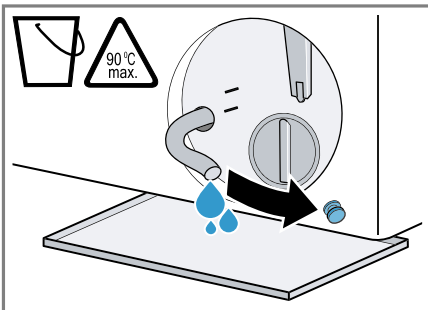

8. Press the stopper back on.

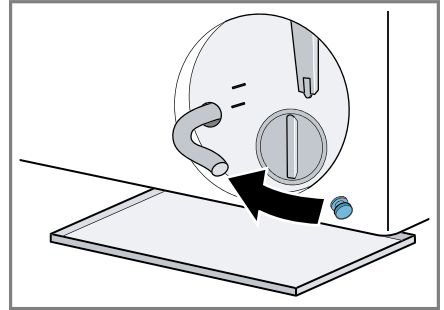


9. Clamp the drain hose in the holder.

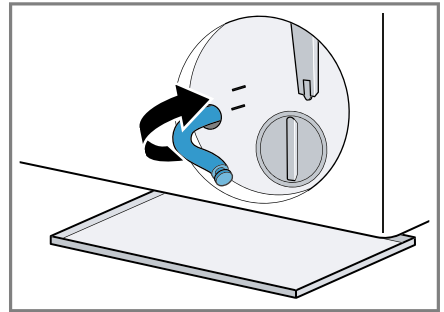


Cleaning the drain pump

Required: The drain pump is empty.
→ Page 37

1. As there may still be residual water in the pump, carefully unscrew the lid.
 - s Large impurities can cause the filter element to get stuck in the pump housing. Loosen impurities and remove filter element.

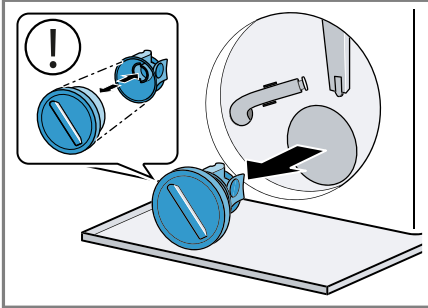

2. Clean the interior, screw thread of the pump cover and pump housing.

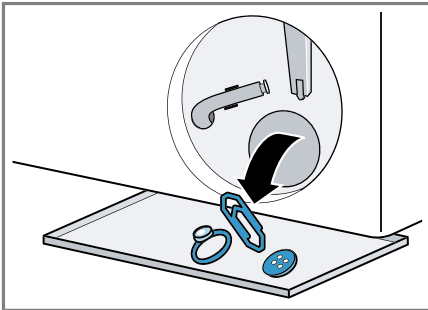


The pump cover consists of two components that can be disassembled for cleaning.


3. Verify that the pump impeller rotates easily.

4. Install the pump cover.

- s Check that the pump cover components are correctly assembled.

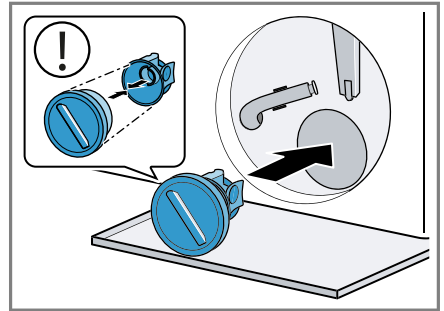


5. Tighten the pump cover as far as it will go.

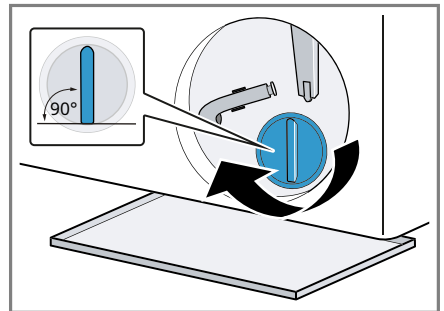

The pump cover handle must be vertical.

6. Install and close the service door.

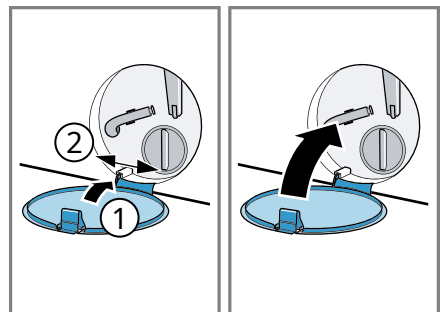

Before the next wash

To prevent unused detergent from flowing into the drain during the next wash, run the programme Drainoff after you have emptied the pump.

1. Open the tap.
2. Plug in the mains plug.
3. Switch on the device.
4. Pour one liter of water into compartment II.
5. Select a suitable program for draining.
→ *"Programs", Page 26*

17 Troubleshooting

You can remedy minor faults on the device yourself. Before contacting customer service, please refer to the troubleshooting information. This way you avoid unnecessary costs.




WARNING

Risk of electric shock! Improper repairs are dangerous.


 
- ▶ Only trained specialist personnel may carry out repairs on the device.
- ▶ Only original spare parts may be used for repair of the device.
- ▶ If the power cord of this appliance is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.




Malfunction	Cause and Troubleshooting
The display is off and Start/Reload flashes.	The energy saving mode is active. ▶ Press any button. The display lights up again.
"E:36 / -10"	Drain pipe or water drain hose is clogged. ▶ Clean the drain pipe and the water drain hose.
	Drain pipe or water drain hose is kinked or pinched. ▶ Make sure that the drain pipe and the water drain hose are not kinked or pinched.
	Drain pump is clogged. ▶ → "Cleaning the drain pump", page 37
	Water drain hose is connected too high. ▶ Install the water drain hose at a maximum height of 1 meter.
	Pump cover not assembled correctly. ▶ Assemble the pump cover correctly.
	Detergent dosage is too high. ▶ Immediate measure: mix a tablespoon of fabric softener with 0.5 l of water and pour this mixture into the left compartment (not for outdoor, sportswear and down textiles). ▶ Reduce the amount of detergent for the next wash with an equal load.
	Unauthorized extension mounted on the water drain hose.

Malfunction	Cause and Troubleshooting
<p>"E:36 / -10"</p>	<p>▶ Remove any unauthorized extensions from the water drain hose. → <i>"Connecting the device", page 15</i></p> <hr/> <p>Pump cover is not fully screwed in.</p> <p>▶ Make sure that the pump cover is screwed into the device as far as it will go. The pump cover handle must be vertical.</p>
<p>"E:60 / -2B"</p>	<p>The unbalance detection system has interrupted the spin cycle due to uneven distribution of the laundry.</p> <p>▶ Redistribute the laundry in the drum.</p> <p>Remark:If possible, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p>
<p>"E:30 / -10" and/or </p>	<p>Water pressure is low. No solution possible.</p> <hr/> <p>The strainers in the water supply are clogged.</p> <p>▶ Clean the strainers in the water supply.</p> <hr/> <p>Water tap is closed.</p> <p>▶ Open the water tap.</p> <hr/> <p>Water supply hose is kinked or pinched.</p> <p>▶ Make sure that the water supply hose is not kinked or pinched.</p> <hr/> <p>Water level measuring system defective.</p> <p>Remark:With the error message, the device starts a pump-down procedure.</p> <ol style="list-style-type: none"> 1.First, wait for approx. 5 minutes until the pump-down procedure has ended. 2.To reset the error message, turn off the device. 3.Turn the device back on. 4.If the error message appears again, please contact customer service. → <i>"Customer Service", page 51</i>
<p>• flashes.</p>	<p>The Voltage Control System detects an impermissible voltage drop.</p> <p>▶ No solution possible.</p> <p>Remark:When the supply voltage has stabilized, the program continues normally.</p>


Malfunction	Cause and Troubleshooting
⚡ flashes.	Undervoltage can cause a program extension. No solution possible.
🔥 burns.	Temperature is too high. ▶ Wait for the temperature to drop. ▶ → <i>"program cancel"</i> , Page 33
	Water level is too high. ▶ Select a suitable program for draining. → <i>"Programs"</i> , Page 26
🚪 flashes.	Door is not closed. 1.Close the door. 2.To start the program, press Start/Reload. ▶▶▶
	Laundry is wedged in the door. 1.Open the door again. 2.Remove trapped laundry. 3.Close the door. 4.To start the program, press Start/Reload. ▶▶▶
All other error codes.	Malfunction ▶ Please contact customer service. → <i>"Customer Service"</i> , page 51
"E:30/-20"	Solenoid valve defective. ▶ Please contact customer service. → <i>"Customer Service"</i> , page 51
	Detergent dosage is too high. ▶ Reduce the amount of detergent for the next wash with an equal load.
	Additional water filled. ▶ Do not fill the device with additional water during operation.
Device not working.	Mains plug of the power cable is not plugged in. ▶ Connect the appliance to the mains.
	The fuse in the fuse box has tripped. ▶ Check the fuse in the meter box.
	Power supply has failed. ▶ Check whether the interior lighting or other appliances are working.

Malfunction	Cause and Troubleshooting
Program does not start.	<p>▶ Start/Reload was not pressed. ▶ Press ▶ Start/Reload.</p>
	<p>Door is not closed. 1. Close the door. 2. To start the program, press Start/Reload. ▶</p>
	<p>Child lock is activated. ▶ → "Deactivate child lock", page 34</p>
	<p>▶ Finished inis activated. ▶ Check if Finished inis activated. → "Buttons", Page 24</p>
Door cannot be opened.	<p>Temperature is too high. ▶ Wait for the temperature to drop. ▶ → "program cancel", Page 33</p>
	<p>Water level is too high. ▶ Select a suitable program for draining. → "Programs", Page 26</p>
	<p>Power cut. ▶ Open the door with the emergency release. → "Emergency release", page 50</p>
Washing water is not pumped out.	<p>Drain pipe or water drain hose is clogged. ▶ Clean the drain pipe and the water drain hose.</p>
	<p>Drain pipe or water drain hose is kinked or pinched. ▶ Make sure that the drain pipe and the water drain hose are not kinked or pinched.</p>
	<p>Drain pump is clogged. ▶ → "Cleaning the drain pump", page 37</p>
	<p>Water drain hose is connected too high. ▶ Install the water drain hose at a maximum height of 1 meter.</p>
	<p>Pump cover not assembled correctly. ▶ Assemble the pump cover correctly.</p>

Malfunction	Cause and Troubleshooting
<p>Washing water is not pumped out.</p>	<p>Detergent dosage is too high.</p> <ul style="list-style-type: none"> ▶ Immediate measure: mix a tablespoon of fabric softener with 0.5 l of water and pour this mixture into the left compartment (not for outdoor, sportswear and down textiles). ▶ Reduce the amount of detergent for the next wash with an equal load.
	<p>Unauthorized extension mounted on the water drain hose.</p> <ul style="list-style-type: none"> ▶ Remove any unauthorized extensions from the water drain hose. <p>→ <i>"Connecting the device", page 15</i></p>
	<p>Pump cover is not fully screwed in.</p> <ul style="list-style-type: none"> ▶ Make sure that the pump cover is screwed into the device as far as it will go. The pump cover handle must be vertical.
<p>No water flows into the device. The detergent was not washed in.</p>	<p> Start/Reload was not pressed.</p> <ul style="list-style-type: none"> ▶ Press  Start/Reload.
	<p>The strainers in the water supply are clogged.</p> <ul style="list-style-type: none"> ▶ Clean the strainers in the water supply.
	<p>Water tap is closed.</p> <ul style="list-style-type: none"> ▶ Open the water tap.
<p>Water supply hose is kinked or pinched.</p> <ul style="list-style-type: none"> ▶ Make sure that the water supply hose is not kinked or pinched. 	
<p>Start several times with centrifugation.</p>	<p>The imbalance control system eliminates the imbalance by distributing the laundry several times.</p> <ul style="list-style-type: none"> ▶ No error - no action required.
	<p>Remark: When loading, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p>
<p>The program duration changes during the wash cycle.</p>	<p>The program sequence is electronically optimized. This may lead to changes in the program duration.</p> <ul style="list-style-type: none"> ▶ No error - no action required.
	<p>The imbalance control system eliminates the imbalance by distributing the laundry several times.</p> <ul style="list-style-type: none"> ▶ No error - no action required.

Malfunction	Cause and Troubleshooting
The program duration changes during the wash cycle.	<p>Remark:When loading, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p> <hr/> <p>Foam control system provides an extra rinse when foaming is too high.</p> <ul style="list-style-type: none"> ▶ No error - no action required.
The water is not visible in the drum bar.	<p>The water is below visible range.</p> <ul style="list-style-type: none"> ▶ No error - no action required. ▶ Do not fill the device with additional water during operation.
Drum jerks after program start.	<p>The cause is an internal motor test.</p> <ul style="list-style-type: none"> ▶ No error - no action required.
In the compartment there is residual water. 	<p>Insert in compartment hidden. </p> <ul style="list-style-type: none"> ▶ → <i>"Cleaning the detergent drawer", Page 36</i>
Vibration and movement of the appliance during the spin run.	<p>The appliance is not leveled properly.</p> <ul style="list-style-type: none"> ▶ → <i>"Adjusting the device", Page 16</i> <hr/> <p>Device feet are not fixed.</p> <ul style="list-style-type: none"> ▶ Secure the device feet. → <i>"Adjusting the device", Page 16</i> <hr/> <p>Transport protections have not been removed.</p> <ul style="list-style-type: none"> ▶ → <i>"Remove transport locks", page 14.</i>
Drum is spinning, er no water flows into the appliance.	<p>Load recognition is active.</p> <ul style="list-style-type: none"> ▶ No error, no action necessary. <p>Remark:The load detection can take up to 2 minutes.</p>
strong foam ming.	<p>Detergent dosage is too high.</p> <ul style="list-style-type: none"> ▶ Immediate measure: mix a tablespoon of fabric softener with 0.5 l of water and pour this mixture into the left compartment (not for outdoor, sportswear and down textiles). ▶ Reduce the amount of detergent for the next wash with an equal load.
High spin speed rental is not reached.	<p>Low spin speed is set.</p> <ul style="list-style-type: none"> ▶ Set a higher spin speed for the next wash. <hr/> <p> Less Ironing is activated.</p> <ul style="list-style-type: none"> ▶ Select a suitable program for the type of fabric.

Malfunction	Cause and Troubleshooting
High spin speed rental is not reached.	<p>Unbalance control system compensates for imbalance through reduced spin speed.</p> <p>▶ Redistribute the laundry in the drum.</p> <p>Remark:If possible, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p> <p>▶ Start the programCentrifuge.</p>
Program centrifugal run does not start.	<p>Drain pipe or water drain hose is clogged.</p> <p>▶ Clean the drain pipe and the water drain hose.</p> <hr/> <p>Drain pipe or water drain hose is kinked or pinched.</p> <p>▶ Make sure that the drain pipe and the water drain hose are not kinked or pinched.</p> <hr/> <p>The unbalance detection system has interrupted the spin cycle due to uneven distribution of the laundry.</p> <p>▶ Redistribute the laundry in the drum.</p> <p>Remark:If possible, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p> <p>▶ Start the programCentrifuge.</p>
fizzing, hissing loud.	<p>Water is flushed into the detergent drawer under pressure.</p> <p>▶ No error - normal operating noise.</p>
Loud noise during spinning.	<p>The appliance is not leveled properly.</p> <p>▶ → <i>"Adjusting the device", Page 16</i></p> <hr/> <p>Device feet are not fixed.</p> <p>▶ Secure the device feet. → <i>"Adjusting the device", Page 16</i></p> <hr/> <p>Transport protections have not been removed.</p> <p>▶ → <i>"Remove transport locks", page 14.</i></p>
Clapping, clattering in the pump.	<p>A foreign object has entered the pump.</p> <p>▶ → <i>"Cleaning the drain pump", page 37</i></p>
Slurping, rhythmic suction sound.	<p>Pump is active, the solution is being pumped out.</p> <p>▶ No error - normal operating noise.</p>

Malfunction	Cause and Troubleshooting
wrinkling.	<p>Spin speed is too high.</p> <ul style="list-style-type: none"> ▶ Set a lower spin speed for the next wash.
	<p>The load quantity is too high.</p> <ul style="list-style-type: none"> ▶ Reduce the load during the next wash.
	<p>Inappropriate program set for the type of fabric.</p> <ul style="list-style-type: none"> ▶ Select a suitable program for the type of fabric.
Detergent or laundry detergent softer drips from the cuff and collects on the door or in the cuff fold.	<p>Too much detergent/fabric softener in the detergent drawer.</p> <ul style="list-style-type: none"> ▶ When dosing the liquid detergent and fabric softener, pay attention to the marking in the detergent drawer and do not dose above that.
Spin result is not to satisfaction-ness. The laundry is too wet / too damp.	<p>Low spin speed is set.</p> <ul style="list-style-type: none"> ▶ Set a higher spin speed for the next wash. ▶ Start the programCentrifuge.
	<p> Less Ironingis activated.</p> <ul style="list-style-type: none"> ▶ Select a suitable program for the type of fabric.
	<p>Drain pipe or water drain hose is clogged.</p> <ul style="list-style-type: none"> ▶ Clean the drain pipe and the water drain hose.
	<p>Drain pipe or water drain hose is kinked or pinched.</p> <ul style="list-style-type: none"> ▶ Make sure that the drain pipe and the water drain hose are not kinked or pinched.
	<p>The unbalance detection system has interrupted the spin cycle due to uneven distribution of the laundry.</p> <ul style="list-style-type: none"> ▶ Redistribute the laundry in the drum. <p>Remark:If possible, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p>
	<ul style="list-style-type: none"> ▶ Start the programCentrifuge. <p>Unbalance control system compensates for imbalance through reduced spin speed.</p> <ul style="list-style-type: none"> ▶ Redistribute the laundry in the drum.


Malfunction	Cause and Troubleshooting
Spin result is not to satisfaction-ness. The laundry is too wet / too damp.	<p>Remark:If possible, place large and small items of laundry together in the drum. Different sized laundry is more evenly distributed during the spin cycle.</p> <p>▶ Start the programCentrifuge.</p>
Detergent residue on the damp laundry.	<p>Detergents can contain water-insoluble substances, which deposit on the laundry.</p> <p>▶ Start the programTo rinse.</p>
Detergent residue on the dry laundry.	<p>Detergents can contain water-insoluble substances, which deposit on the laundry.</p> <p>▶ Brush the laundry after washing and drying.</p>
At the water supply feed hose is leaking water.	<p>The water inlet hose is not correctly / firmly connected.</p> <ol style="list-style-type: none"> 1.Connect the water supply hose correctly. → <i>"Connecting the water inlet hose", page 15</i> 2.Tighten the coupling properly.
Water is leaking from the water drain hose.	<p>Water drain hose is damaged.</p> <p>▶ Replace the damaged water drain hose.</p> <hr/> <p>Water drain hose is not connected correctly.</p> <p>▶ Connect the water drain hose correctly. → <i>"Drainage connection types", page 16</i></p>
Odor has formed in the appliance <small>Pine tree.</small>	<p>Humidity and detergent residue can encourage bacterial growth.</p> <p>▶ → <i>"Cleaning the drum", page 36</i></p> <p>▶ When you are not using the appliance, leave the door and detergent drawer open to allow the residual water to dry out.</p>

17.1 Emergency release

unlock door

Required: The drain pump is empty.
→ *Page 37*

1. **ATTENTION!** Running water can lead to material damage.
 - ▶ Do not open the door if water can be seen behind the glass.
Pull down and release the emergency release with the aid of a tool.

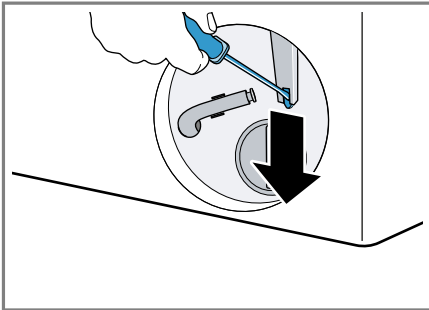

- a The door lock is unlocked.
2. Place the service door and click it into place.
3. Close the service door.

18 Transport, on-hit and drain

18.1 Dismantling the device

Remark: You can find more information in the digital operating instructions by scanning the QR code in the table of contents or on www.bosch-home.com.


1. Close the tap.
2. Water supply hose empty.
3. Switch off the device ate out.
4. Remove the plug device from the from the socket.

5. Let the suds drain.
→ *"Cleaning the drain pump", page 37*
6. Disassemble the hoses.

18.2 Installing transport locks

Secure the device before transport with the transport locks to avoid damage.

1. Remove the 4 cover caps using a screwdriver.

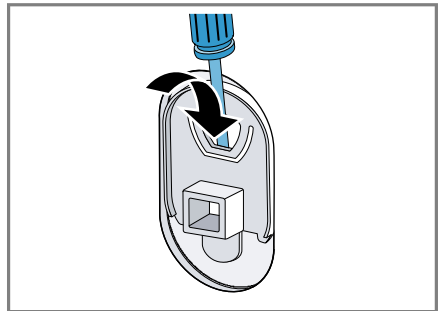


- Keep the cover caps.
2. Install the 4 transport locks. Keep the description
→ *"Remove transport locks", page 14* and proceed in reverse order.

18.3 Restarting the device

- ▶ For more information, see
→ *"Setting up and connecting", Page 13* and
→ *"Start the wash cycle without laundry", page 20*.

18.4 Disposal of your old appliance

Environmentally friendly disposal allows valuable raw materials to be reused.

 **WARNING**
Risk of health hazard!

Children can lock themselves in the appliance and endanger their lives.

- ▶ Do not install the appliance behind a door that blocks or prevents the opening of the appliance door.
- ▶ In the case of discarded appliances, remove the plug of the mains cable from the socket, then cut the mains cable and damage the lock of the appliance door so that the appliance door no longer closes.

1. Unplug the power cord from the outlet.

2. Cut the power cord.

3. Dispose of the device in an environmentally friendly way.

You can obtain information about the current disposal methods from your dealer and your municipal or district council office.



This appliance is marked in accordance with the European Directive 2012/19/EU on waste electrical and electronic

chemical equipment (waste electrical and electronic equipment - WEEE). The directive sets the framework for the take-back valid in the EU and disposal of old appliances.

19 Customer Service

Original replacement parts that are relevant for the function in accordance with the respective Ecodesign Regulation can be obtained from our service department for a period of at least 10 years from the time of placing the device on the market within the European Economic Area.

Remark: Engaging the service within the framework of the manufacturer's warranty conditions is free of charge.

Detailed information about the warranty period and warranty conditions in your country can be obtained from our after-sales service, your dealer or on our website.

When contacting customer service, you will need the product number (E-Nr.) and the production number (FD) of the device.

You can find the contact details of the after-sales service in the supplied service list or on our website.

19.1 Product number (E no.) and production number (FD)

The product number (E-Nr.) and the production number (FD) can be found on the type plate of the device.

The type plate is located depending on the model: on the inside of the door.

NLcustomer service

son the inside of the bottom

holding valve.



son the back of the device

honeycomb.

In order to quickly find your device data and the service telephone numbers, you can write down the data.

20 Consumption values

The following information is provided in accordance with the EU Ecodesign Regulation. The specified values for other programs as Eco 40-60 are only guide values and have been determined in accordance with the applicable standard EN60456.

Program	belathing (kg)	Program-maduur (h:min) ¹	energy-gibberish use (kWh/cycle) ¹	Water-far-usage (l/cycle) ¹	maxi-male tempeh rature (°C) 5 min ¹	centri-fuge revving number (t/min) ¹	Rest-moisture-half-at (%) ¹
Eco 40-60 ²	9.0	3:48	0.870	75.0	38	1351	50.00
Eco 40-60 ²	4.5	2:54	0.370	40.0	27	1351	49.00
Eco 40-60 ²	2.5	2:22	0.180	30.0	23	1351	52.00
Cotton 20 °C	9.0	3:44	0.400	98.0	23	1400	50.00
Cotton 40 °C	9.0	3:44	1,290	98.0	44	1400	50.00
Cotton 60 °C	9.0	3:44	1,750	98.0	60	1400	50.00
Cotton 40 °C +  Brewash	9.0	4:14	1,330	110.0	44	1400	50.00
wrinkle recovery lenght 40 °C	4.0	2:37	0.800	61.0	44	1200	30.00
Fast/Mix 40 °C	4.0	1:05	0.640	44.0	42	1400	53.00
 Wool 30 °C	2.0	0:41	0.300	48.0	29	800	26.00

¹The actual values may vary due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions deviate from the stated values.

²Test program in accordance with the EU Ecodesign Regulation and the EU energy call regulation with cold water (15°C).

21 Technical data

Device height	84.8 cm
Device width	59.8cm
Device depth	59.0 cm

Device depth with closed door	63.6 cm
Device depth with open door	107.3 cm
Weight	73.5 kg

NL Technical data

Maximum load thing	9.0 kg
mains voltage	220-240V, 50-60 Hz
☞ Minimum input installation fuse	10 A
Rated power gene	2300W
Recorded Ver- be allowed to	sOff state: 0.15W snon-disabled caved in position: 0.50 W
water pressure	sAt least: 100 kPa (1 bar) sMaximum: 1000 kPa (10 bar)
Length of the water supply feeding hose	150 cm
Length of the water drain hose	150 cm
Length of the mains connection cable	160 cm

You can find more information about your model on the Internet under <https://eprel.ec.europa.eu/>¹. This web address refers to the official EU product database EPREL. Then follow the instructions when looking for the model. The model identification consists of the slash character of the E number (E-No.) on the type plate. Alternatively, you will also find the model identifier in the first line of the EU energy label.

¹Only applies to countries in the European Economic Area



BOSCH
HOME APPLIANCES
SERVICE

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Hausgeräte GmbH
Carl-Wery-Straße 34
81739 Munich, GERMANY
www.bosch-home.com

A Bosch Company

* 9001688744*

9001688744(020614)

NL