

SIEMENS

Washing machine

WU14UT00FG

NL User manual and installation instructions



Register your product on My Siemens and discover exclusive services and offers.
siemens-home.bsh-group.com/en/welcom

The future moving in.

Siemens Home Appliances

Refer to the Digital User's Guide for more information.



Index

1 Safety.....	4	7 Display	21
1.1 General instructions	4	8 Keys	24
1.2 Destination of the device rate	4	9 Programs	25
1.3 Restriction of users	4	10 Accessories.....	29
1.4 Secure Installation	5	11 Laundry.....	29
1.5 Safer use	7	11.1 Preparing laundry	29
1.6 Safe cleaning and maintenance	9	12 Detergent and fabric care detergent.....	30
2 Avoiding Property Damage	11	13 Essentials of the Operation.....	30
3 Environmental protection and washer.....	12	13.1 Switching on the device	30
3.1 Disposing of the packaging	12	13.2 Set program	30
3.2 Conserve energy and resources	12	13.3 Adjusting program settings	30
3.3 Energy Saving Mode	12	13.4 Filling the drum with laundry	30
4 Set up and connection	13	13.5 Inserting the dosing aid for liquid detergent	31
4.1 Unpacking the device	13	13.6 Using the dosing aid for liquid detergent	31
4.2 Package Contents.....	13	13.7 Dosing detergent and fabric care product	31
4.3 Installation site requirements	13	13.8 Starting the program ...	32
4.4 Removing transport protection devices	14	13.9 Change activated program end time	32
4.5 Connecting the device	15	13.10 Soaking laundry	32
4.6 Adjusting the appliance	16	13.11 Adding laundry	32
4.7 Connecting the device electrically.....	17	13.12 Progr. cancel	32
5 Getting to know your device.....	18	13.13 Resume program on rinse hold.....	33
5.1 Device	18	13.14 Taking out laundry	33
5.2 Detergent drawer	18	13.15 Switching off the appliance	33
5.3 Control panel	19		
6 Before first use	20		
6.1 Starting a wash cycle without laundry	20		

14 Child Lock	33
14.1 Enabling Child Lock	33
14.2 Deactivating the child lock	33
15 Basic settings	34
15.1 Overview of the basic settings	34
15.2 Changing basic settings.....	35
16 Cleaning and maintenance	35
16.1 Cleaning drum	35
16.2 Cleaning the detergent drawer.....	35
16.3 Cleaning the drain pump	36
17 Troubleshooting	40
17.1 Emergency release	49
18 Transporting, storing and disposal.....	49
18.1 Disassembling the device	49
18.2 Installing transport protections	49
18.3 Putting the device back into operation	49
18.4 Disposal of your old appliance	50
19 After-sales service.....	50
19.1 Product number (E-no.) and production number (FD)	50
20 Consumption values	52
21 Technical data	52



1 Safety

Please observe the following safety instructions.

1.1 General instructions



- ¡Read this manual carefully.
- ¡Keep the operating instructions and product information for future reference for use or for subsequent owners.
- ¡Do not connect the device in case of transport damage.

1.2 Destination of the device

Only use the device:

- ¡to wash machine washable textiles and woollens for hand washing according to the care label.
- ¡with tap water and standard, suitable for the washing machine detergents and maintenance products.
- ¡for domestic use and in enclosed spaces within the home sable environment.
- ¡up to an altitude of 4000 m above sea level.


1.3 Restriction of Users

This appliance can be operated by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they are supervised or have been instructed in the safe use of the appliance and understand the resulting dangers. understood. Children must not play with the appliance.

Cleaning and user maintenance must not be made by children unless they are supervised.


Make sure that children up to the age of 3 and pets cannot reach the device.

1.4 Secure installation

 **WARNING** – Risk of electric shock! Improper installations are dangerous.

- ▶ Only connect and operate the device in accordance with the information on the rating plate.
- ▶ Only connect the device to an alternating current mains via a properly installed socket with earthing contact.

- ▶ The protective earthing system of the domestic electrical installation must be installed in accordance with the electrotechnical regulations. The installation must have a sufficiently large conductor diameter.

- ▶ When using an earth leakage circuit breaker, only use a type with the  mark.
- ▶ Never power the device through an external switching device, e.g. a time switch or remote control.
- ▶ When the device is installed, the mains plug of the mains connection cable must be freely accessible, or if free access is not possible, an all-pole disconnection device must be installed in the permanently installed electrical installation in accordance with the installation instructions.
- ▶ When setting up the device, make sure that the mains cable is not pinched or damaged.

Damaged insulation of the power cord is dangerous.

- ▶ Never bring the power cord into contact with hot device parts or heat sources.
- ▶ Never bring the power cord into contact with sharp points or edges.
- ▶ Never kink, crush or modify the power cord.

 **WARNING** – Risk of fire!

Using an extended power cord and unauthorized adapters is dangerous.

- ▶ Do not use extension cords or multiple sockets.
- ▶ Only use adapters and power cords approved by the manufacturer.

- ▶ If the power cord is too short and a longer power cord is not available, contact an electrical retailer to adjust the home installation.

⚠ WARNING – Risk of injury!

The heavy weight of the device can cause injuries when lifting it.

- ▶ Do not lift the device alone.

If this appliance is improperly installed in a washer-dryer stack, the installed appliance may fall down.

- ▶ Stacking the dryer on top of a washing machine only with the dryer manufacturer's connection kit. Any other placement method is not allowed.
- ▶ Do not install the appliance in a washer-dryer stack if the dryer manufacturer does not offer a suitable connection set.
- ▶ Do not install appliances from different manufacturers and with different depths and widths in a washer-dryer stack.
- ▶ Do not set up a washer-dryer stack on a platform, the appliances could tip over.

⚠ WARNING – Risk of suffocation!

Children can pull packaging material over their heads and become entangled and suffocated.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

⚠ CAUTION – Risk of injury!

The device may vibrate or move during operation.

- ▶ Set up the device on a clean, flat and firm surface.

- ▶ Level the device using the device feet and a spirit level.

There is a tripping hazard if hoses and mains connection cables are laid incorrectly.

- ▶ Lay the hoses and connecting cables in such a way that they cannot be tripped over.

If the appliance is moved by protruding parts, such as the loading door, the parts may break off.

- ▶ Do not move the device by protruding parts.

⚠ CAUTION – Risk of cutting!

Sharp edges on the device can lead to cuts when touched.

- ▶ Do not touch the device on sharp edges.
- ▶ Use protective gloves when installing and transporting the device.

1.5 Safer Use

⚠ WARNING – Risk of electric shock!

A damaged device or power cord is dangerous.

- ▶ Never use a damaged device.
- ▶ Never pull on the power cord to disconnect the device from the power supply. Always pull the plug on the power cord.
- ▶ If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and close the tap.
- ▶ Contact the service department. → *Page 50* Penetrating moisture can cause an electric shock.
- ▶ Only use the device in closed rooms.
- ▶ Never expose the device to excessive heat and humidity.
- ▶ Do not use a steam cleaner, high-pressure cleaner, hoses or sprayers to clean the appliance.

⚠ WARNING – Risk of health hazard! Children can lock themselves in the appliance and endanger their lives.

- ▶ Do not install the device behind a door that blocks or prevents the opening of the device door.

- ▶ In the case of discarded appliances, unplug the mains cable, then cut the mains cable and damage the appliance door lock to such an extent that the appliance door no longer closes.

⚠ WARNING – Risk of suffocation!

Children can inhale or swallow small parts and suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

⚠ WARNING – Risk of poisoning!

Washing and care products can lead to poisoning if ingested.

- ▶ In case of accidental ingestion, consult a doctor.
- ▶ Keep detergents and care products out of the reach of children.

⚠ WARNING – Risk of explosion!

If laundry has been pre-treated with cleaning agents containing solvents, this can lead to an explosion in the appliance.

- ▶ Rinse pre-treated laundry thoroughly with water before washing.

⚠ CAUTION – Risk of injury!

The cover plate may break when climbing or scrambling on the device.

- ▶ Do not climb or scramble on the device.
The appliance can tip over when sitting or leaning on the open door.
- ▶ Do not sit or lean on the appliance door.
- ▶ Do not place any objects on the appliance door.
Reaching into the rotating drum can lead to hand injuries.

- ▶ Wait until the drum has come to a complete stop before reaching into the drum with your hand.

⚠ CAUTION – Risk of burns!

The suds become hot when washing at high temperatures.

- ▶ Do not touch the hot soapy water.

⚠ CAUTION – Risk of chemical burns! When opening the detergent drawer, detergent and care products may splash out of the appliance. Contact with eyes or skin may cause irritation.

- ▶ In case of contact with detergents or care products, rinse eyes or skin thoroughly with clean water.
- ▶ In case of accidental ingestion, consult a doctor.
- ▶ Keep detergents and care products out of the reach of children.

1.6 Safe cleaning and maintenance

⚠ WARNING – Risk of electric shock! Improper repairs are dangerous.

- ▶ Only trained specialist personnel may carry out repairs on the device.
- ▶ Only original spare parts may be used for repairing the device.
- ▶ If the power cord of this appliance becomes damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. Penetrating moisture can cause a shock.
- ▶ Do not use a steam cleaner, high-pressure cleaner, hoses or sprayers to clean the appliance.

⚠ WARNING – Risk of injury!

The use of non-original spare parts and accessories is dangerous.

- ▶ Only use original spare parts and original accessories from the manufacturer.

 **WARNING** – Risk of poisoning!

Toxic fumes may be produced when using cleaning agents containing solvents.

▶ Do not use cleaning agents containing solvents.

2 Material damage avoid

PAY ATTENTION!

An incorrect dosage of fabric softeners, detergents, care products and cleaning agents can affect the operation of the appliance.

- ▶ Follow the manufacturer's dosing recommendations.

Exceeding the maximum load quantity affects the operation of the device.

- ▶ Observe and do not exceed the maximum load for each programme.

→ "Programs", page 25

The device is secured for transport with transport protection devices. Transport protection devices that are not removed can lead to material damage and damage to the device.

- ▶ Before commissioning, completely remove and store all transport protection devices.
- ▶ Before each transport, fully install all transport protection devices to avoid transport damage.

Improper connection of the water supply hose can lead to material damage.

- ▶ Tighten the screw connections on the water supply by hand.
- ▶ It is best to connect the water supply hose directly to the water tap without any additional connecting elements, such as adapters, extensions, valves or the like.
- ▶ Make sure that the inner diameter of the tap is at least 17 mm.
- ▶ Make sure that the length of the thread on the connection to the water tap is at least 10 mm.

A water pressure that is too low or too high can hinder the function of the device.

- ▶ Make sure that the water pressure on the water supply installation is at least 100 kPa (1 bar) and at most 1000 kPa (10 bar).
- ▶ If the water pressure exceeds the specified maximum value, a pressure reducing valve must be installed between the drinking water connection and the hose set of the device.
- ▶ Do not connect the appliance to the mixer tap of an unpressurised water heater or water heater.

Modified or damaged water hoses can lead to material damage and damage to the device.

- ▶ Never kink, pinch, alter or cut water hoses.
- ▶ Only use the supplied water hoses or original replacement hoses.
- ▶ Reuse never used water hoses.

Operation with polluted or too hot water can cause material damage and damage to the device.

- ▶ Only use the appliance with cold tap water.

Unsuitable cleaning agents can damage the surfaces of the device.

- ▶ Do not use harsh or abrasive cleaning agents.
- ▶ Do not use cleaning agents containing strong alcohol.
- ▶ Do not use hard scouring or washing-up sponges.
- ▶ Only clean the device with water and a soft, damp cloth.
- ▶ In case of contact with the device, immediately remove all detergent residues, spray mist residues or residues.

3 Environmental protection and saving

3.1 Disposal of the packaging

The packaging materials are environmentally friendly and can be reused.

- ▶ Dispose of the individual components separately by type.

3.2 Conserve energy and resources

If you follow these instructions, your appliance will use less electricity and water.

Use programs with low temperatures and longer washing times and use the maximum load capacity.

- aThe energy consumption and water consumption are the most efficient.

Use economical program setting.

- aWhen you set the program settings for a programme, the display shows the expected consumption.

Dose detergent according to the degree of soiling of the laundry.

- aFor a light to normal degree of contamination, a small amount of detergent is sufficient. Follow the dosage advice of the detergent manufacturer.

Reduce washing temperature for lightly and normally soiled laundry.

- aAt low temperatures, it consumes device less energy. Lower temperatures than stated on the care label are also sufficient for light to normal soiling.

Set the maximum spin speed if the laundry is to be dried in the tumble dryer afterwards.

- aDryer laundry shortens the program length when drying and reduces energy consumption. With a higher spin speed, the residual moisture in the laundry decreases and the noise volume of the spin increases.

Wash laundry without prewash.

- aWashing with prewash extends the program duration and increases energy and water consumption.

The device has automatic load balancing.

- aThe automatic charge matching optimally adjusts water consumption and program duration to the type of fabric and load capacity.

3.3 Energy Saving Mode

If you do not operate the device for a longer period of time, it automatically switches to energy saving mode.

The energy-saving mode is exited when you operate the device again.

4 Set up and connect

4.1 Unpack the device

PAY ATTENTION!

Objects left in the drum that are not intended for the use of the appliance can lead to material and appliance damage.

- ▶ Remove all these objects and the supplied accessories from the drum before use.

1. Completely remove packaging material and protection from the device.

→ *"Disposing of the packaging", page 12*

2. Check the device for visible damage.

3. Open the door.

4. Remove the accessories from the drum.

5. Close the door.

4.2 Package Contents

After unpacking, check all parts for transport damage and the completeness of the delivery.

PAY ATTENTION!

Use with incomplete or defective accessories may impair the operation of the device or cause material damage and damage to the device.

- ▶ Do not use the device with incomplete or defective accessories.
- ▶ Replace accessories before using the device.
→ *"Accessories", page 29*

Remark: The device has been checked at the factory for correct operation. Water stains can enter

remain on the device. The stains disappear after the first wash.

The delivery consists of: ;

Washing machine

; Accompanying documents ;

Transport protections

→ *"Remove transport protection", page 14*

; Cover caps

; Water supply hose

→ *"Connect the water supply hose", page 15*

4.3 Installation site requirements

 **WARNING**

Risk of electric shock!

The device contains live parts.

Touching live parts is dangerous.

- ▶ Do not use the device without a cover plate.

 **WARNING**

Risk of injury!

When used on a plinth, the device can tip over.

- ▶ The device feet for commissioning on a plinth must always be fitted with the fixings
→ *Page 29* confirmation from the manufacturer.

PAY ATTENTION!

Freezing residual water in the device can damage the device.





- ▶ Do not place and use the device in frost-sensitive places or outdoors.

If the device is tilted more than 40°, residual water can escape from the device and cause material damage.

- ▶ Carefully tilt the device.

NLSet up and connect

► Transport the device upright.

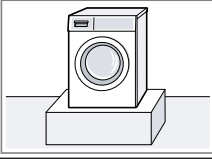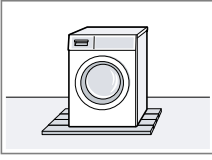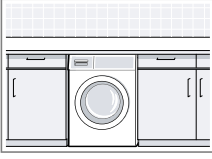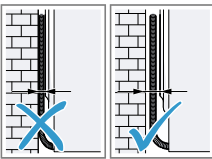
Place of installation	Requirements
Holder 	The device with locking tabs → <i>Page 29</i> to confirm.
Floor with wooden beams 	Place the device count on a resistant wooden plate (thick too minimal 30mm) which screwed firmly to the floor.
Kitchenette 	The device al-borrow under one continuous work place sheet, that with the adjacent cabinet is connected Pine tree. Required niche width: 60 cm. Remark:If the cover plate will be removed, must be the metal cover plate → <i>"Accessories", Page 29</i> n front of building it in be confirmed tid.
On a wall 	No mains connection cable and none snakes in between wall and equipment wedge in.

4.4 Remove transport protection devices


The device is secured for transport with transport locks on the back of the device.

Remark:Keep the bolts of the transport protection devices and the sleeves for later transport.
→ *"Install transport protection", page 49*


1.Pull the hoses out of the holders.

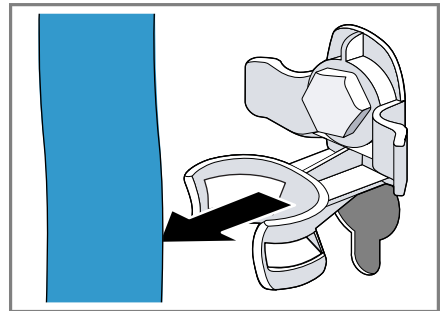


2.Loosen and remove all bolts of the 4 transport protection devices with an open-end wrench SW13 ②.

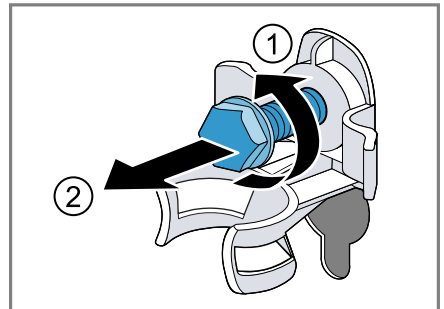


3.Remove the mains connection cable from the holder.

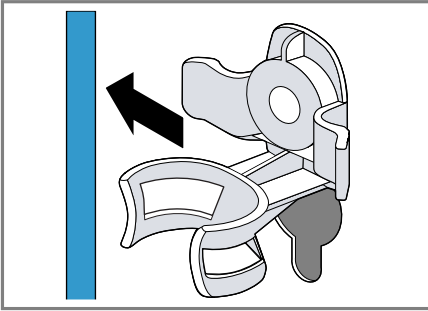


4.Remove the 4 sleeves.

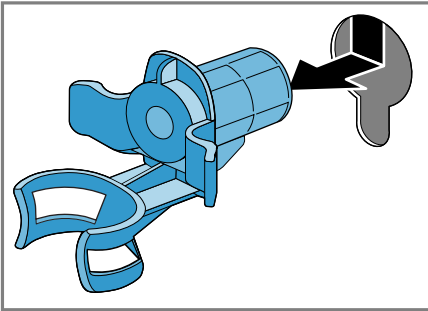

5.Install the 4 covers.

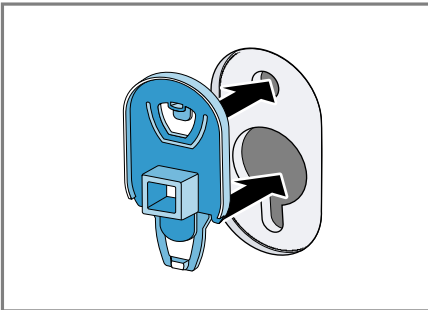

6.Slide the 4 cover caps downwards.

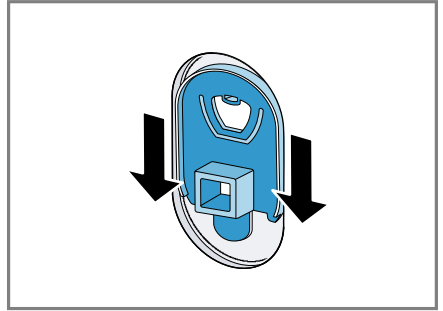


Remark:To install the transport protection devices in the device for transport, undo these steps in reverse order.

4.5 Connecting the device


Connect water supply hose

1.Connect the water supply hose to the appliance.

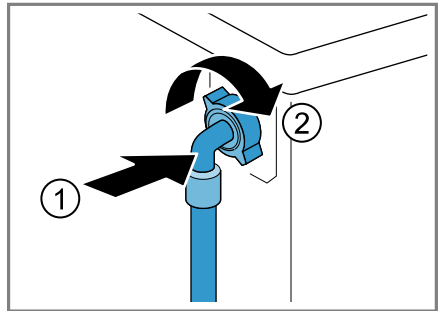

NLSet up and connect

2. Connect the water inlet hose to the tap (26.4 mm = 3/4").

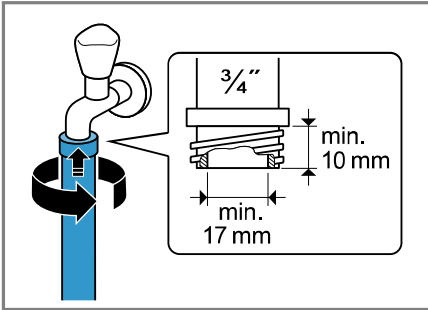

3. Carefully open the tap and check that the connections are tight.

Water outlet connection types

The information will help you connect this appliance to the water outlet.

PAY ATTENTION!

When draining, the water drain hose is under pressure and can become detached from the installed connection position.


- Secure the water drain hose against unintentional loosening.

Remark: Observe the pumping heights.

The maximum pumping height bed

plastic stand pipe with rubber run muff or one floor drain



The water feeding hose with a bend
→ Page 29
fix and bor-
gene.

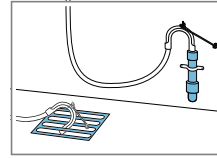

4.6 Adjusting the device


To reduce noise and vibrations and avoid the device walking, set the device horizontally.

1. Loosen the lock nuts with a SW17 open-end wrench.

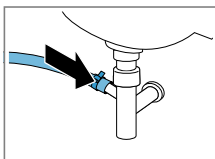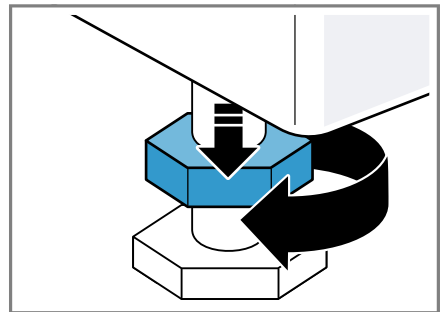


The connection position tie with one hose clamp (24-40 mm) Bore gene.

Washbasin

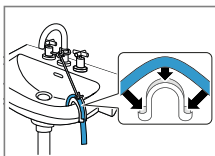


The water feeding hose with a bend
→ Page 29
fix honor and gen.

- 2.To adjust the device, turn the device feet. Check the horizontal adjustment of the device with a spirit level.

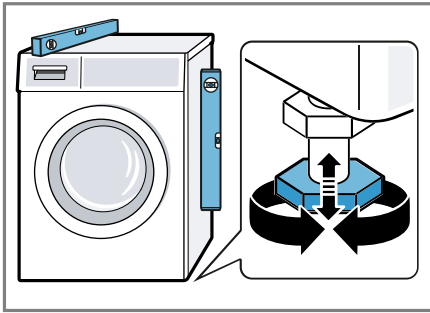

All device feet must be firmly on the floor.

- 3.Tighten the counter nuts against the housing hand-tight with a SW17 open-end wrench.

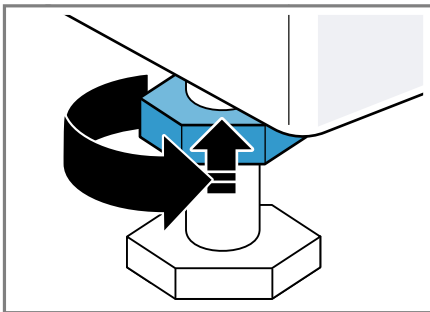

Hold the appliance foot firmly and do not adjust the height.

4.7 Connecting the device electrically

Remark:Your domestic electrical installation for this appliance must comply with local legal and safety regulations and must be earth leakage eagle contains-ten.

- 1.Insert the mains plug of the appliance's connecting cable into a socket in the vicinity of the appliance.


The connection data for the device can be found in the technical data → Page 52.

- 2.Check the mains plug for tightness.

5 Get to know your device

5.1 Device

Here you will find an overview of the components of your device.

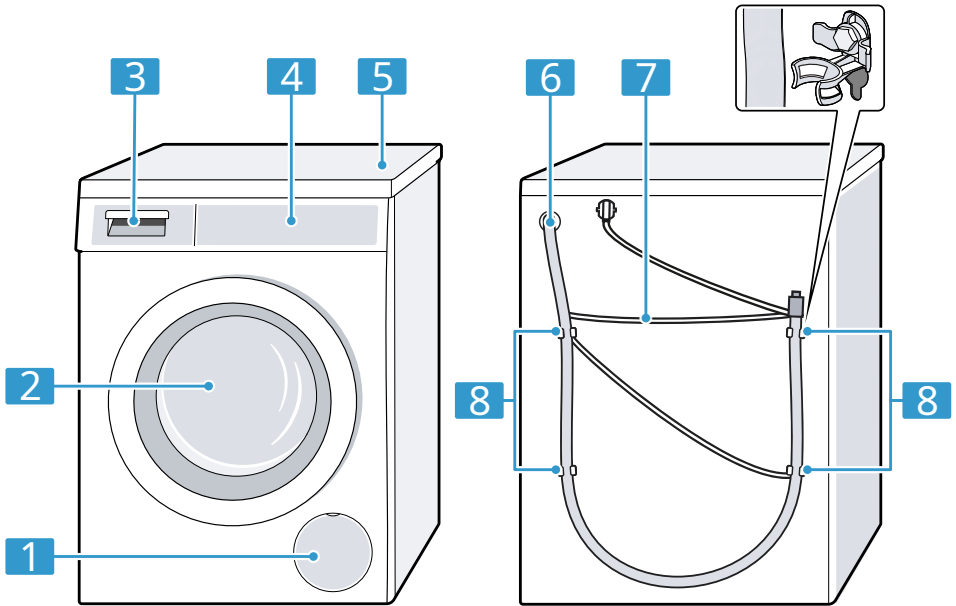

Depending on the device type, details on the image may differ, e.g. the color and the form.

- | | |
|----------|--|
| 1 | Service valve/pump
→ <i>Page 36</i> |
| 2 | Door |
| 3 | Detergent drawer → <i>Page 18</i> |
| 4 | Control panel
→ <i>Page 19</i> |
| 5 | Cover plate |
| 6 | Water drain hose
→ <i>Page 16</i> |


- | | |
|----------|---|
| 7 | Mains connection cable → <i>Page 17</i> |
| 8 | Transport protections
→ <i>Page 14</i> |

5.2 Detergent drawer

Remark: Please take note of the manufacturer's information on the use and dosage of detergents and care products and the information

in the program descriptions.


→ "Programs", page 25

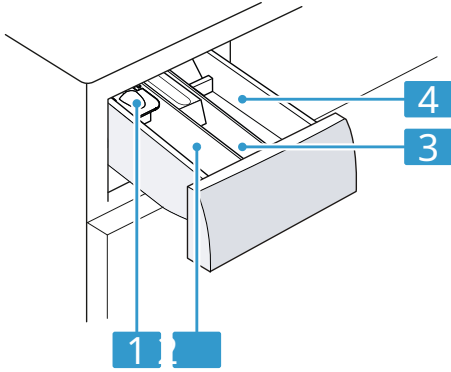

- | | |
|----------|---|
| 1 | Dosing aid for liquid detergent
→ "Insert dosing aid for liquid detergent",
Page 31 |
| 2 | Detergent compartment II:
detergent for the main wash |
| 3 | Detergent dispenser: fabric softener |
| 4 | Detergent compartment I:
detergent for the prewash |

5.3 Control panel

You can use the control panel to set all the functions of your device and obtain information about the operating status.

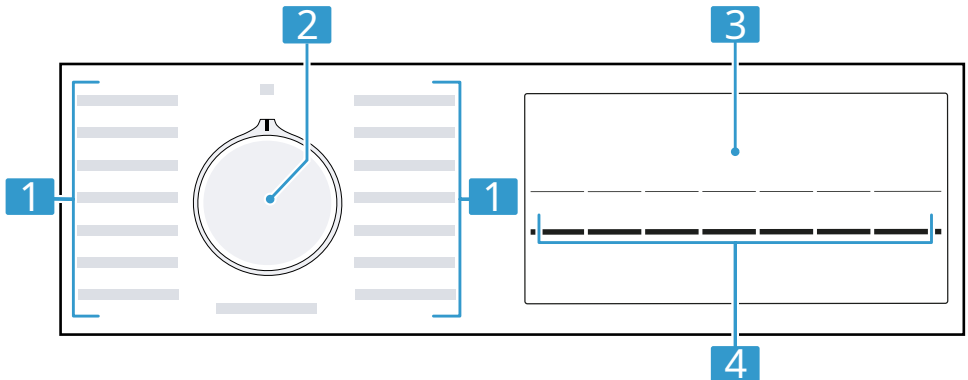

- | | |
|----------|-------------------------------|
| 1 | Programs → Page 25 |
| 2 | Program selector
→ Page 30 |
| 3 | Display → Page 21 |
| 4 | Buttons → Page 24 |


6 Before first use

Prepare the appliance for use.


6.1 Start wash cycle without laundry

Your appliance has been thoroughly checked before leaving the factory. To remove any residual water, wash without any laundry for the first time.

1. The program selector on Clean drum to make.
2. Close the door.
3. Pull out the detergent drawer.
4. Approx. Pour 1 liter of tap water into compartment II.

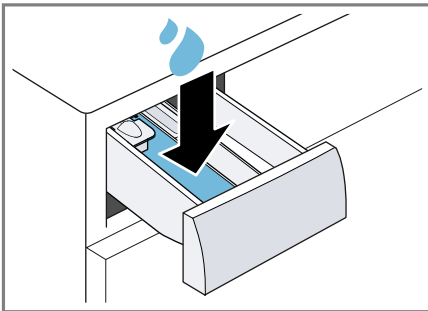

5. Fill powder detergent into compartment II.

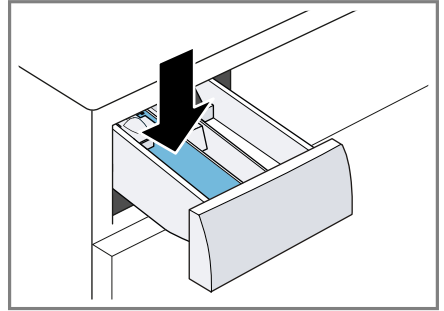

To avoid foaming, use only half the amount recommended by the detergent manufacturer for light soiling. Do not use wool or delicate detergent.

6. Slide the detergent drawer into the appliance.
7. To start the program, press Start/Refill to press.
 - a The display shows the remaining program duration.
 - a After program end it shows display:End.
8. Start the first wash cycle or turn on the program selector Out to make, to turn off the device.
→ "Essentials of the Operation",
Page 30

7 Display






 


The display shows the current set values, selection options or information texts.



Example display indication

indication	Designation	More information
0:40 ₁	Program duration / remaining time of the program	Expected program duration or remaining time of the program in hours and minutes.
10h ⌚ ¹	Program end time	→ "Buttons", page 24
8.0 ₁	Recommended load	Maximum load amount for the set program in kg.
-- -- 1400 ⌚	Spin speed <small>number</small>	Set spin speed in rpm. → "Buttons", page 24 0: without end c spin, drain only pen ---- : Bobbin top, without draining
❄ - 90	Temperature	Set temp temperature in °C. → "Keys", Dad gina 24 ❄ (cold)


¹ Example

indication	Designation	More information
	Start / Pause	Start, cancel or pause ;lights up: the program is running and can are aborted or paused. ;flashing: the program can be run started or resumed.
	Wash	Program status
	To rinse	Program status
	Centrifuge	Program status
-----	Rinse hold	Program status
End	Program end	Program status
	Child lock	;lights up: the childproof lock is activated. ; flashes: the childproof lock is activated and the device was operated. → "Deactivate childproof lock", page 33
✓	Prewash	The prewash is activated. → "Buttons", page 24
✓	Extra water and extra rinse	Washing with more water and a rinse cycle is activated. → "Buttons", page 24
	variospeed	Wash in shorter time is activated. → "Buttons", page 24
----- ¹	Energy consumption ecoInfo 	Energy consumption for the set program. ; — : low energy consumption ; ----- : high energy consumption
	Reminder drum milk cleaning	flashes: drum dirty. Run the Clean Drum program to clean and maintain the drum and the lye container. → "Clean the drum", page 35
:	Voltage control learning system	Flashing: The automatic voltage monitoring system detects impermissible undershoots of the voltage. The program pauses. Remark: The program will continue when voltage is allowed again.
¹ Example		

indication	Designation	More information
•	Voltage control learning system	Flashing: The program has been paused due to impermissible voltage undershoots. The voltage is allowed again and the program continues. Remark: The program duration is extended.
⊙	Door	⊏lights up: the door is locked and can be opened not be opened. ⊏flashes: the door is not closed. ⊏off: the door is unlocked and can be den opened.
⚙	Crane	⊏No water pressure. ⊏The water pressure is too low.
E:35 / -10 ₁	Error	Error code, error indication, signal.
⊏Example		

8 Keys

The selection of the program settings depends on the program set.

Knob	Choice	More information
Start/Refill	¡start ¡Cancel ¡pause	Start, cancel or pause program.
Vario Speed	¡activate ¡deactivate	Activate or deactivate reduced program duration. Remark:Energy consumption is getting higher. The washing result is not affected by this.
Ready in	up to 24 hours	Define the program end time. The program duration is already included in the set number of hours. After the program has started, the program duration is displayed.
temp. °C	☼ - 90	Adjust the temperature. Set temperature in °C.
centrifuge.	----- 1400	Adjust the spin speed or ----- (rinse hold) activate. Set spin speed in rpm. With the selection ----- the water is not drained at the end of the wash cycle and the spin is deactivated. The laundry remains in the rinse water.
 3 seconds (Children's security 3 sec.)	¡activate ¡deactivate	→ "Child lock", page 33
Prewash	¡activate ¡deactivate	Activate or deactivate prewash, e.g. for washing heavily soiled laundry.
Additional rinse	¡activate ¡deactivate	Wash with more water and activate or deactivate an extra rinse cycle. Recommended for particularly sensitive skin or areas with very soft water.


9 Programs

Remark: The care labels of the laundry give you additional instructions for program selection.

Program	Description	max. belasting (kg)
Cotton	<p>Wash robust textiles made of cotton, linen and blended fabrics.</p> <p>Also suitable as a shortened program for normally soiled laundry if you activate vario Speed. Program setting:</p> <p>;max. 90 °C</p> <p>;max. 1400 rpm</p>	<p>8.0</p> <p>5.0¹</p>
Eco 40-60	<p>Wash cotton, linen and blended fabrics.</p> <p>Remark: Textiles that are washable at 40 °C to 60 °C according to the care symbol can be washed together.</p> <p>The washing result corresponds to the best possible washing result class and is in accordance with the legal regulations. The washing result corresponds to the best possible washing result class and is in accordance with the legal regulations.</p> <p>For this programme, the washing temperature is automatically adjusted depending on the load capacity in order to achieve optimum energy efficiency with the best possible washing result. The washing temperature cannot be changed.</p> <p>Program setting:</p> <p>Remark: The temperature cannot be set in this program and is set automatically.</p> <p>;max. - °C</p> <p>;max. 1400 rpm</p>	8.0
Wrinkle recovery loin	<p>Wash textiles made of synthetic and blended fabrics.</p> <p>Program setting:</p> <p>;max. 60 °C</p> <p>;max. 1200 rpm</p>	4.0

¹Vario Speed activated

²Washing not possible

Program	Description	max. belating (kg)
Fast mix	Wash textiles made of cotton, linen, synthetic material and blended fabrics. Suitable for lightly soiled laundry. Program setting: ;max. 60 °C ;max. 1400 rpm	4.0
Delicate/Silk	Wash delicate, washable textiles made of silk, viscose and synthetic fabrics. Use a detergent for delicates or silk. Remark:Wash particularly sensitive textiles or textiles with hooks, eyes or loops in a washing net. Program setting: ;max. 40 °C ;max. 800 rpm	2.0
Lingerie	Wash particularly sensitive, washable textiles made of synthetics, silk and Lycra, e.g. lacy negligees. Use a detergent for delicates. Do not use fabric softener. Remark:Wash particularly sensitive textiles or textiles with hooks, eyes or loops in a washing net. Program setting: ;max. 40 °C ;max. 800 rpm	1.0
 Wool/Hand <small>used to be</small>	Wash hand or machine washable textiles made of wool or with a high wool content. To avoid shrinkage of the laundry, the drum with textiles moves particularly gently with long pauses. Use a detergent for wool. Program setting: ;max. 40 °C ;max. 800 rpm	2.0
To rinse	Rinsing with subsequent centrifugation and pumping off the water. Program setting: max. 1400 rpm	-
Centrifuge/ Drain	Centrifuge and drain water. If you only want to drain the water, activate 0. The laundry is not spun.	-

¹Vario Speedactivated

²Washing not possible

Program	Description	max. belathing (kg)
	Program setting: max. 1400 rpm	
Hygiene	Wash robust textiles made of cotton, linen and blended fabrics. Suitable for allergy sufferers and with high hygiene requirements. Remark:When the set temperature is reached, it remains constant during the entire washing process. Program setting: ;max. 60 °C ;max. 1400 rpm	6.5
Shirts	Wash non-iron shirts and blouses made of cotton, linen, synthetics and mixed fabrics. Remark:Wash shirts and blouses made of silk or delicate materials with Delicate/Silk programme. Program setting: ;max. 60 °C ;max. 800 rpm	2.0
outdoor	Wash outdoor textiles with membrane technology and water-repellent equipment. Use a detergent for outdoor textiles. Do not use fabric softener. Program setting: ;max. 40 °C ;max. 800 rpm	2.0
Dark laundry	Dark and colour-intensive textiles made of cotton and easy-care textiles, e.g. washing jeans. Wash the laundry inside out. Use a liquid detergent. Program setting: ;max. 40 °C ;max. 1200 rpm	4.0
Drum clean-gene	Cleaning and maintenance of the drum. Use the program in the following cases: ;before first use ;with frequent washing with a washing temperature of 40°C and below ;after a long absence	- ²

¹Vario Speedactivated

²Washing not possible

Program	Description	max. belathing (kg)
Super 15'/30' ¹	<p>Use a bleach-containing powder detergent. Put the detergent in compartment II for the main wash.</p> <p>→ <i>"Detergent drawer", page 18</i></p> <p>Halve the amount of detergent to avoid foaming.</p> <p>Do not use fabric softener. Do not use wool, delicate or liquid detergent.</p> <p>Remark: If you have not used a program with a temperature of 60°C or higher for a long time, the drum cleaning indicator flashes as a reminder.</p> <p>Wash textiles made of cotton, synthetic material and blended fabrics. Short program for lightly soiled small items of laundry. The program duration is approx. 30 minutes. If you want to shorten the program duration to 15 minutes, activate vario Speed. The maximum load capacity is reduced to 2.0 kg. Program setting: ;max. 40 °C ;max. 1200 rpm</p>	4.0
¹ Vario Speedactivated	² Washing not possible	

10 Accessories

Only use original accessories. These are matched to the device.

Remark:Some accessories are available in other colours. Contact the

→ "After-sales service", Page 50.

	Usage	Order number
water supply extension feed hose	Cold water or Aquastop water supply hose lengths (2.50 m).	WZ10131
Mounting brackets	Improve the firmness of the device.	WX975600
Longer water supply feed hose	Standard water supply replace feed hose with a longer hose (2.20 m).	00353925
Elbow	Fix the water drain hose.	00655300
Insert units for liquid detergent	Dose liquid detergent.	00605740
Metal cover plate	Metal cover plate for built-in or substructure installation under low worktop.	WZ20430
Elevation	The device higher places so that it is easily filled and can be emptied.	WZWP20W

11 Laundry

11.1 Preparing laundry

PAY ATTENTION!

Objects left in the laundry can damage the laundry and the drum.

- ▶ Remove all items from laundry pockets before use.

Remark

When you prepare your laundry, you protect the appliance and the textiles.

- ¡Brush out sand and soil
- ¡Wash by color and type of fabric
- sort and adhere to the care labels
- ¡Zippers, Velcro fasteners close hooks and eyes
- ¡Fabric belts, fabric straps and tie cords together
- ¡Remove curtain rollers and lead edges hurt

NLDetergent and fabric care product

- ¡wash small or delicate items
a washing net
- ¡large and small items of laundry
wash together
- ¡Wash laundry with stains immediately
soon
- ¡Laundry with dried stains
pre-treat and wash several times

- ¡Laundry folded in
do the drum

12 Detergent and fabric means of care

Information from the manufacturer about use and dosage can be found on the packaging.

Comments

- ¡when using liquid detergent
parts only use self-flowing liquid
detergents ¡various liquid
detergents
do not mix
- ¡detergent and fabric softener
to blend
- ¡No too long stored and strong in-
using thickened products. ¡do not
use solvent-containing
the, corrosive or gaseous agents

- ¡Use dyes in moderation,
salt can affect stainless steel
- ¡no bleach in the appliance
use ready

B The Operation in es- sential

13.1 Switching on the device

Required: The device is set up and connected correctly.

→ *"Setup and connection",
page 13*

- ▶ Set the program selector to a programme.

13.2 Set program

1. Turn the program selector and set it to the desired programme.

→ *"Programs", page 25*

2. Adjust the program settings if desired.

→ *"Adjust program settings", page 30*

13.3 Adjust program settings

Required: A program is set.

→ *"Set program", page 30*

- ▶ Adjust the program settings.

→ *"Buttons", page 24*

Remark: The program settings are not permanently saved for the program.

13.4 Filling the drum with laundry

Remark: To avoid creasing, please observe the maximum load of the programs.

→ *"Programs", page 25*

Requirements

¡The laundry is prepared and sorted.

→ "Laundry", page 29


¡The drum is empty.

1. Open the door.
2. Place the laundry in the drum.
3. Close the door.
Make sure that no small items of laundry are caught in the door.


13.5 Insert dosing aid for liquid detergent

When you order the dosing aid as an accessory, you must fit the dosing aid.

1. Pull out the detergent drawer.
2. Press the insert down and remove the detergent drawer.

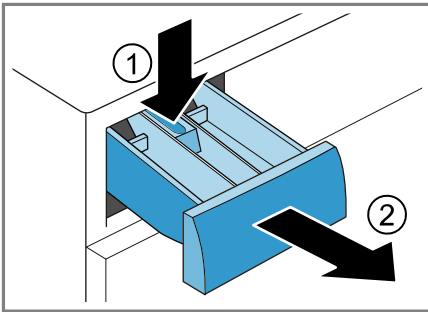

3. Insert the dosing aid.

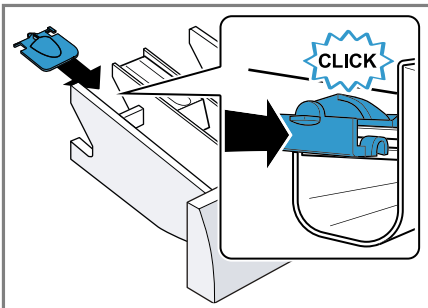


4. Insert the detergent drawer.


13.6 Using the dosing aid for liquid detergent know

To dose liquid detergent, you can use a dosing aid in the detergent drawer.

1. Pull out the detergent drawer.
2. Slide the dosing aid forward.

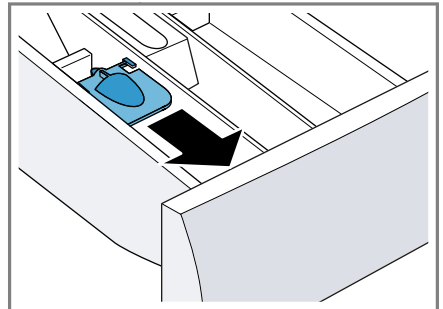

3. Fold down the dosing aid and click into place.

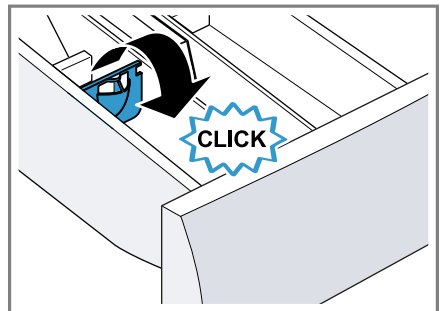

4. Slide in the detergent drawer.

13.7 Dosing detergent and fabric care product

Comments

¡Use the dosing aid for liquid do not use detergent with gel-type detergents, washing powder, prewash or ready-in time.

¡ Follow the instructions for washing agent and fabric care agent
→ *Page 30a*.

1. Pull out the detergent drawer.
2. Fill with detergent.
→ *"Detergent drawer", page 18*
3. Fill with detergent if desired.

4. Slide the detergent drawer into the appliance.

13.8 Starting the program

Required: A program is set.

→ *"Set program", page 30*

▶ onStart/Refill to press.

a The drum spins and finds one load recognition takes place, which can take up to 2 minutes, after which the water flows into the device.

a The display shows the program duration or the program end time.

a After program end it shows display:End.

13.9 Change activated program end time

You can change the set and changed program end time several times before you start the programme.

Requirements

¡ The program is set.

→ *"Set program", page 30*

¡ The program end time is set and activated.

→ *"Buttons", page 24*

1. onStart/Refill to press.

The activated program end time is paused.

2. onReady in until the display shows the desired program end time.

3. onStart/Refill to press.

The changed program end time is activated.

13.10 Soak laundry

Remark: No additional detergent is required. The soapy water is then used for washing.

1. Start the program.

2. To pause the program, press after approx. 10 minutes Start/ Refill.

3. To resume the program after the desired soaking time, press Start/ Refill.

13.11 Adding laundry

After the program has started, you can remove or add the laundry depending on the program status.

1. onStart/Refill to press.

The device pauses.

Remark: If you want to add laundry, follow the instructions on the display.

→ *"Display", page 23*

2. Open the door.

3. Add or remove the laundry.

4. Close the door.

5. onStart/Refill to press.

13.12 Progr. Cancel

1. onStart/Refill to press.

2. Open the door.

At high temperature and high water level, the door of the appliance remains locked for safety reasons.

- At a high temperature, start the programmeTo rinse.
- Start the program at a high water levelCentrifuge or select a suitable program for draining.

→ "Programs", page 25

3.Remove the laundry.

→ "Remove laundry", page 33

13.13 Resume program at rinse hold

Requirements

- ¡The rinse hold is activated.
→ "Buttons", page 24
 - ¡The last rinse of the set program has ended and the laundry is in the rinse water.
- 1.The programCentrifugeor set a program for draining.


→ "Programs", page 25

2.onStart/Refillto press.


13.14 Remove laundry

- 1.Open the door.
- 2.Remove the laundry from the drum.

13.15 Switch off the device

- 1.The program selector onOut  sets-ten.
- 2.Close the water tap.

- 3.Wipe the rubber sleeve dry and remove any foreign objects.

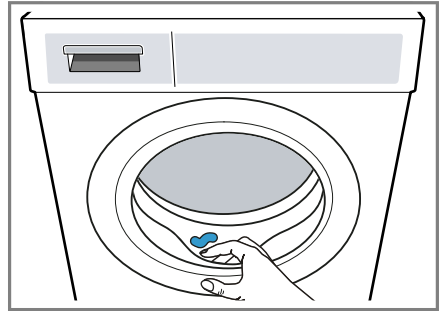



- 4.Leave the appliance door and detergent drawer open so that the residual water can dry up.

14 Child lock


 
Secure your device against unwanted operation via the controls.

14.1 Switching on the child lock

- ▶ Both keys  press for approx. 3 seconds.
- aappears on the display  displayed to give.
- aThe controls are blocked.
- aThe childproof lock remains active even after switching of the device and is activated in the event of a power failure.

14.2 Deactivate child lock


Required:To deactivate the child lock, the appliance must be switched on.

- ▶ Press both buttons for approx. 3 seconds  3 sec..
- agoes out in the display .

15 Basic settings

You can set the basic settings of your device according to your wishes.

15.1 Overview of the basic settings

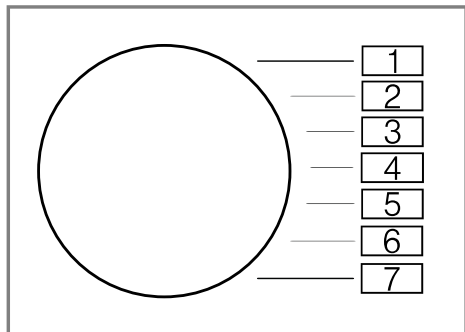


Basic setting	Program-position	Where the	Description
Signal	2	0 (off) 1 (soft) 2 (average deld) 3 (loud) 4 (very loud)	Set the volume of the signal after the program end.
Keypad tone	3	0 (off) 1 (soft) 2 (average deld) 3 (loud) 4 (very loud)	Set the volume of the signal when selecting the buttons.
Reminder drum cleaning went	4	On OFF	Activate or deactivate the drum cleaning reminder.
Program counter	5	42 ₁	Display the number of ended programs.

¹Example

15.2 Change basic settings

1. Set the program selector to position 1.

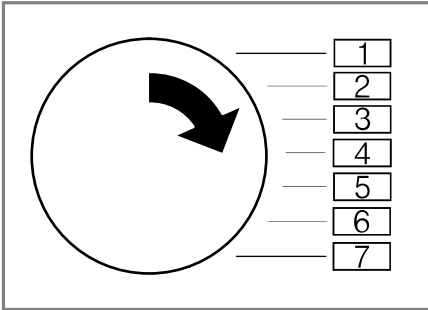

2. Press Start/Refill and at the same time turn the program selector to position 2.
 - a The display shows the current the on.
3. Set the program selector to the desired position.
4. Press Ready into change the value.
5. Turn off the device to save the change.

16 Cleaning and maintenance loves

Carefully clean and maintain your device to ensure that it continues to function well for a long time.


16.1 Cleaning drum

⚠ CAREFULLY
Risk of injury!
Permanent washing at low temperatures and lack of ventilation of the appliance can damage the drum and cause injuries.


- ▶ Regularly run a drum cleaning program or wash at temperatures of at least 60°C.
- ▶ Allow the appliance to dry with the door and detergent drawer open after each use.
- ▶ The program Clean drum run without laundry with powder detergent.

16.2 Cleaning the detergent drawer


1. Pull out the detergent drawer.
2. Press the insert down and remove the detergent drawer.

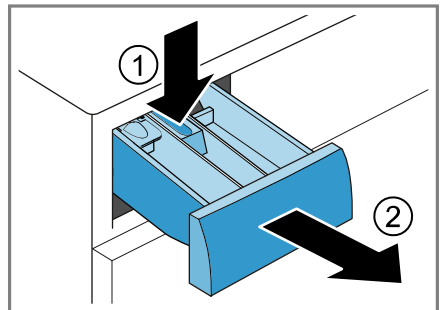


3. Pull out the insert from bottom to top.

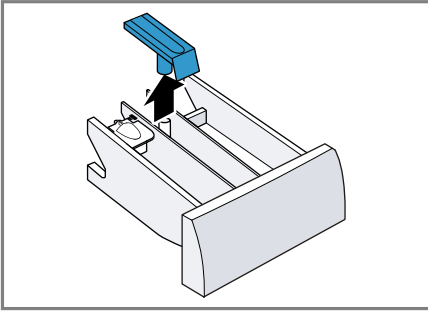


4. Clean and dry the detergent drawer and insert with water and a brush.

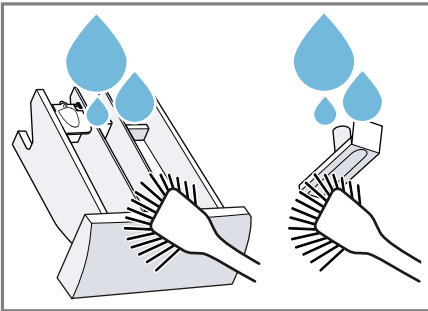

5. Place the insert and click into place.

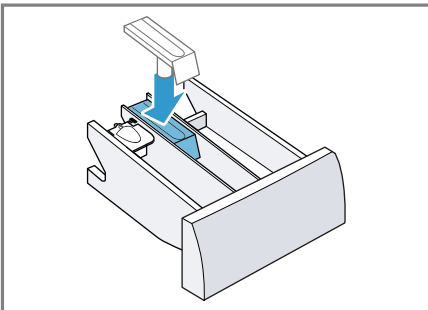

6. Clean the opening for the detergent drawer.

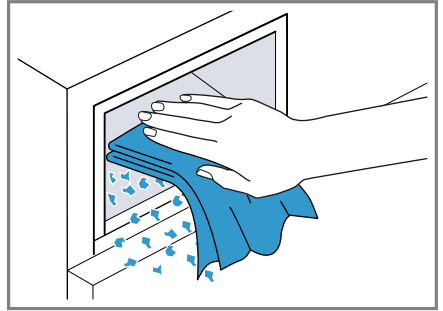


7. Slide the detergent drawer into the appliance.

16.3 Cleaning the drain pump


Clean the drain pump in case of malfunctions, e.g. blockages or chattering.

Empty drain pump


1. Close the tap.
2. Turn off the device.
→ "Switch off the appliance",
page 33
3. Disconnect the plug of the device from the power supply.
4. Open and remove the service cover.

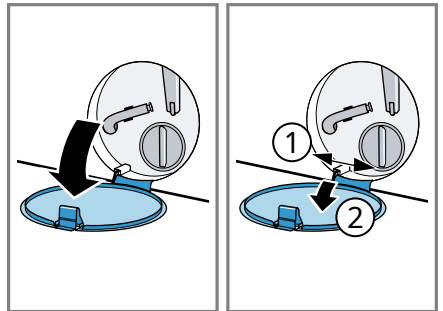

5. Place a sufficiently large container under the opening.

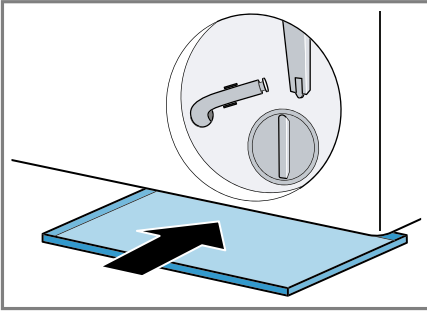


6. Remove the drain hose from the holder.

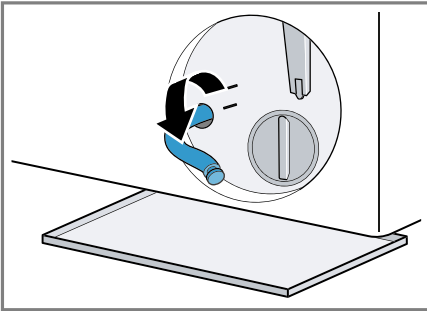


7. **⚠ CAUTION - Risk of burns!** The suds become hot when washing at high temperatures.


- Do not touch the hot soapy water.
Remove the plug to allow the washing solution to flow into the collection container.

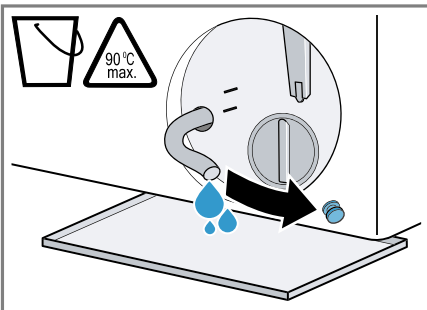

8. Push the stopper back on.

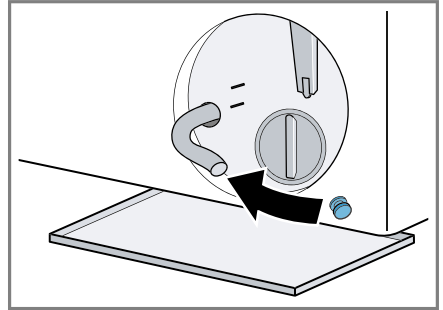


9. Clamp the drain hose in the holder.

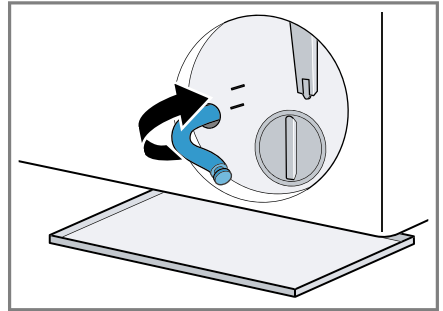


Clean drain pump

Required: The drain pump is empty.
→ Page 36

1. Since there may still be residual water in the pump, carefully unscrew the cover.
 - Large impurities can cause the filter element to become stuck in the pump housing. Loosen impurities and remove filter element.

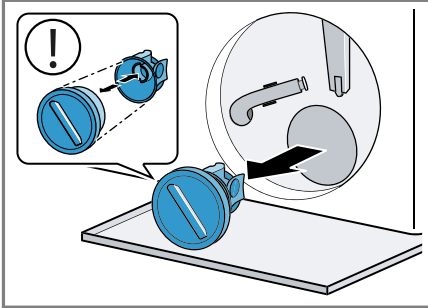


2. Clean the interior, the threads of the pump cover and the pump housing.

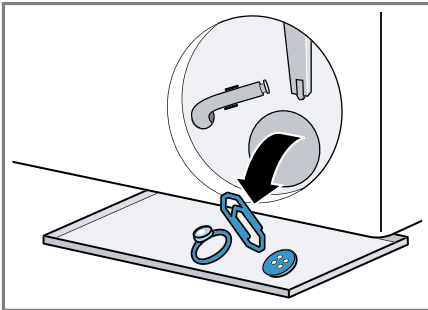


The pump cover consists of two components that can be dismantled for cleaning.

3. Verify that the pump impeller rotates easily.

4. Fit the pump cover.
 - Check that the pump cover components are fitted correctly.

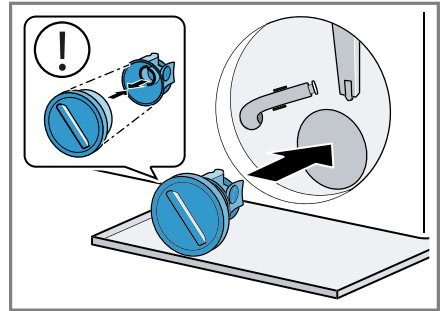

5. Tighten the pump cover up to the stop.

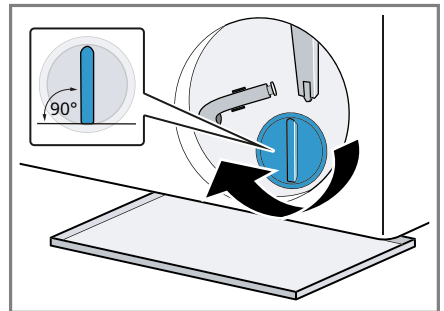

The handle of the pump cover must be vertical.

Before next wash

To prevent unused detergent from flowing into the drain during the next wash, run a suitable draining program after emptying the pump.

1. Open the water tap.
2. Insert the plug into the socket.
3. Turn on the device.
4. Pour one liter of water into compartment II.

5. Select a suitable program for draining.

→ *"Programs", page 25*

17 Troubleshooting


You can rectify minor faults on the device yourself. Before contacting customer service, please refer to the troubleshooting information. This way you avoid unnecessary costs.

 **WARNING**

Risk of electric shock! Improper repairs are dangerous.

- ▶ Only trained specialist personnel may carry out repairs on the device.
- ▶ Only original spare parts may be used for repairing the device.
- ▶ If the power cord of this appliance becomes damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.



Malfunction	Cause and Troubleshooting
The display is extinguished and Start/Refill flashes.	Energy saving mode is active. ▶ Press any button. The display lights up again.
"E:36 / -10"	Drain pipe or water drain hose is clogged. ▶ Clean the drain pipe and the water drain hose.
	Drain pipe or water drain hose is kinked or trapped. ▶ Make sure that the drain pipe and the water drain hose are not kinked or trapped.
	Drain pump is clogged. ▶ → <i>"Clean the drain pump", page 36</i>
	Water drain hose is connected too high. ▶ Mount the water drain hose at a maximum height of 1 metre.
	Pump cover not assembled correctly. ▶ Assemble the pump cover correctly.
	Detergent dosage is too high. ▶ Immediate measure: mix a tablespoon of fabric softener with 0.5 l of water and pour this mixture into the left compartment (not for outdoor, sportswear and down textiles). ▶ Reduce the amount of detergent for the next wash with the same load.
	Unauthorized extension fitted to the water drain hose.

Malfunction	Cause and Troubleshooting
"E:36 / -10"	<p>▶ Remove unauthorized extensions to the water drain hose. → <i>"Connecting the device", page 15</i></p> <hr/> <p>Pump cover is not fully screwed in.</p> <p>▶ Make sure that the pump cover is screwed into the device as far as it will go. The handle of the pump cover must be vertical.</p>
"H:32"	<p>The imbalance detection system has stopped the spin cycle due to uneven distribution of the laundry.</p> <p>▶ Redistribute the laundry in the drum.</p> <p>Remark:If possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p>
"E:30 / -10" and/or 	<p>Water pressure is low. No solution possible.</p> <hr/> <p>The strainers in the water supply are clogged.</p> <p>▶ Clean the strainers in the water supply.</p> <hr/> <p>Water tap is closed.</p> <p>▶ Open the water tap.</p> <hr/> <p>Water supply hose is kinked or pinched.</p> <p>▶ Make sure that the water supply hose is not kinked or trapped.</p> <hr/> <p>Water level measuring system defective.</p> <p>Remark:With the error message, the device starts a pump-down procedure.</p> <ol style="list-style-type: none"> 1.First wait approx. 5 minutes until the pumping procedure has finished. 2.To reset the error message, turn off the device. 3.Turn the device back on. 4.If the error message appears again, please contact the service. → <i>"After-sales service", Page 50</i>
Symbol voltage undershoot (dubbele point).	<p>The voltage monitoring system detects an impermissible voltage drop.</p> <p>▶ No solution possible.</p> <p>Remark:When the supply voltage has stabilized, the program continues normally.</p>

Malfunction	Cause and Troubleshooting
Symbol voltage undershoot (dubbele point).	Voltage undershoot can cause program extension. No solution possible.
• burns.	Voltage undershoot can cause program extension. No solution possible.
☺ burns.	Temperature is too high. ▶ Wait for the temperature to drop. ▶ → <i>"Program cancel"</i> , page 32
	Water level is too high. ▶ Select a suitable program for draining. → <i>"Programs"</i> , page 25
☺ flashes.	Door is not closed. ▶ Close the door.
	Laundry is jammed in the door. ▶ Remove trapped laundry.
All other error codes.	Malfunction ▶ Please contact customer service. → <i>"After-sales service"</i> , Page 50
"E:30/-20"	Solenoid valve defective. ▶ Please contact customer service. → <i>"After-sales service"</i> , Page 50
	Detergent dosage is too high. ▶ Reduce the amount of detergent for the next wash with the same load.
	Additional water filled. ▶ Do not fill the appliance with additional water during operation.
Device not working.	Mains plug of the power cable is not plugged in. ▶ Connect the device to the power supply.
	The fuse in the fuse box has blown. ▶ Check the fuse in the meter box.
	Power supply has failed. ▶ Check whether the interior lighting or other devices are working.
Program does not start.	Start/Refill was not pressed. ▶ Press Start/Refill.
	Door is not closed.

Malfunction	Cause and Troubleshooting
Program does not start.	1.Close the door. 2.To start the program, pressStart/Refill.
	Child lock is activated. ► Deactivate child lock. → <i>"Deactivate childproof lock", page 33</i>
	Ready inis activated. ► Check ifReady inis activated. → <i>"Buttons", page 24</i>
	Laundry is jammed in the door. 1.Open the door again. 2.Remove trapped laundry. 3.Close the door. 4.To start the program, pressStart/Refill.
Door cannot be opened.	- - - - is activated. ► Resume the programCentrifugeorDrain to choose and onStart/Refill to push. → <i>"Resume program at rinse hold", page 33</i>
	Temperature is too high. ► Wait for the temperature to drop. ► Cancel program. → <i>"Program cancel", page 32</i>
	Water level is too high. ► Select a suitable program for draining. → <i>"Programs", page 25</i>
	Power cut. ► Open the door with the emergency release. → <i>"Emergency release", page 49</i>
Washing water is not pumped out.	Drain pipe or water drain hose is clogged. ► Clean the drain pipe and the water drain hose.
	Drain pipe or water drain hose is kinked or trapped. ► Make sure that the drain pipe and the water drain hose are not kinked or trapped.
	Drain pump is clogged. ► → <i>"Clean the drain pump", page 36</i>
	- - - - is activated.

Malfunction	Cause and Troubleshooting
<p>Washing water is not pumped out.</p>	<p>▶ Resume the programCentrifugeorDrain to choose and onStart/Refill to push. → <i>"Resume program at rinse hold", page 33</i></p>
	<p>Water drain hose is connected too high. ▶ Mount the water drain hose at a maximum height of 1 metre.</p>
	<p>Pump cover not assembled correctly. ▶ Assemble the pump cover correctly.</p>
	<p>Detergent dosage is too high. ▶ Immediate measure: mix a tablespoon of fabric softener with 0.5 l of water and pour this mixture into the left compartment (not for outdoor, sportswear and down textiles). ▶ Reduce the amount of detergent for the next wash with the same load.</p>
	<p>Unauthorized extension fitted to the water drain hose. ▶ Remove unauthorized extensions to the water drain hose. → <i>"Connecting the device", page 15</i></p>
<p>No water flows into the device. The detergent was not washed in.</p>	<p>Pump cover is not fully screwed in. ▶ Make sure that the pump cover is screwed into the device as far as it will go. The handle of the pump cover must be vertical.</p>
	<p>Start/Refill was not pressed. ▶ PressStart/Refill.</p>
	<p>The strainers in the water supply are clogged. ▶ Clean the strainers in the water supply.</p>
	<p>Water tap is closed. ▶ Open the water tap.</p>
<p>Start several times with centrifugation.</p>	<p>Water supply hose is kinked or pinched. ▶ Make sure that the water supply hose is not kinked or trapped.</p>
	<p>The imbalance control system removes the imbalance by distributing the laundry several times. ▶ No error - no action required. Remark:When loading, if possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p>

Malfunction	Cause and Troubleshooting
The program duration changes during the wash cycle.	<p>The program sequence is optimized electronically. This may lead to changes in the program duration.</p> <p>▶ No error - no action required.</p> <hr/> <p>The imbalance control system removes the imbalance by distributing the laundry several times.</p> <p>▶ No error - no action required.</p> <p>Remark:When loading, if possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p> <hr/> <p>Foam control system performs an extra rinse in case of excessive foam formation.</p> <p>▶ No error - no action required.</p>
The water is not visible in the drum bar.	<p>The water is below the visible range.</p> <p>▶ No error - no action required.</p> <p>▶ Do not fill the appliance with additional water during operation.</p>
Drum shakes program start.	<p>The cause is an internal engine test.</p> <p>▶ No error - no action required.</p>
In the compartment there is residual water. 	<p>Insert in compartment is clogged. </p> <p>▶ → <i>"Cleaning the detergent drawer", page 35</i></p>
Vibration and movement of the appliance during the centrifuge run.	<p>The appliance is not leveled correctly.</p> <p>▶ → <i>"Adjusting the device", page 16</i></p> <hr/> <p>Device feet are not fixed.</p> <p>▶ Secure the device feet. → <i>"Adjusting the device", page 16</i></p> <hr/> <p>Transport protection devices have not been removed.</p> <p>▶ → <i>"Remove transport protection", page 14.</i></p>
Drum turns, there no water flows into the device.	<p>Load recognition is active.</p> <p>▶ No error, no action required.</p> <p>Remark:The load recognition can take up to 2 minutes.</p>

Malfunction	Cause and Troubleshooting
strong foam ming.	<p>Detergent dosage is too high.</p> <ul style="list-style-type: none"> ▶ Immediate measure: mix a tablespoon of fabric softener with 0.5 l of water and pour this mixture into the left compartment (not for outdoor, sportswear and down textiles). ▶ Reduce the amount of detergent for the next wash with the same load.
High centrifuge rental is not reached.	<p>Low spin speed is set.</p> <ul style="list-style-type: none"> ▶ Set a higher spin speed for the next wash. <hr/> <p>Imbalance control system compensates for imbalance by reduced spin speed.</p> <ul style="list-style-type: none"> ▶ Redistribute the laundry in the drum. <p>Remark:If possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p> <ul style="list-style-type: none"> ▶ Launch the programCentrifuge.
Program centrifuge run does not start.	<p>Drain pipe or water drain hose is clogged.</p> <ul style="list-style-type: none"> ▶ Clean the drain pipe and the water drain hose. <hr/> <p>Drain pipe or water drain hose is kinked or trapped.</p> <ul style="list-style-type: none"> ▶ Make sure that the drain pipe and the water drain hose are not kinked or trapped. <hr/> <p>The imbalance detection system has stopped the spin cycle due to uneven distribution of the laundry.</p> <ul style="list-style-type: none"> ▶ Redistribute the laundry in the drum. <p>Remark:If possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p> <ul style="list-style-type: none"> ▶ Launch the programCentrifuge.
Sparkling, hissing loud.	<p>Water is flushed under pressure into the detergent drawer.</p> <ul style="list-style-type: none"> ▶ No error - normal operating noise.
Loud noise during spin.	<p>The appliance is not leveled correctly.</p> <ul style="list-style-type: none"> ▶ → <i>"Adjusting the device", page 16</i> <hr/> <p>Device feet are not fixed.</p>

Malfunction	Cause and Troubleshooting
Loud noise during spin.	<ul style="list-style-type: none"> ▶ Secure the device feet. → <i>"Adjusting the device", page 16</i>
	<p>Transport protection devices have not been removed.</p> <ul style="list-style-type: none"> ▶ → <i>"Remove transport protection", page 14.</i>
Clapping, rattling in the pump.	<p>A foreign object has entered the pump.</p> <ul style="list-style-type: none"> ▶ → <i>"Clean the drain pump", page 36</i>
Slurping, rhythmic suction sound.	<p>Pump is active, the suds are pumped out.</p> <ul style="list-style-type: none"> ▶ No error - normal operating noise.
Creasing.	<p>Spin speed is too high.</p> <ul style="list-style-type: none"> ▶ Set a lower spin speed for the next wash.
	<p>The load amount is too high.</p> <ul style="list-style-type: none"> ▶ Reduce the load amount for the next wash.
	<p>Unsuitable program for the type of fabric set.</p> <ul style="list-style-type: none"> ▶ Choose a suitable program for the type of fabric.
Detergent or fabric softener softer drips from the cuff and collects on the door or in the cuff crease.	<p>Too much detergent/fabric softener in the detergent drawer.</p> <ul style="list-style-type: none"> ▶ When dosing the liquid detergent and fabric softener, pay attention to the marking in the detergent drawer and do not exceed it.
Centrifuge result is not satisfied-ity. The laundry is too wet / too damp.	<p>Low spin speed is set.</p> <ul style="list-style-type: none"> ▶ Set a higher spin speed for the next wash. ▶ Launch the programCentrifuge.
	<p>Drain pipe or water drain hose is clogged.</p> <ul style="list-style-type: none"> ▶ Clean the drain pipe and the water drain hose.
	<p>Drain pipe or water drain hose is kinked or trapped.</p> <ul style="list-style-type: none"> ▶ Make sure that the drain pipe and the water drain hose are not kinked or trapped.
	<p>The imbalance detection system has stopped the spin cycle due to uneven distribution of the laundry.</p> <ul style="list-style-type: none"> ▶ Redistribute the laundry in the drum.
	<p>Remark:If possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p>

Malfunction	Cause and Troubleshooting
Centrifuge result is not satisfied-ity. The laundry is too wet / too damp.	<p>▶ Launch the programCentrifuge.</p> <p>Imbalance control system compensates for imbalance by reduced spin speed.</p> <p>▶ Redistribute the laundry in the drum.</p> <p>Remark:If possible, place large and small items of laundry together in the drum. Laundry of different sizes is distributed better during the spin cycle.</p> <p>▶ Launch the programCentrifuge.</p>
Leftover detergent the damp laundry.	<p>Detergents may contain water-insoluble substances that settle on the laundry.</p> <p>▶ Launch the programTo rinse.</p>
Detergent residues the dry laundry.	<p>Detergents may contain water-insoluble substances that settle on the laundry.</p> <p>▶ Brush the laundry after washing and drying.</p>
At the water supply feed hose is leaking water.	<p>The water supply hose is not correctly / firmly connected.</p> <p>1.Connect the water supply hose correctly. → <i>"Connect the water supply hose", page 15</i></p> <p>2.Tighten the coupling properly.</p>
Water is leaking from the water drain hose.	<p>Water drain hose is damaged.</p> <p>▶ Replace the damaged water drain hose.</p> <p>Water drain hose is not connected correctly.</p> <p>▶ Connect the water drain hose correctly. → <i>"Water outlet connection types", page 16</i></p>
Odor formation has occurred in the appliance <small>Pine tree.</small>	<p>Humidity and detergent residue can stimulate bacterial growth.</p> <p>▶ → <i>"Clean the drum", page 35</i></p> <p>▶ If you are not using the appliance, leave the door and detergent drawer open so that the residual water can dry up.</p>
Fabric softener remains in the detergent drawer.	<p>Use with fabric softener is not possible for the selected programme.</p> <p>▶ Before washing, check whether fabric softener is possible for the selected program. → <i>"Programs", page 25</i></p>
Water comes out under the door.	<p>Contamination on the door or seal causes leakage.</p> <p>▶ Clean the door and the cuff.</p>


17.1 Emergency release

Unlock door

Required: The drain pump is empty.
→ *Page 36*

1. ATTENTION! Running water can lead to material damage.
- ▶ Do not open the door if water is visible behind the glass.

Pull the emergency release downwards with the aid of a tool and release.

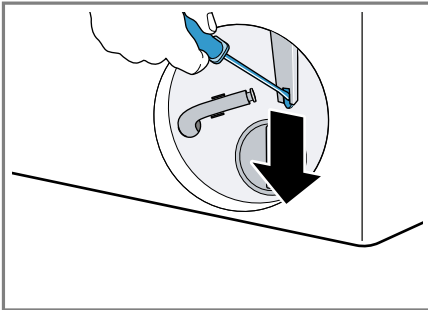

- a) The door lock is unlocked.
2. Insert the service cover and click into place.
3. Close the service cover.

18 Transporting, hit and throw

18.1 Disassemble the device


1. Close the tap.
2. Empty the water supply hose.
3. Turn off the device.
→ *"Switch off the appliance", page 33*
4. Unplug the device plug socket.
5. Leave the soap walk away.
→ *"Drain pump clean Page 36 igen",*

6. Remove the hoses.

18.2 Install transport protection devices

To avoid transport damage, secure the device with transport protection before transport.

1. Remove the 4 cover caps using a screwdriver.

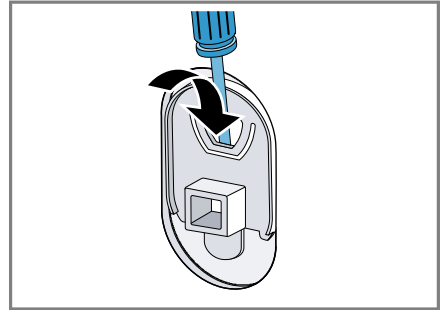

Save the covers.

2. Install the 4 transport protection devices.


→ *"Remove transport protection", page 14*

18.3 Restarting the device

- ▶ For more information, see
→ *"Setup and connection", page 13* and
→ *"Start wash cycle without laundry", Page 20.*

18.4 Disposal of your old appliance

Valuable raw materials can be reused through environmentally friendly disposal.

 **WARNING**
Risk of health hazard!

Children can lock themselves in the appliance and endanger their lives.

- ▶ Do not install the device behind a door that blocks or prevents the opening of the device door.
- ▶ In the case of discarded appliances, unplug the mains cable, then cut the mains cable and damage the appliance door lock to such an extent that the appliance door no longer closes.

1. Unplug the power cord from the wall outlet.

2. Cut the power cord.

3. Dispose of the device in an environmentally friendly manner.

You can obtain information about the current disposal methods from your dealer and your municipal or district council office.



This appliance is marked in accordance with the European directive 2012/19/EU on waste electric and electronic

chemical equipment (waste electrical and electronic equipment - WEEE). The directive sets out the framework for take-back valid in the EU and disposal of old appliances.

19 Service department

Original replacement parts that are relevant for operation in accordance with the respective Ecodesign Regulation can be obtained from our service department for a period of at least 10 years from the time of placing the device on the market within the European Economic Area.

Remark: Calling in the service department within the scope of the manufacturer's warranty conditions is free of charge.

Detailed information about the warranty period and warranty conditions in your country can be obtained from our service department, your dealer or on our website.

When you contact the service department, you will need the product number (E-Nr.) and the production number (FD) of the device. Contact details for the service department can be found in the service list supplied or on our website.

19.1 Product number (E-no.) and production number (FD)

The product number (E-Nr.) and the production number (FD) can be found on the rating plate of the device. Depending on the model, the rating plate is located: on the inside of the door.

on the inside of the bottom

holding valve.


on the back of the device

comb.

To quickly find your device data and service telephone numbers, you can write them down.

20 Consumption values

The following information is provided in accordance with the EU Ecodesign Regulation. The specified values for other programs as Eco 40-60 are only guide values and were determined in accordance with the applicable standard EN60456.

Program	Bela-thing (kg)	Pro-gram-maduur (h:min) ₁	Ener-pour-use (kWh/cycle) ₁	Water-far-use (l/cycle) ₁	Maxi-male tem-pe-ratio (°C) 5 min ₁	centri-fuge-rev-number (t/minus) ₁	Rest-moisture-half-at (%) ₁
Eco 40-60 ₂	8.0	3:33	0.800	70.0	37	1400	53.00
Eco 40-60 ₂	4.0	2:40	0.350	36.0	27	1400	53.00
Eco 40-60 ₂	2.0	2:20	0.180	30.0	23	1400	53.00
Cotton 20 °C	8.0	3:25	0.330	89.0	23	1400	50.00
Cotton 40 °C	8.0	3:25	1,210	89.0	44	1400	50.00
Cotton 60 °C	8.0	3:25	1,510	89.0	58	1400	50.00
Cotton 40 °C + Prewash	8.0	3:40	1,300	95.0	43	1400	50.00
Wrinkle recovery lo 40 °C	4.0	2:30	0.770	61.0	44	1200	35.00
Fast/ Blend 40°C	4.0	1:05	0.630	44.0	41	1400	52.00
 Wool/Hand wash 30°C	2.0	0:41	0.300	48.0	29	800	26.00

¹The actual values may vary due to the influence of water pressure, hardness and inlet temperature, ambient temperature, type, amount and soiling of the laundry, detergent used, fluctuations in the power supply and selected additional functions deviate from the specified values.

²Test program in accordance with the EU Ecodesign Regulation and the EU energy label bubble regulation with cold water (15°C).

21 Technical data

Device height	84.5 cm
Device width	59.8cm
Device depth	59.9cm

Device depth with closed door	63.2cm
Device depth with opened door	106.3 cm
Weight	72.5 kg

Maximum load thing	8.0 kg
Mains voltage	220-240V, 50 Hz
⚡ Minimum entry installation fuse	10 A
Rated power gene	2300 W
Recorded far-be allowed to	<ul style="list-style-type: none"> ⌋ Off state: 0.15W ⌋ Non-disabled attributed position: 0.50 W
Water pressure	<ul style="list-style-type: none"> ⌋ At least: 100 kPa (1 bar) ⌋ Maximum: 1000kPa (10 bars)

Length of the water supply feed hose	150cm
Length of the water drain hose	150cm
Length of the mains connection cable	160 cm

You can find more information about your model on the Internet at <https://eprel.ec.europa.eu/1>. This web address refers to the official EU product database EPREL. Then follow the instructions when searching for the model. The model identification consists of the character before the slash of the E number (E-Nr.) on the type plate. Alternatively, you will also find the model identification in the first line of the EU energy label.

1Only applies to countries in the European Economic Area

BSH Hausgerate GmbH
Carl-Wery-Strasse 34
81739 Munich, GERMANY
siemens-home.bsh-group.com

Manufactured by BSH Hausgeräte GmbH under trademark license from Siemens AG

9001766972

9001766972 (021019)

NL