 
 


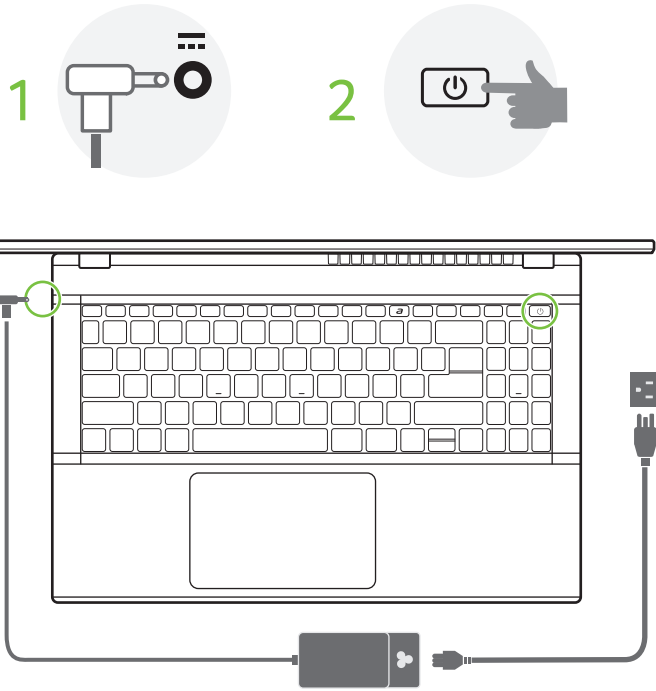

Using the notebook for the first time

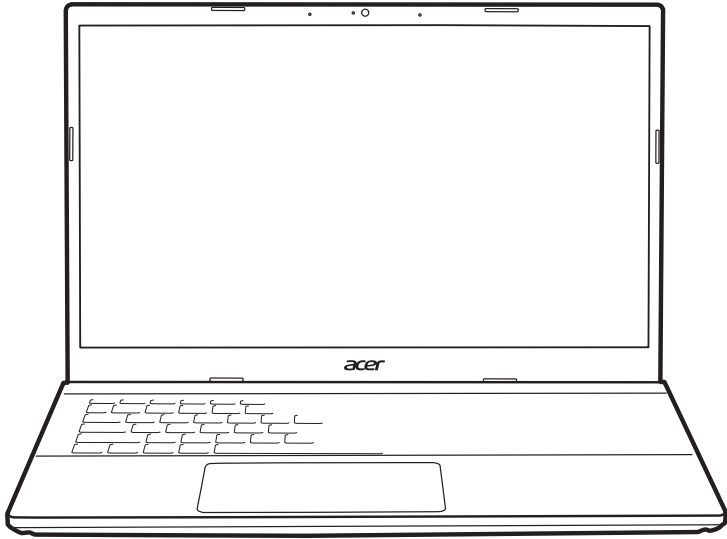

Connect to the internet

If using a wireless LAN:

Select the wireless icon at the lower-right corner of the screen and you will see the available wireless networks. Select a Wi-Fi network and enter the security key if required.

If using a LAN:

Connect a network cable to the Ethernet (RJ-45) port.

To connect to a wired network, please use a **USB-to-LAN converter cable** (optional).

Please refer to your router's or ISP's user guide for additional assistance.



Easily optimize your computer's performance with AcerSense

AcerSense provides you with the comprehensive capability to monitor your CPU and GPU temperatures, check the health and charging status of your battery, adjust fan speed and power plan settings, as well as receive live update notifications. Find manuals and other documents for your Acer product on the official Acer support website by going to <http://go.acer.com/support>

For EPEAT registered-products, please visit <https://www.epeat.net/> and Acer country website for detailed information.

Illustrations are for reference only. Actual product specifications may vary.

Aspire Go 15

AG15-42P



NC.V8711.00R-01

SETUP GUIDE

SETUP GUIDE

SETUP GUIDE

SETUP GUIDE

SETUP GUIDE

SETUP GUIDE

Important:

An internet connection is required for first-time setup.

Note:

Open the Start Menu and search for 'Acer documents' for important health and safety information.



 
 
To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. Wait one-half hour after switch off before handling hot parts.





Using the notebook for the first time

Using the notebook for the first time

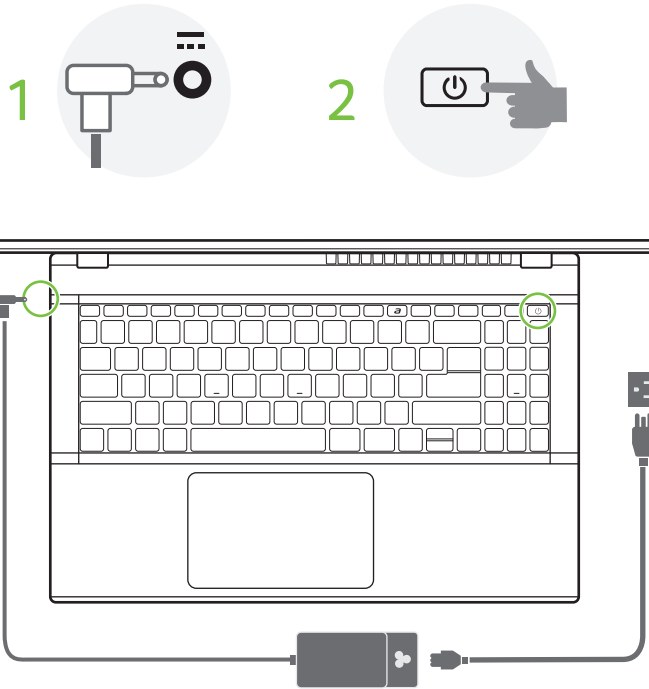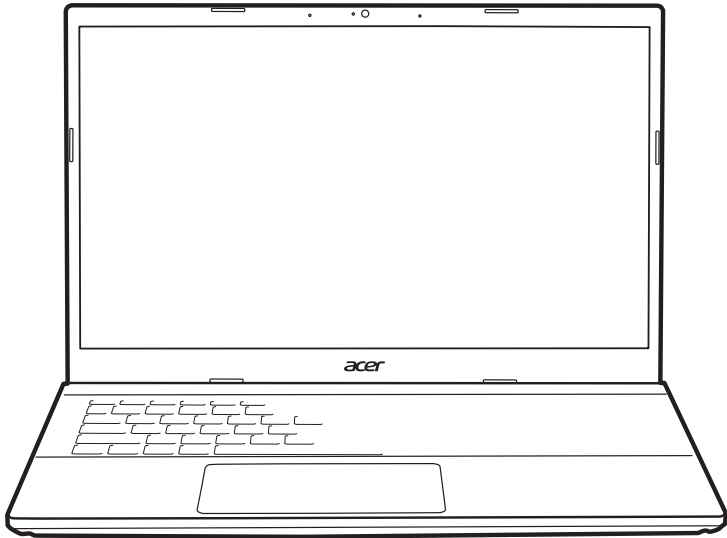

Important:
An internet connection is required for first-time setup.

Important:
An internet connection is required for first-time setup.

Note:
Open the Start Menu and search for 'Acer documents' for important health and safety information.

Note:
Open the Start Menu and search for 'Acer documents' for important health and safety information.

WARNING!
To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. Wait one-half hour after switch off before handling hot parts.

WARNING!
To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. Wait one-half hour after switch off before handling hot parts.

Aspire Go 15

AG15-42P



 
NC.V8711.00R-01

SETUP GUIDE
SETUP GUIDE
SETUP GUIDE
SETUP GUIDE
SETUP GUIDE





Connect to the internet

If using a wireless LAN:
Select the wireless icon at the lower-right corner of the screen and you will see the available wireless networks. Select a Wi-Fi network and enter the security key if required.

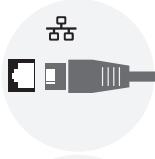

  
If using a LAN:
Connect a network cable to the Ethernet (RJ-45) port.
To connect to a wired network, please use a **USB-to-LAN converter cable** (optional).
Please refer to your router's or ISP's user guide for additional assistance.

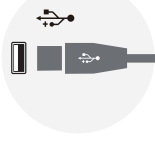

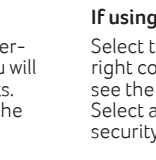

Connect to the internet

 If using a wireless LAN:
Select the wireless icon at the lower-right corner of the screen and you will see the available wireless networks. Select a Wi-Fi network and enter the security key if required.

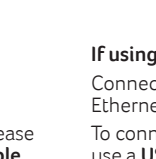

If using a LAN:
Connect a network cable to the Ethernet (RJ-45) port.
To connect to a wired network, please use a **USB-to-LAN converter cable** (optional).
Please refer to your router's or ISP's user guide for additional assistance.



Easily optimize your computer's performance with AcerSense

AcerSense provides you with the comprehensive capability to monitor your CPU and GPU temperatures, check the health and charging status of your battery, adjust fan speed and power plan settings, as well as receive live update notifications. Find manuals and other documents for your Acer product on the official Acer support website by going to <http://go.acer.com/support>

For EPEAT registered-products, please visit <https://www.epeat.net/> and Acer country website for detailed information. Illustrations are for reference only. Actual product specifications may vary.



Easily optimize your computer's performance with AcerSense

AcerSense provides you with the comprehensive capability to monitor your CPU and GPU temperatures, check the health and charging status of your battery, adjust fan speed and power plan settings, as well as receive live update notifications. Find manuals and other documents for your Acer product on the official Acer support website by going to <http://go.acer.com/support>

For EPEAT registered-products, please visit <https://www.epeat.net/> and Acer country website for detailed information. Illustrations are for reference only. Actual product specifications may vary.



Aspire Go 15

AG15-42P

 


NC.V8711.00R-01

SETUP GUIDE
SETUP GUIDE
SETUP GUIDE
SETUP GUIDE
SETUP GUIDE

Using the notebook for the first time

Using the notebook for the first time/ using the notebook for the first time

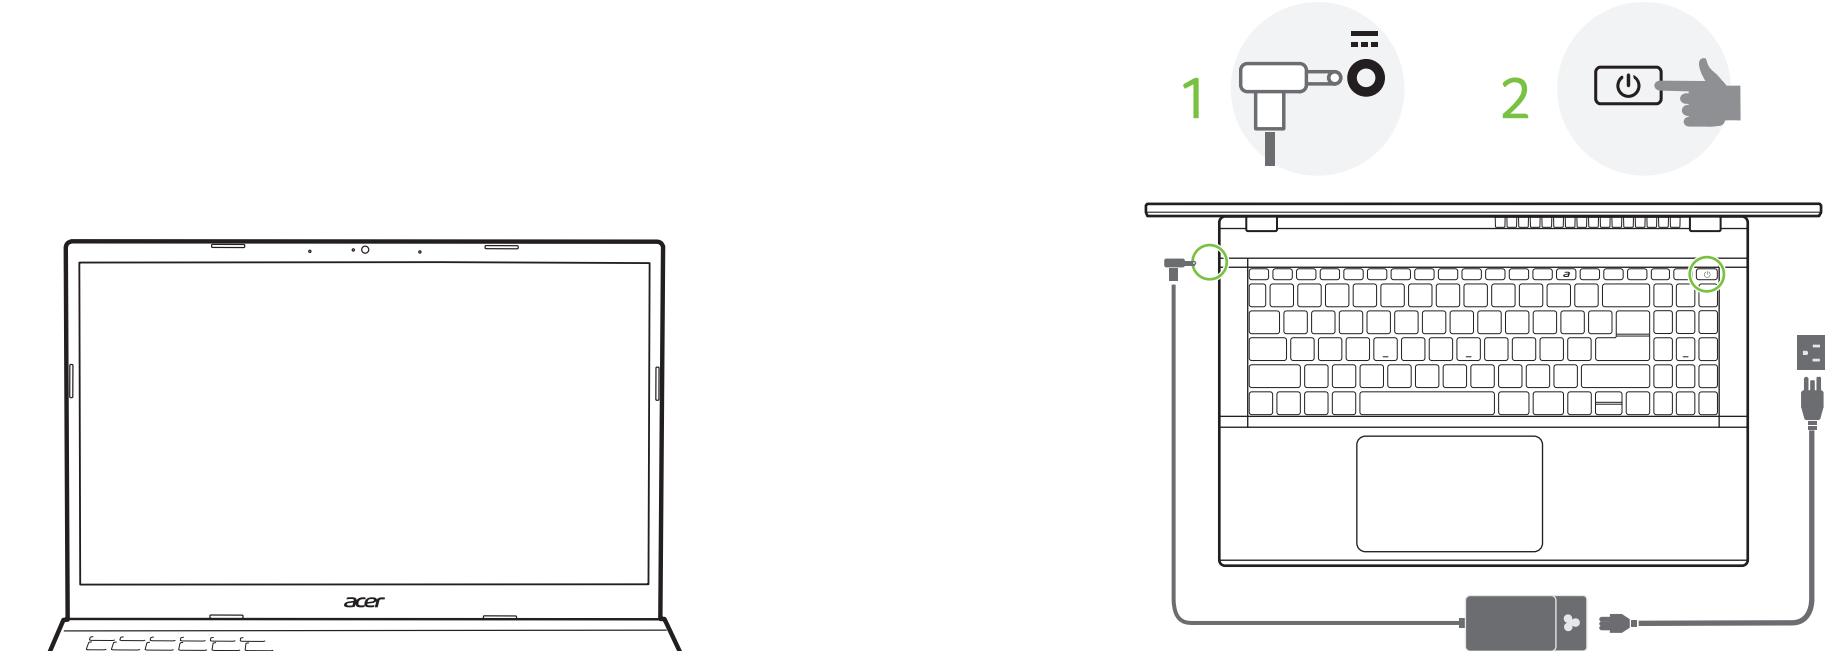

Important:
An internet connection is required for first-time setup.

Important:
An internet connection is required for first-time setup.

Important:
An internet connection is required for first-time setup.

Note:
Open the Start Menu and search for 'Acer documents' for important health and safety information.

Note:
Open the Start Menu and search for 'Acer documents' for important health and safety information.

Note:
Open the Start Menu and search for 'Acer documents' for important health and safety information.

WARNING!
To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. Wait one-half hour after switch off before handling hot parts.

WARNING!
To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. Wait one-half hour after switch off before handling hot parts.

WARNING!
To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to come into contact with the skin or a soft surface, such as pillows or rugs or clothing, during operation. Wait one-half hour after switch off before handling hot parts.

Connect to the internet

If using a wireless LAN:
Select the wireless icon at the lower-right corner of the screen and you will see the available wireless networks. Select a Wi-Fi network and enter the security key if required.

If using a LAN:
Connect a network cable to the Ethernet (RJ-45) port. To connect to a wired network, please use a **USB-to-LAN converter cable** (optional). Please refer to your router's or ISP's user guide for additional assistance.

Connect to the internet

If using a wireless LAN:
Select the wireless icon at the lower-right corner of the screen and you will see the available wireless networks. Select a Wi-Fi network and enter the security key if required.

If using a LAN:
Connect a network cable to the Ethernet (RJ-45) port. To connect to a wired network, please use a **USB-to-LAN converter cable** (optional). Please refer to your router's or ISP's user guide for additional assistance.

Connect to the internet

If using a wireless LAN:
Select the wireless icon at the lower-right corner of the screen and you will see the available wireless networks. Select a Wi-Fi network and enter the security key if required.

If using a LAN:
Connect a network cable to the Ethernet (RJ-45) port. To connect to a wired network, please use a **USB-to-LAN converter cable** (optional). Please refer to your router's or ISP's user guide for additional assistance.

Easily optimize your computer's performance with AcerSense

AcerSense provides you with the comprehensive capability to monitor your CPU and GPU temperatures, check the health and charging status of your battery, adjust fan speed and power plan settings, as well as receive live update notifications. Find manuals and other documents for your Acer product on the official Acer support website by going to <http://go.acer.com/support>

For EPEAT registered-products, please visit <https://www.epeat.net/> and Acer country website for detailed information.

Illustrations are for reference only. Actual product specifications may vary.

Easily optimize your computer's performance with AcerSense

AcerSense provides you with the comprehensive capability to monitor your CPU and GPU temperatures, check the health and charging status of your battery, adjust fan speed and power plan settings, as well as receive live update notifications. Find manuals and other documents for your Acer product on the official Acer support website by going to <http://go.acer.com/support>

For EPEAT registered-products, please visit <https://www.epeat.net/> and Acer country website for detailed information.

Illustrations are for reference only. Actual product specifications may vary.

Easily optimize your computer's performance with AcerSense

AcerSense provides you with the comprehensive capability to monitor your CPU and GPU temperatures, check the health and charging status of your battery, adjust fan speed and power plan settings, as well as receive live update notifications. Find manuals and other documents for your Acer product on the official Acer support website by going to <http://go.acer.com/support>

For EPEAT registered-products, please visit <https://www.epeat.net/> and Acer country website for detailed information.

Illustrations are for reference only. Actual product specifications may vary.