

DC311XX
DC313XX

DE Contents 05 Inhalt 06 Contenu 07 Inhoud 08 Sisältö
 IT Indhold 11 Contenido 12 Contenido 13 Contenido 14 Contenido
 GR Περιεχόμενα 15 Innehåll



 
x1



x1



x1



x1



x2



x2


CR2032




x2



x1

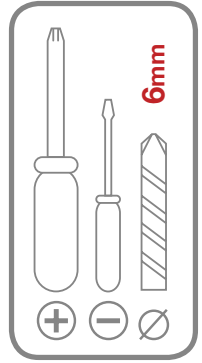


DE Getting started 05 Erste Schritte 06 Démarrage 07 Aan de slag 08 Aloitussopas 09 Kom i gang
 IT Operazioni preliminari 15 Para empezar 16 Para comenzar 17 Για αρχή 18 Για αρχή

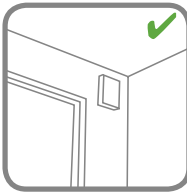


✓




✓

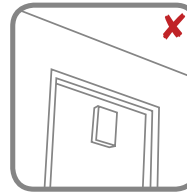

✗

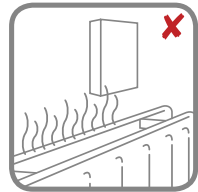


✗

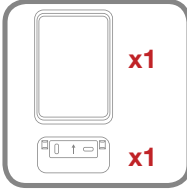


x1





x1

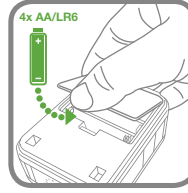



4x AA/LR6

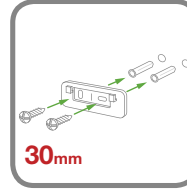




30mm

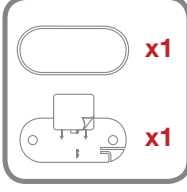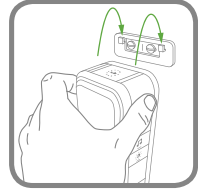



x1

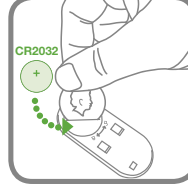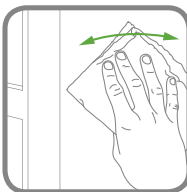


CR2032

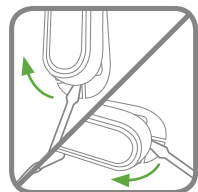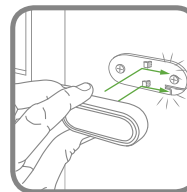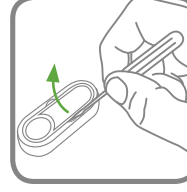




GB Optional features DE Optionale Funktionen
 FR Options disponibles IT Opzioni F Valinnaiset ominaisuudet
 OK Valgírnie funkcioner IT Funzionalità opzionali
 ES Opciones disponibles PT Funções opcionais
 GR Προαιρετικές λειτουργίες πρόσθετων SE Möjliga funktioner

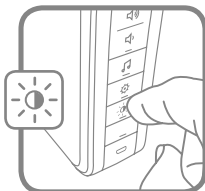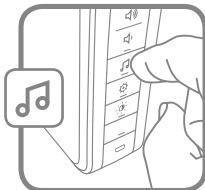

	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

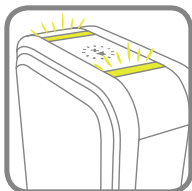

GB Linking DE Einlernen FR Programmation
 NL Verknüpfung F Linkittäminen OK Forbinde
 IT Collegamento ES Enlace
 PT Programação GR Συνέζηση SE Länkning

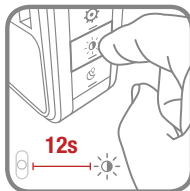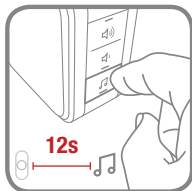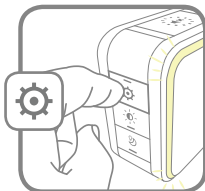

GB Trouble shooting DE Fehlerbehebung FR Dépannage NL Probleemoplossing
 FI Vianmääritys OK Problemløsning IT Risoluzione dei problemi ES Solución de
 problemas PT Resolução de problemas GR Αντιμετώπιση προβλημάτων SE Felsökning

livewell.honeywell.com

