

CURFER

ENJOY DIGITAL DRIVING

HERE IS YOUR QUICK START GUIDE.

How to install the TomTom LINK 100 dongle in your vehicle.

1. Before installing the TomTom LINK 100 dongle in your car, get the CURFER app for your smartphone and register an account.

The CURFER app is available free from the Apple App Store and on Google Play™. The in-app setup guide will help you with the installation process.

If you have ordered your LINK 100 dongle with an extension cable, please follow the instructions in the cable installation guide.

2. If possible, park your car on a level surface. Although installation while parked uphill also works, CURFER will need a couple of trips to adjust itself and to deliver correct scorings.


3. Make sure that your smartphone's Internet connection is available while installing the LINK 100 dongle in your car.

4. Open the CURFER app, log in and follow the in-app setup guide through the installation process step by step.

PLEASE NOTE: During installation, you will be asked to turn your engine on. If the vehicle reports any errors or warning messages on your vehicle's dashboard, turn off the engine immediately, remove the LINK 100 dongle and contact technical support.

In case of any problems, please visit our support section at tomtom.com/curfer.

The following diagram shows possible locations for your car's OBD interface. Please also check your car manual or ask your car workshop for details.

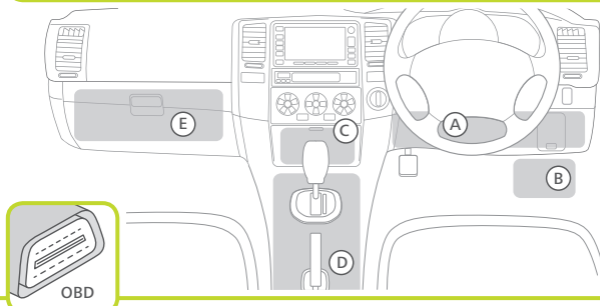

TOMTOM  **TELEMATICS**
Get more information at tomtom.com/curfer